



CABINET ASSEMBLY INSTRUCTIONS

JARVIN
CABINETS



TABLE OF CONTENTS

Assembling Instructions - Base Cabinet 3-6

Assembling Instructions - Lazy Susan Corner Base Cabinet 7-12

Assembling Instructions - Blind Corner Base Cabinet 13-18

Assembling Instructions - Base 3 Drawers Cabinet. 19-24

Assembling Instructions - Wall Cabinet 25-27

Assembling Instructions - Wall Diagonal Corner Cabinet 28-32


Assembling Instructions - Pantry 33-38

Assembling Instructions - Oven Cabinet 39-45

Assembling Instructions - Vanity 46-51

ASSEMBLING INSTRUCTIONS - BASE CABINET

BASE CABINET

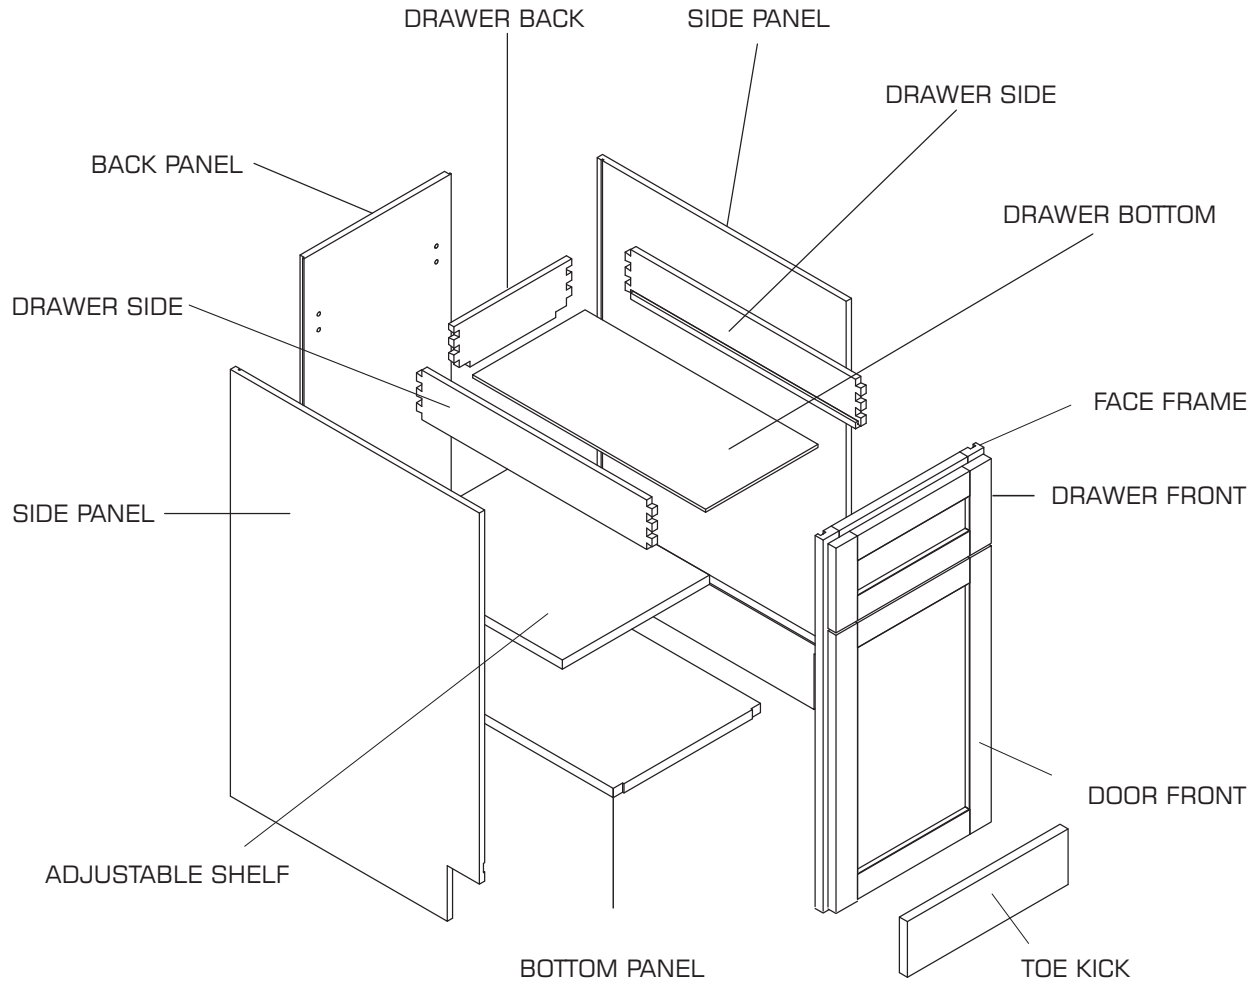

<p>GLIDES</p>	<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>SHELF CLIPS</p>	<p>GLIDE SUPPORTS</p>
---------------	-----------------------	---------------	--------------------	-----------------------

TOOLS


<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>
------------------	---------------------	----------------------	-----------------	----------------	-------------------------

JARLIN


CABINETY

BASE CABINET


STEP 1

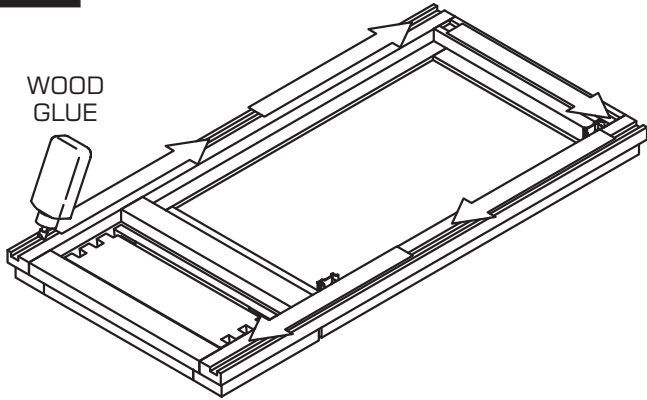


STEP 2

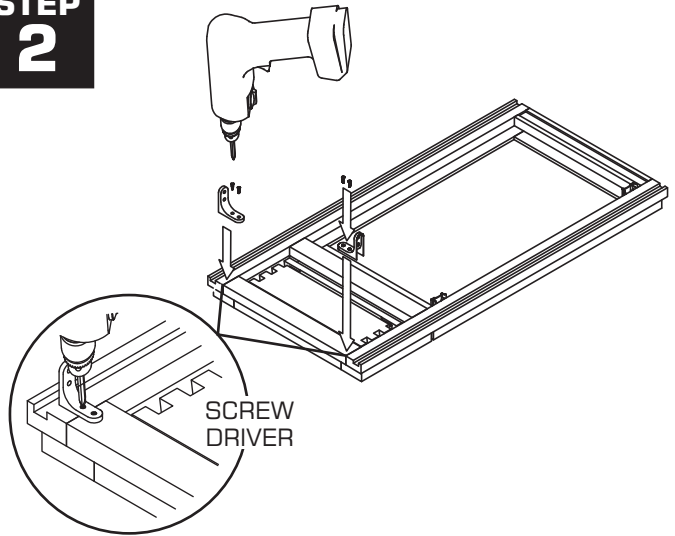


STEP 3

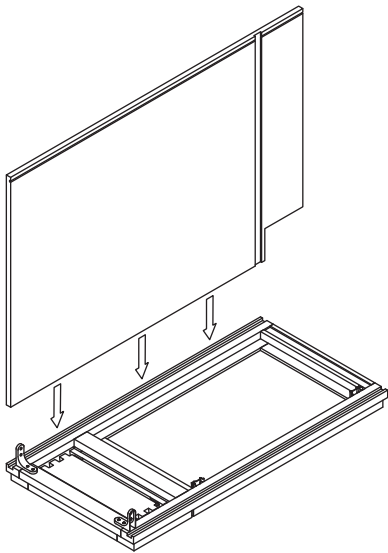


STEP 4

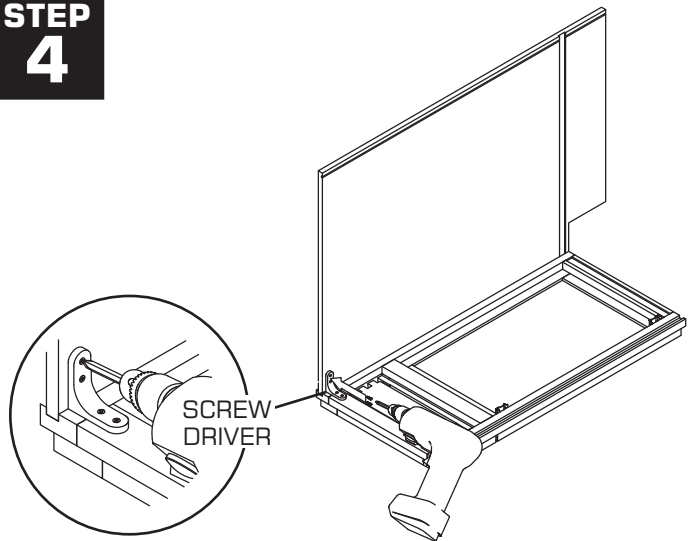

STEP 5

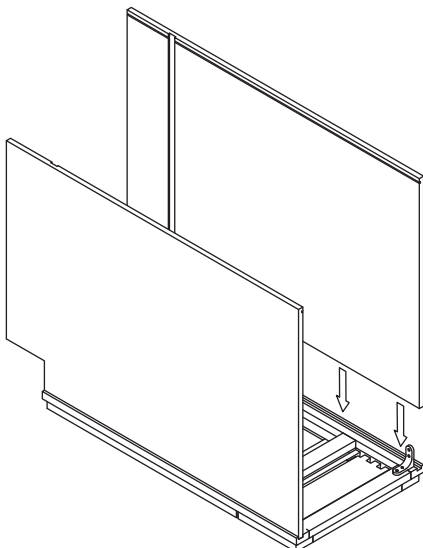

STEP 6

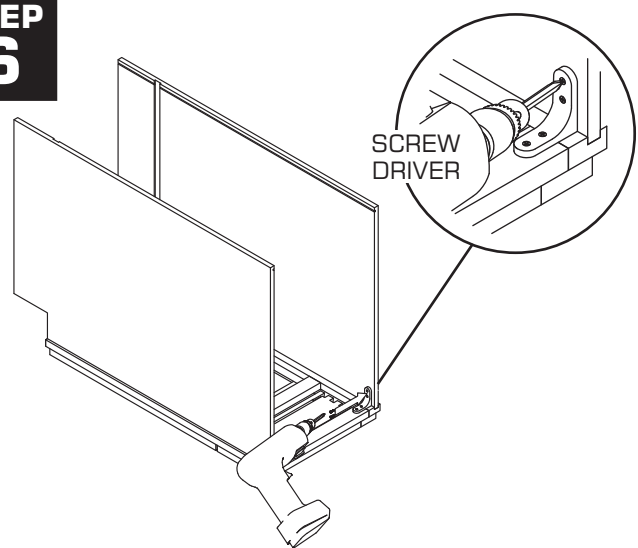


JARLIN


CABINETS

BASE CABINET


STEP 7

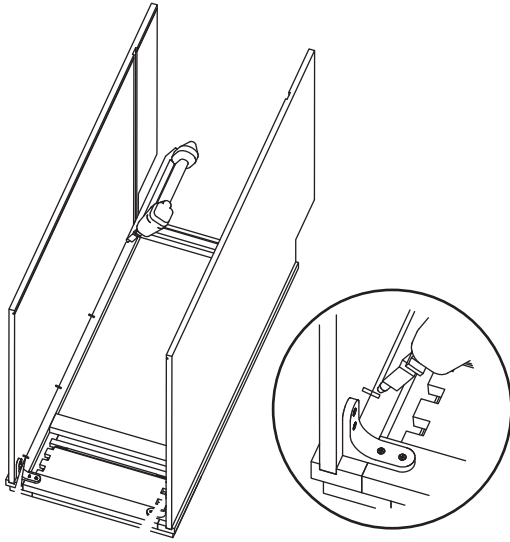


STEP 8

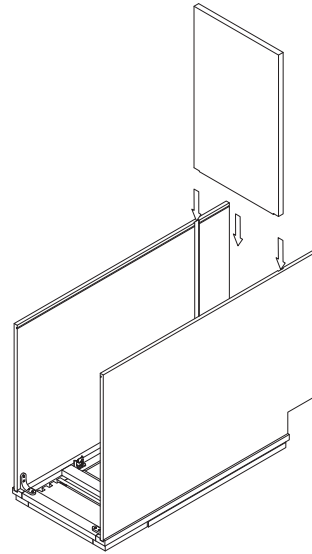


STEP 9

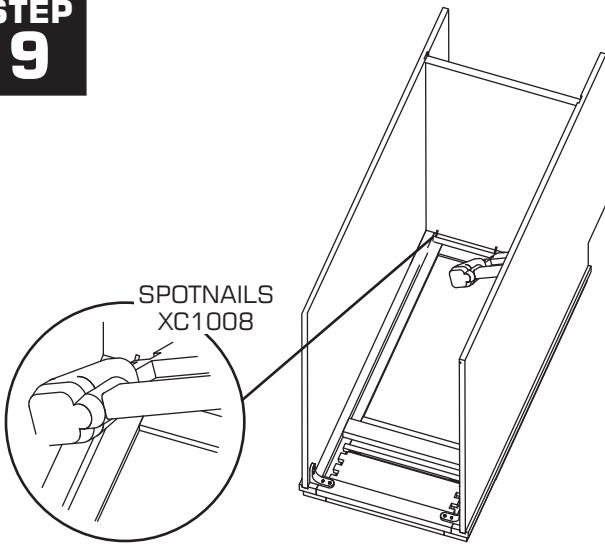

STEP 10

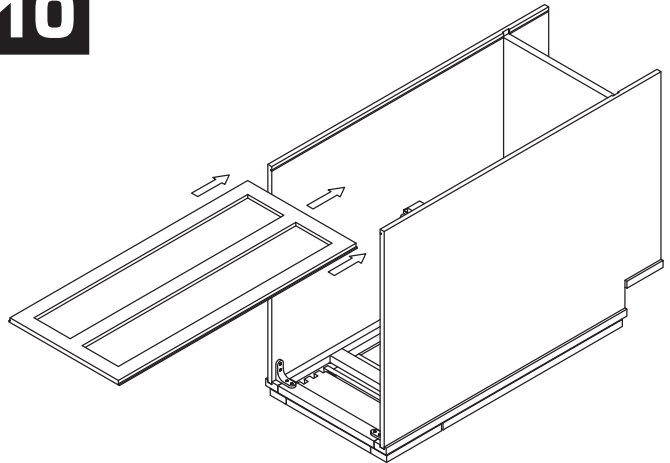


STEP 11

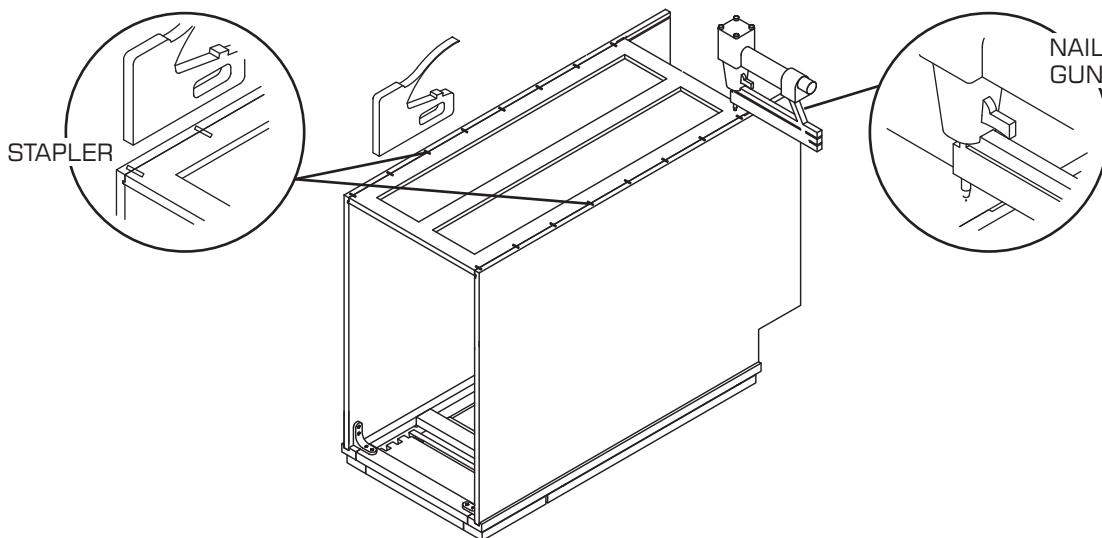


JARLIN CABINETS

**STEP
12**

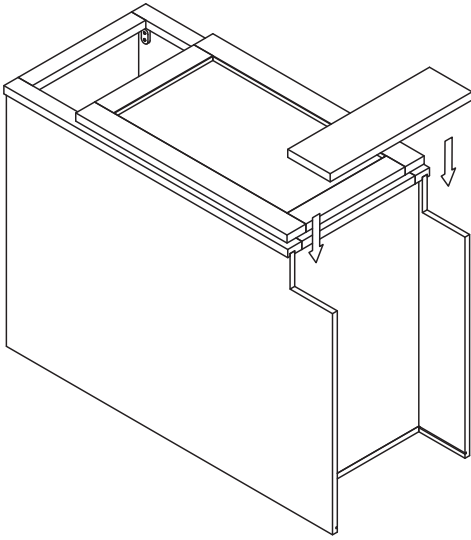


**STEP
13**

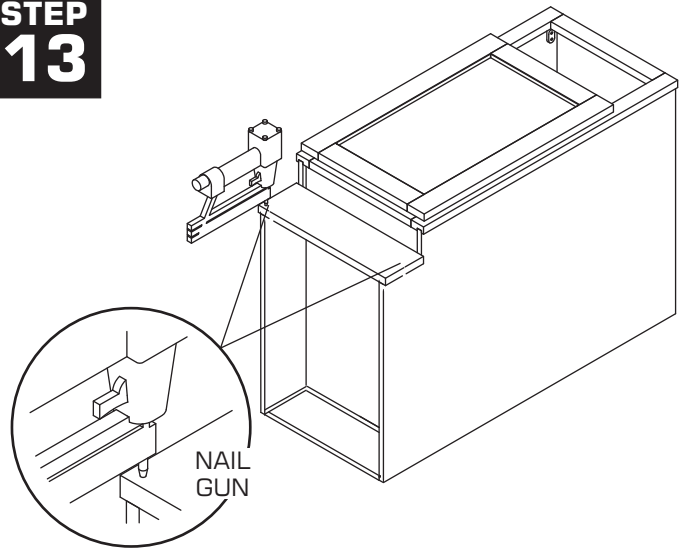


BASE CABINET


**STEP
14**

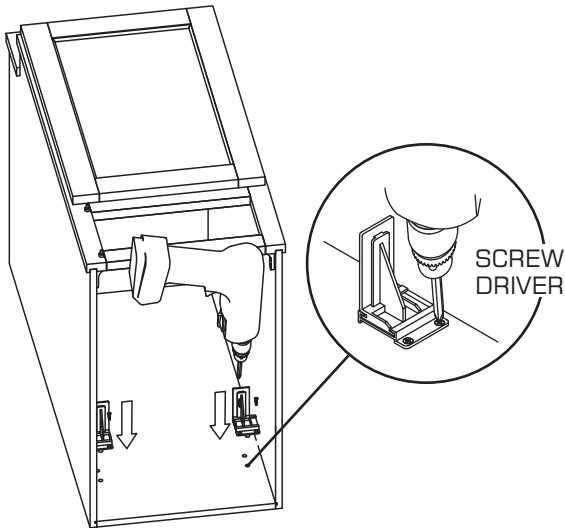


**STEP
15**

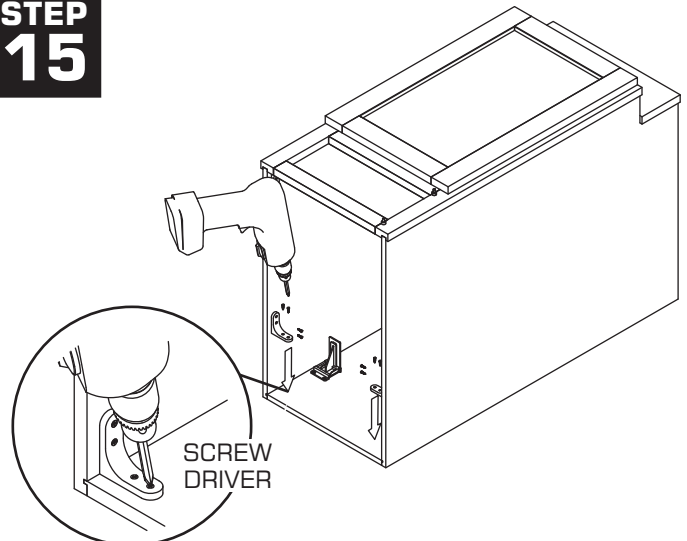

**STEP
16**

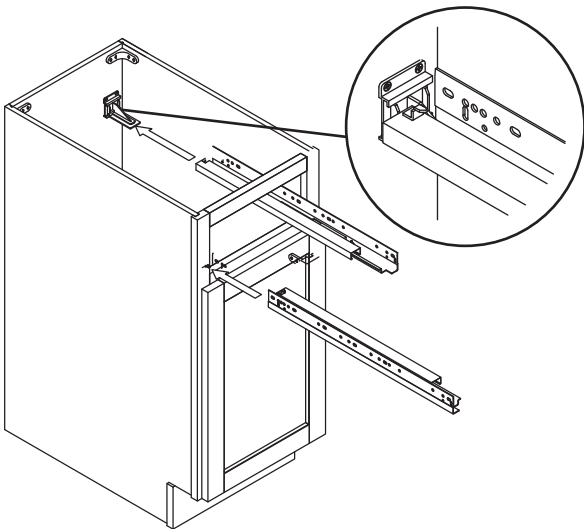


**STEP
17**

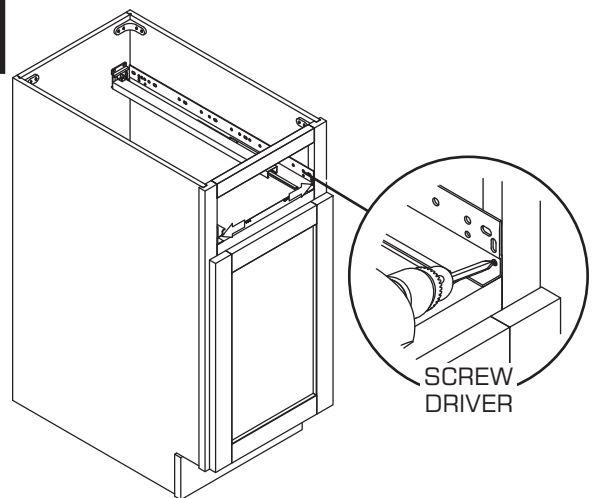


JARLIN CABINETS


**STEP
18**

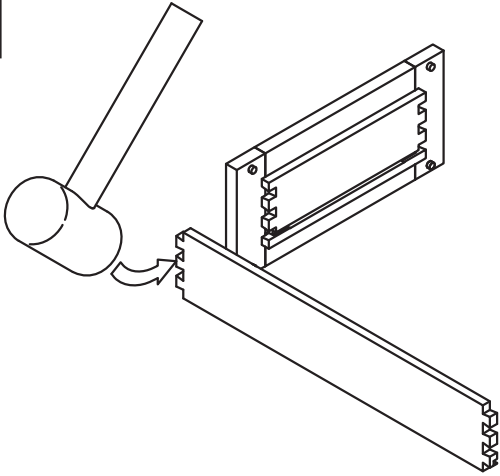


**STEP
19**

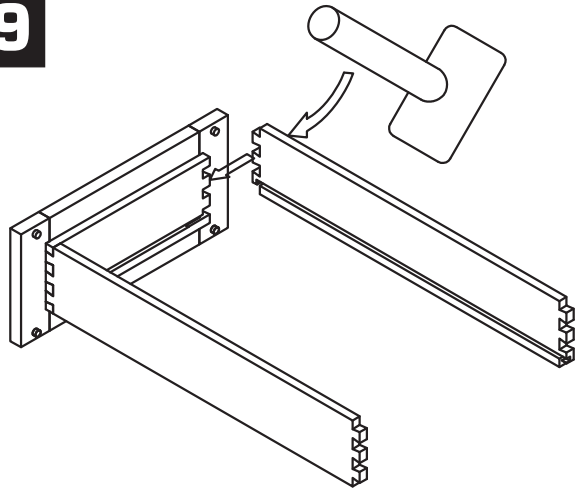


**STEP
20**

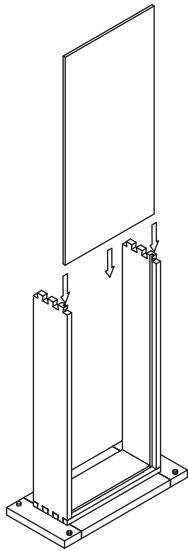


**STEP
21**

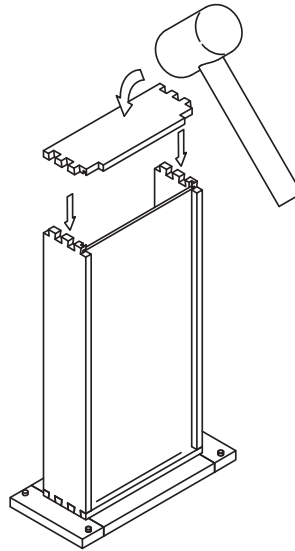

**STEP
22**

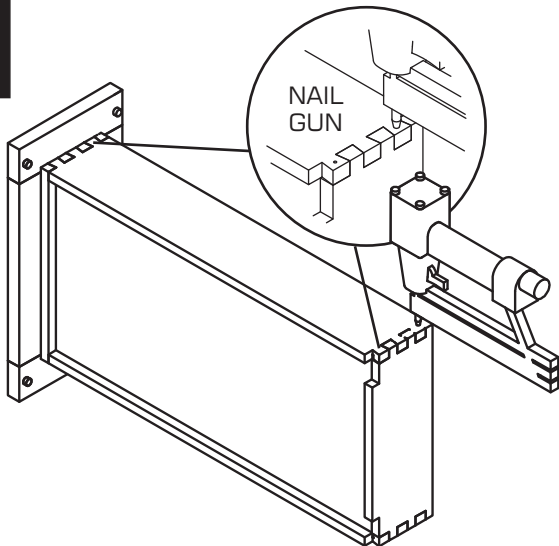

**STEP
23**

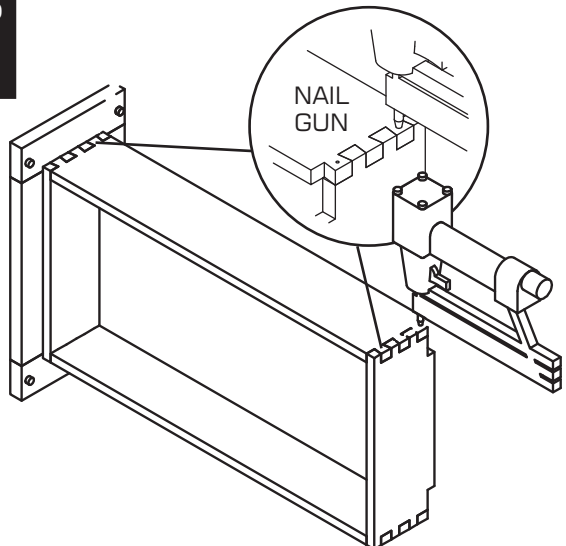


BASE CABINET


JARLIN

CABINETS

**STEP
24**

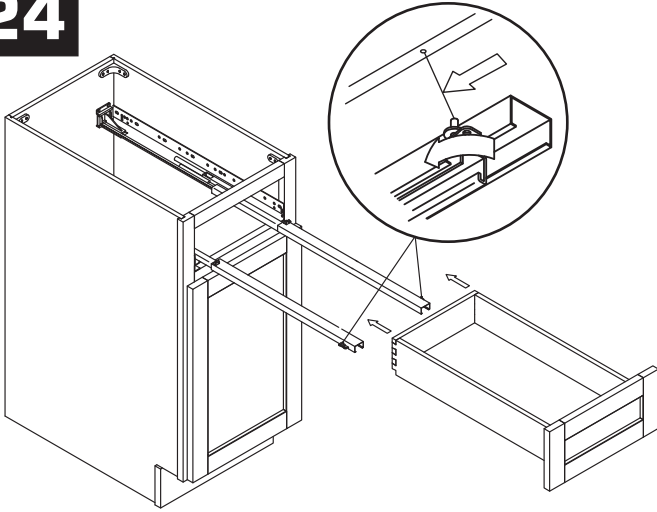


**STEP
25**

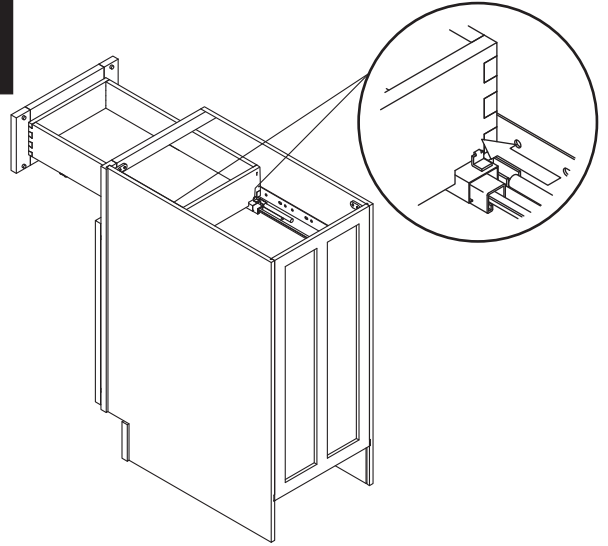


BASE CABINET

**STEP
26**

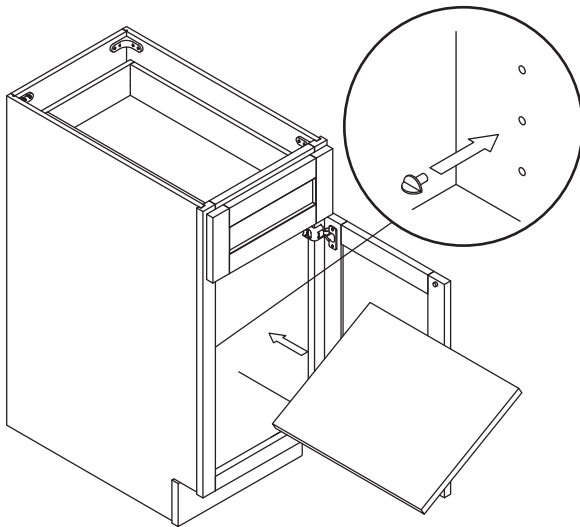







**STEP
27**

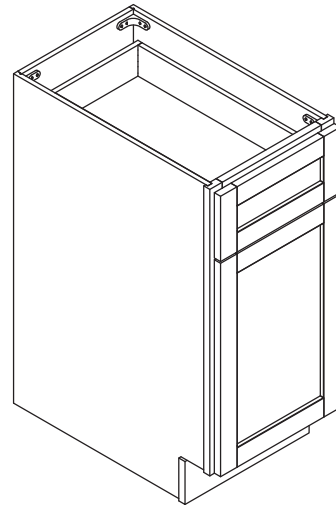

ASSEMBLING INSTRUCTIONS - LAZY SUSAN CABINET

LAZY SUSAN CABINET

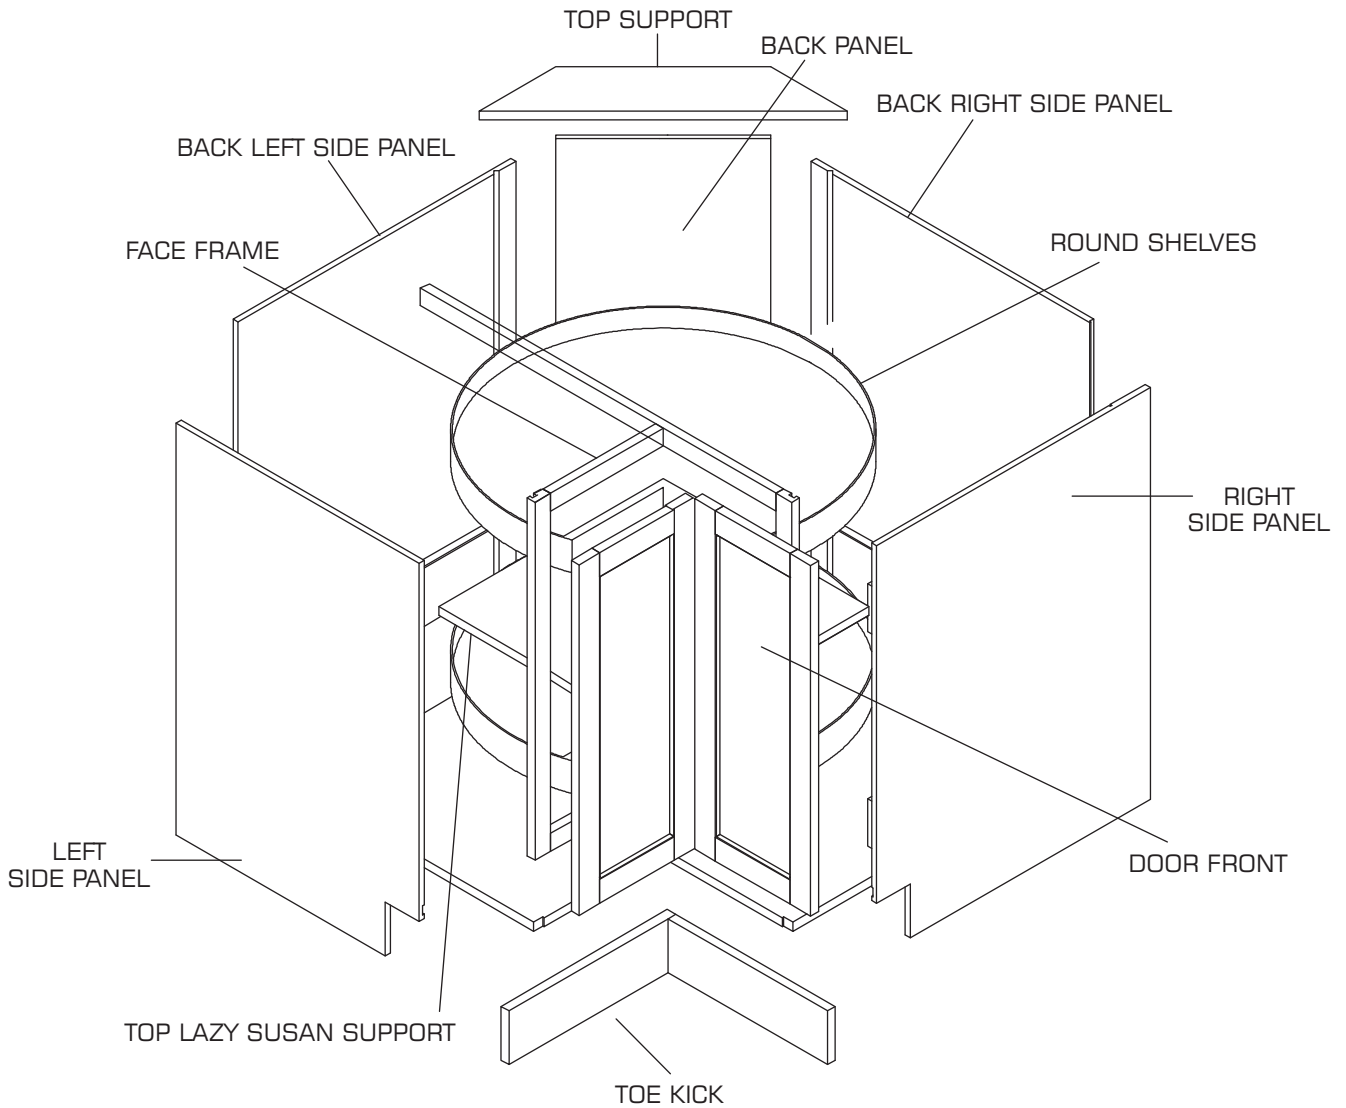

<p>METAL BRACKETS</p> 	<p>SHELF CLIPS</p> 	<p>BIFOLD HINGE</p>  <p>ES/DS/SG CT/PE/NT/AL</p>	<p>170 HINGE</p> 	<p>SCREWS</p> 
---	--	---	--	---


TOOLS					
					
WOOD GLUE	SCREW DRIVER	RUBBER MALLET	NAIL GUN	STAPLER	SPOTNAILS XC1008

JARLIN


CABINETS

LAZY SUSAN CABINET


STEP 1

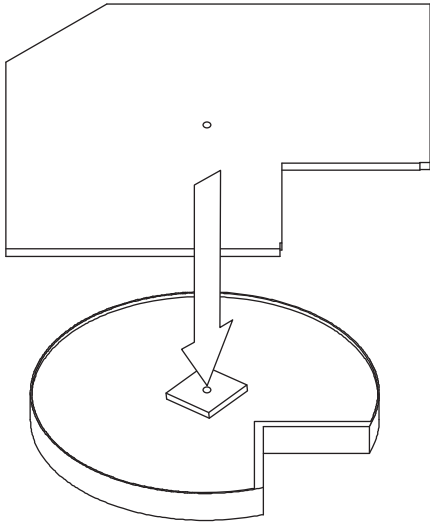


STEP 2

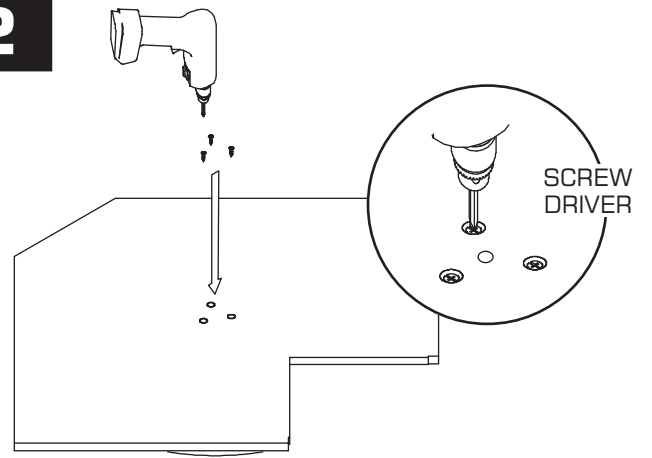


STEP 3

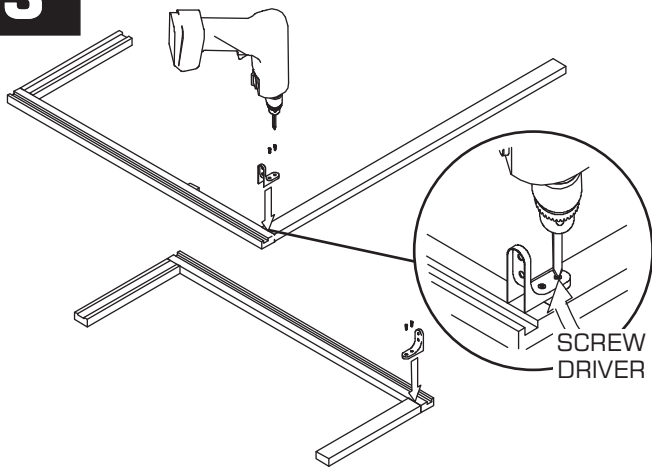


STEP 4

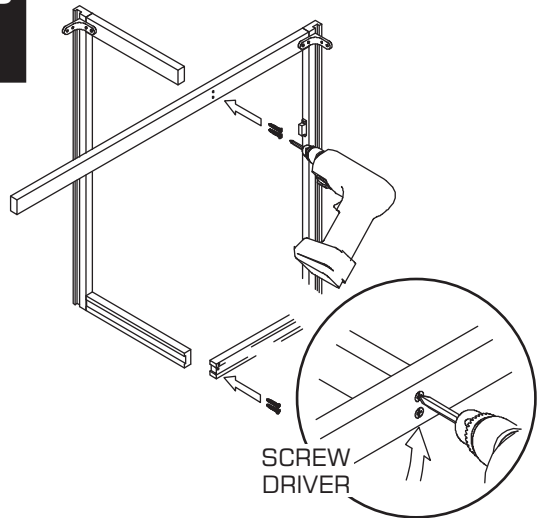

STEP 5

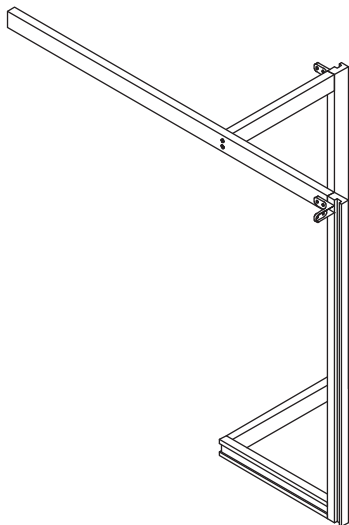

STEP 6

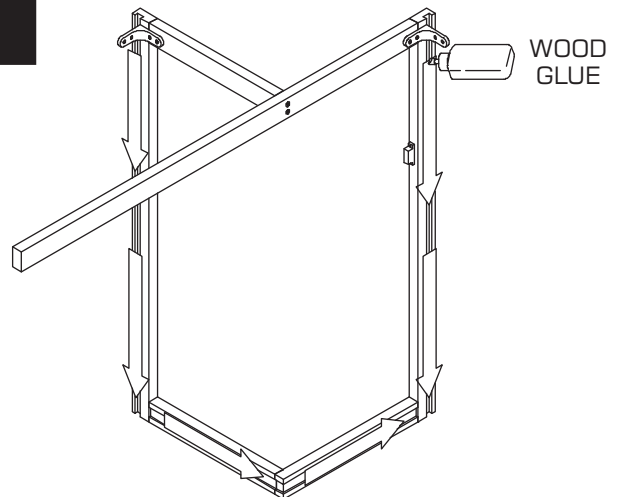


JARLIN


CABINETY

LAZY SUSAN CABINET


STEP 7

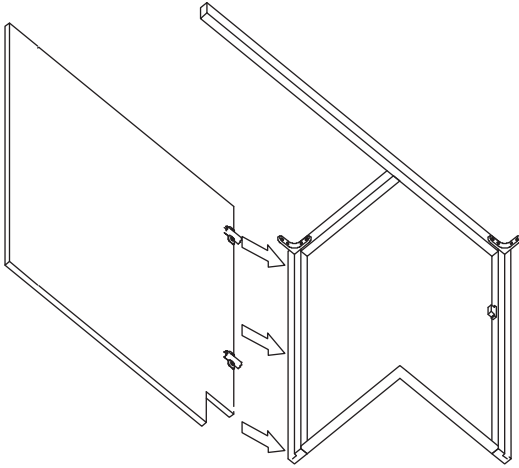


STEP 8

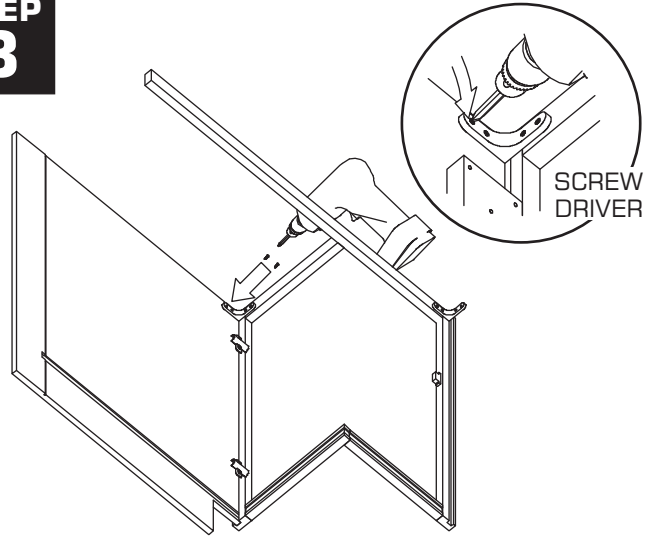


STEP 9

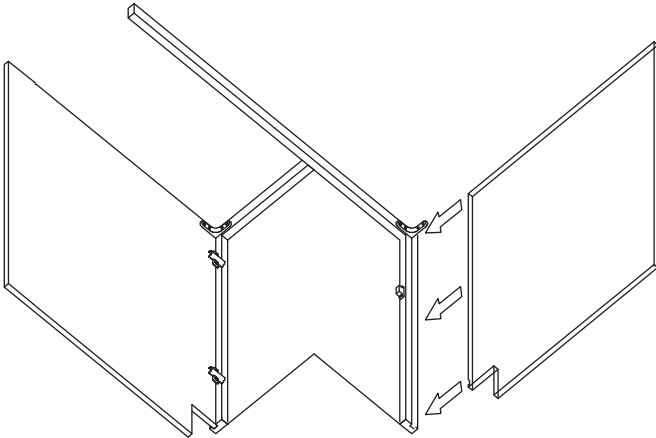


STEP 10

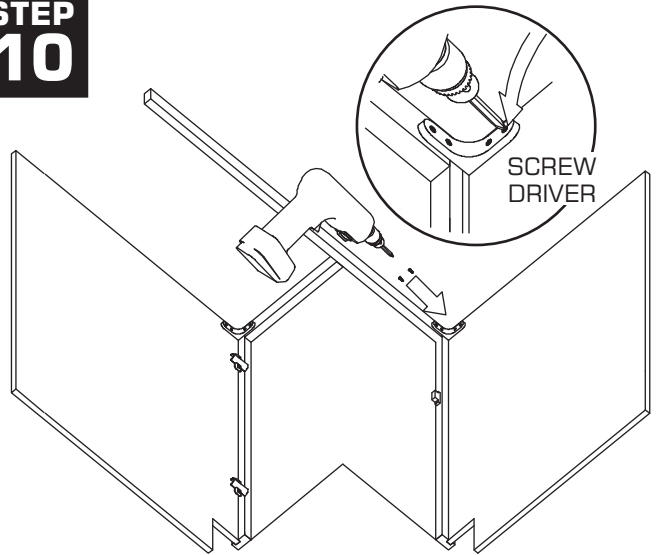


STEP 11

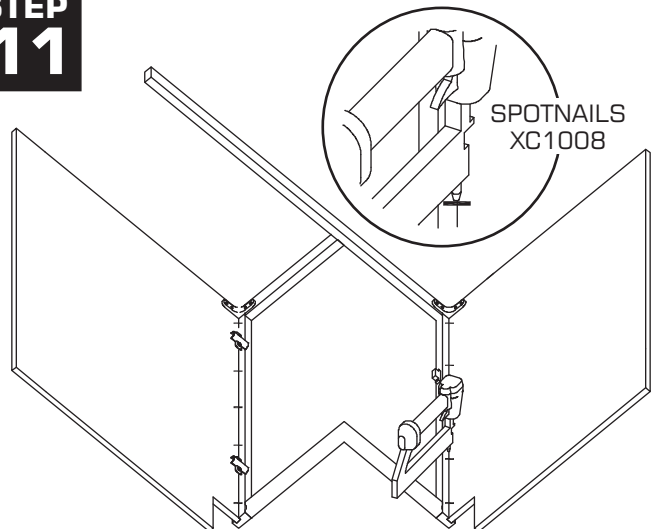


STEP 12

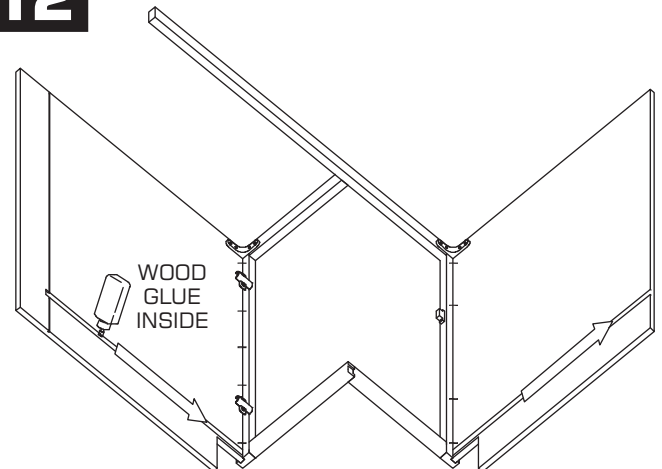

STEP
13

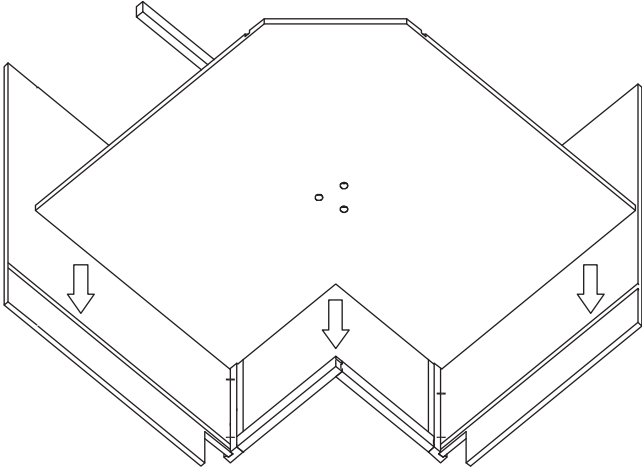


STEP
14

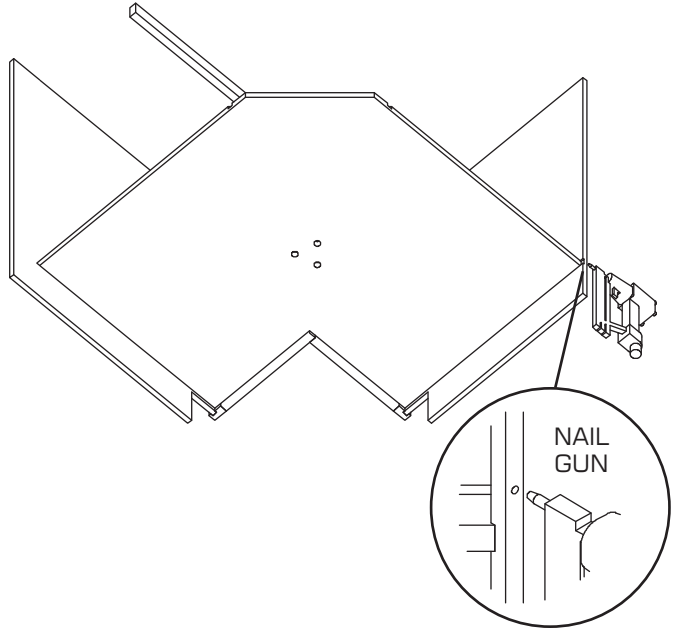


LAZY SUSAN CABINET

STEP
15

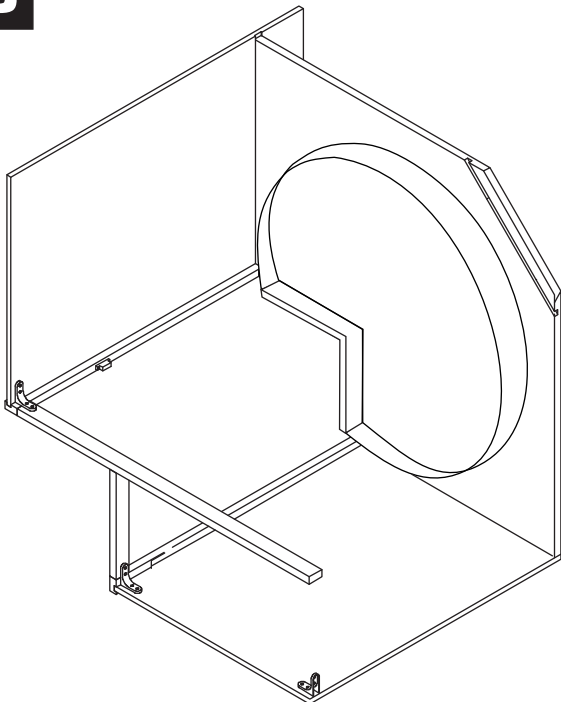


STEP
16

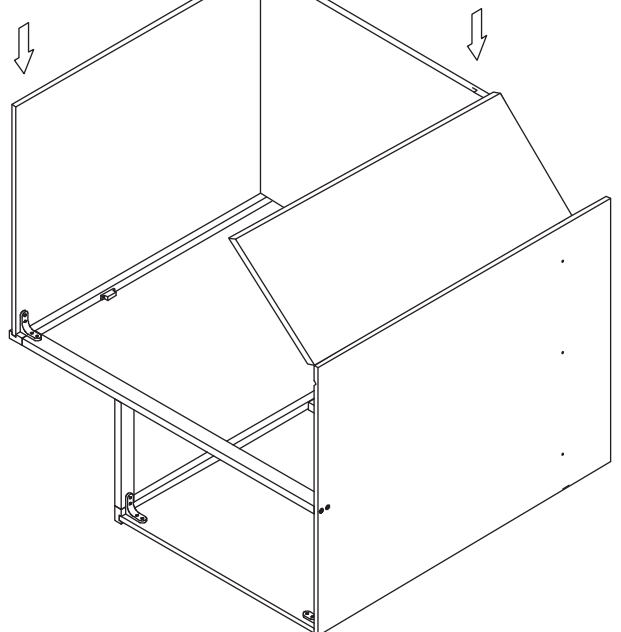


JARLIN CABINETS


STEP 17

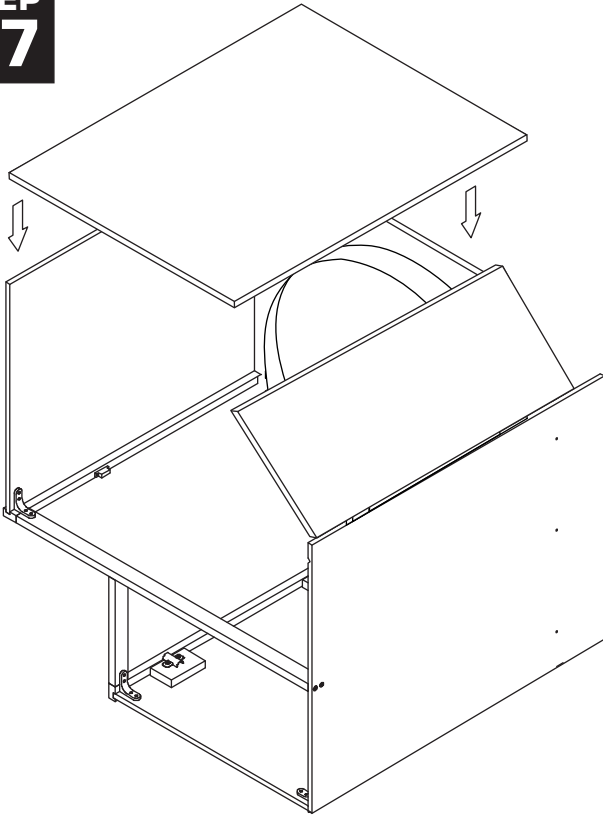


STEP 18

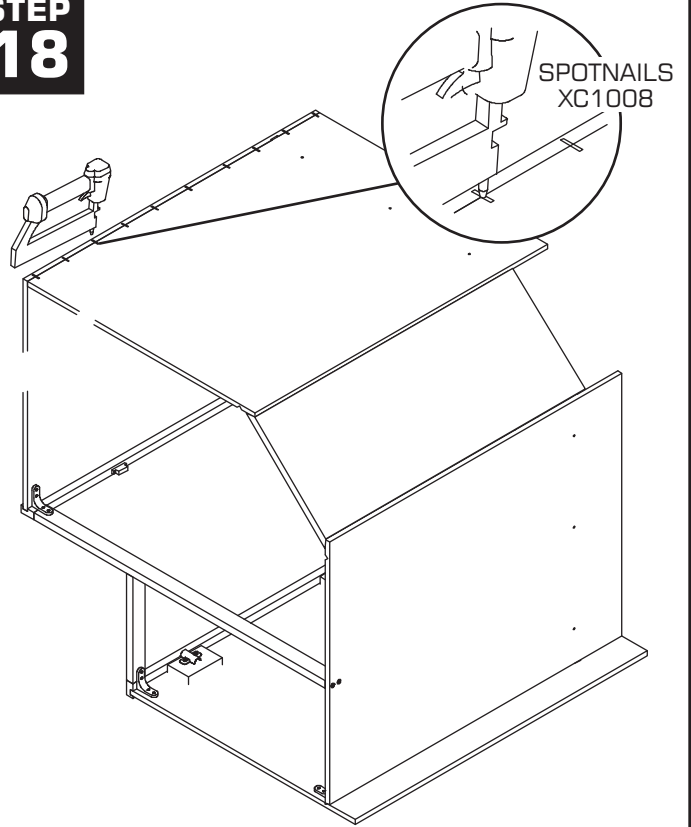

STEP 19

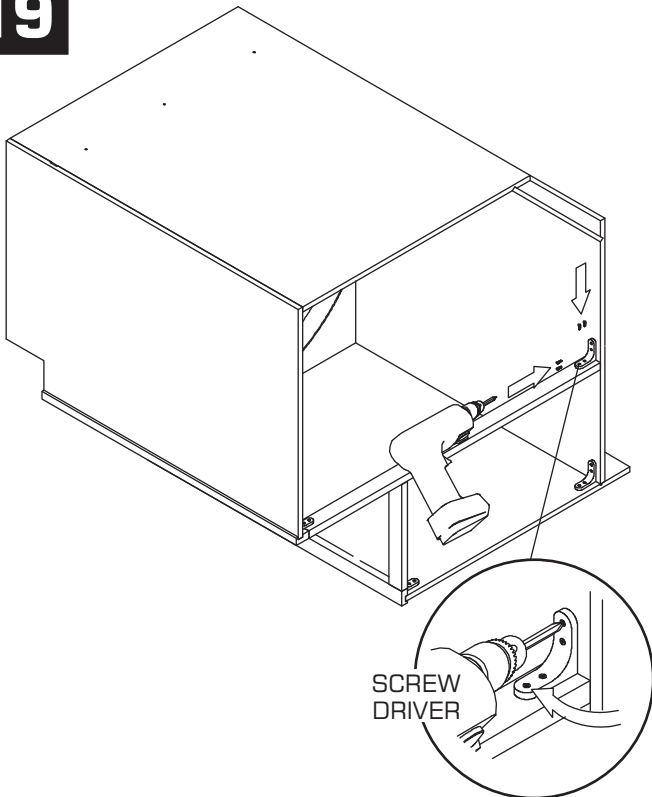


STEP 20

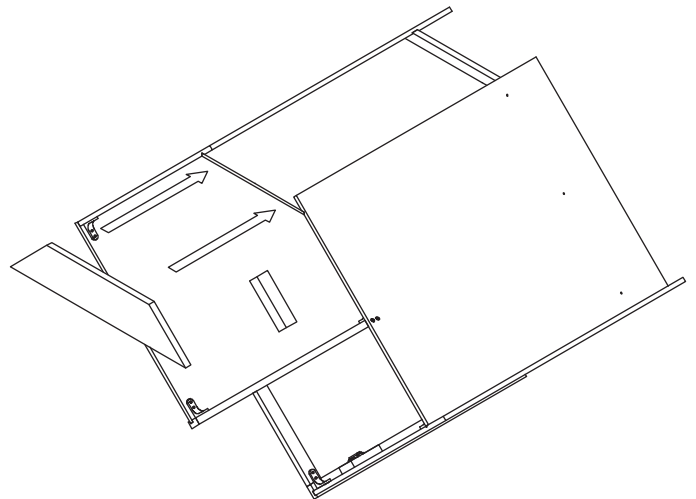


LAZY SUSAN CABINET

JARLIN CABINETS


**STEP
21**

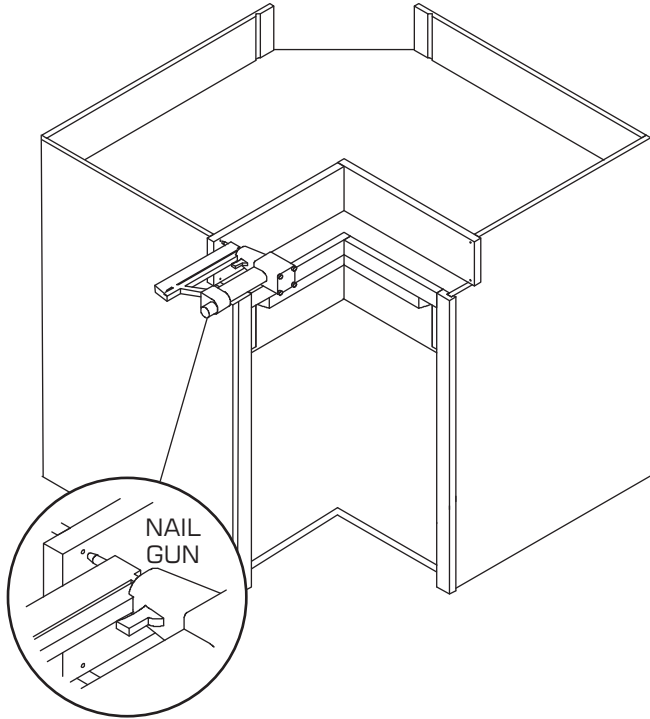


**STEP
22**

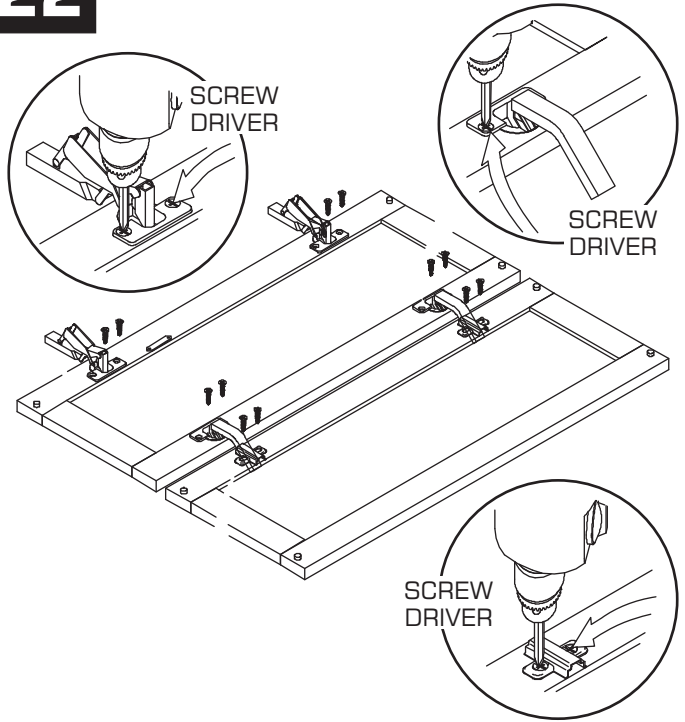

**STEP
23**

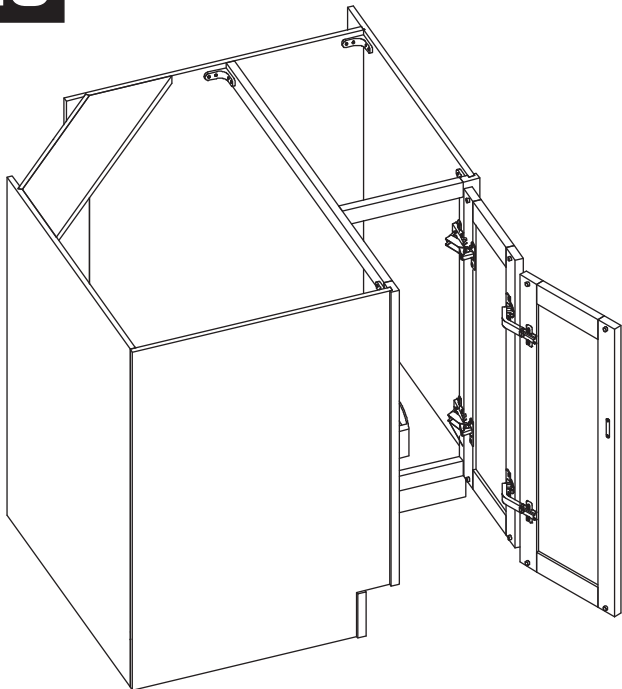


**STEP
24**





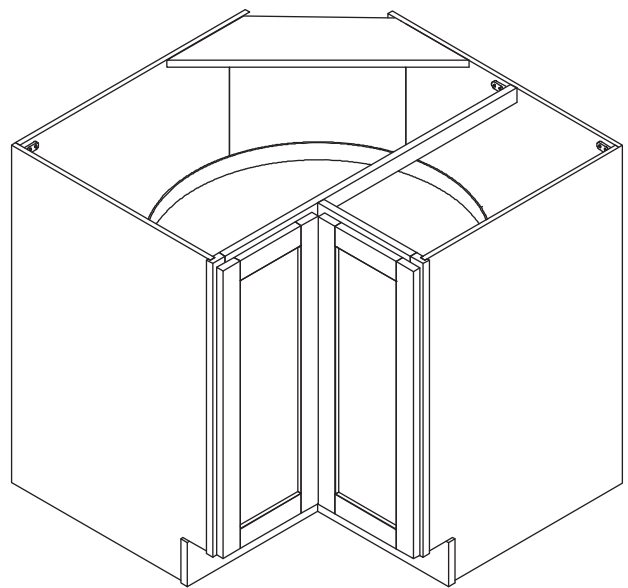


LAZY SUSAN CABINET

ASSEMBLING INSTRUCTIONS - BLIND CORNER BASE CABINET

BLIND CORNER BASE CABINET

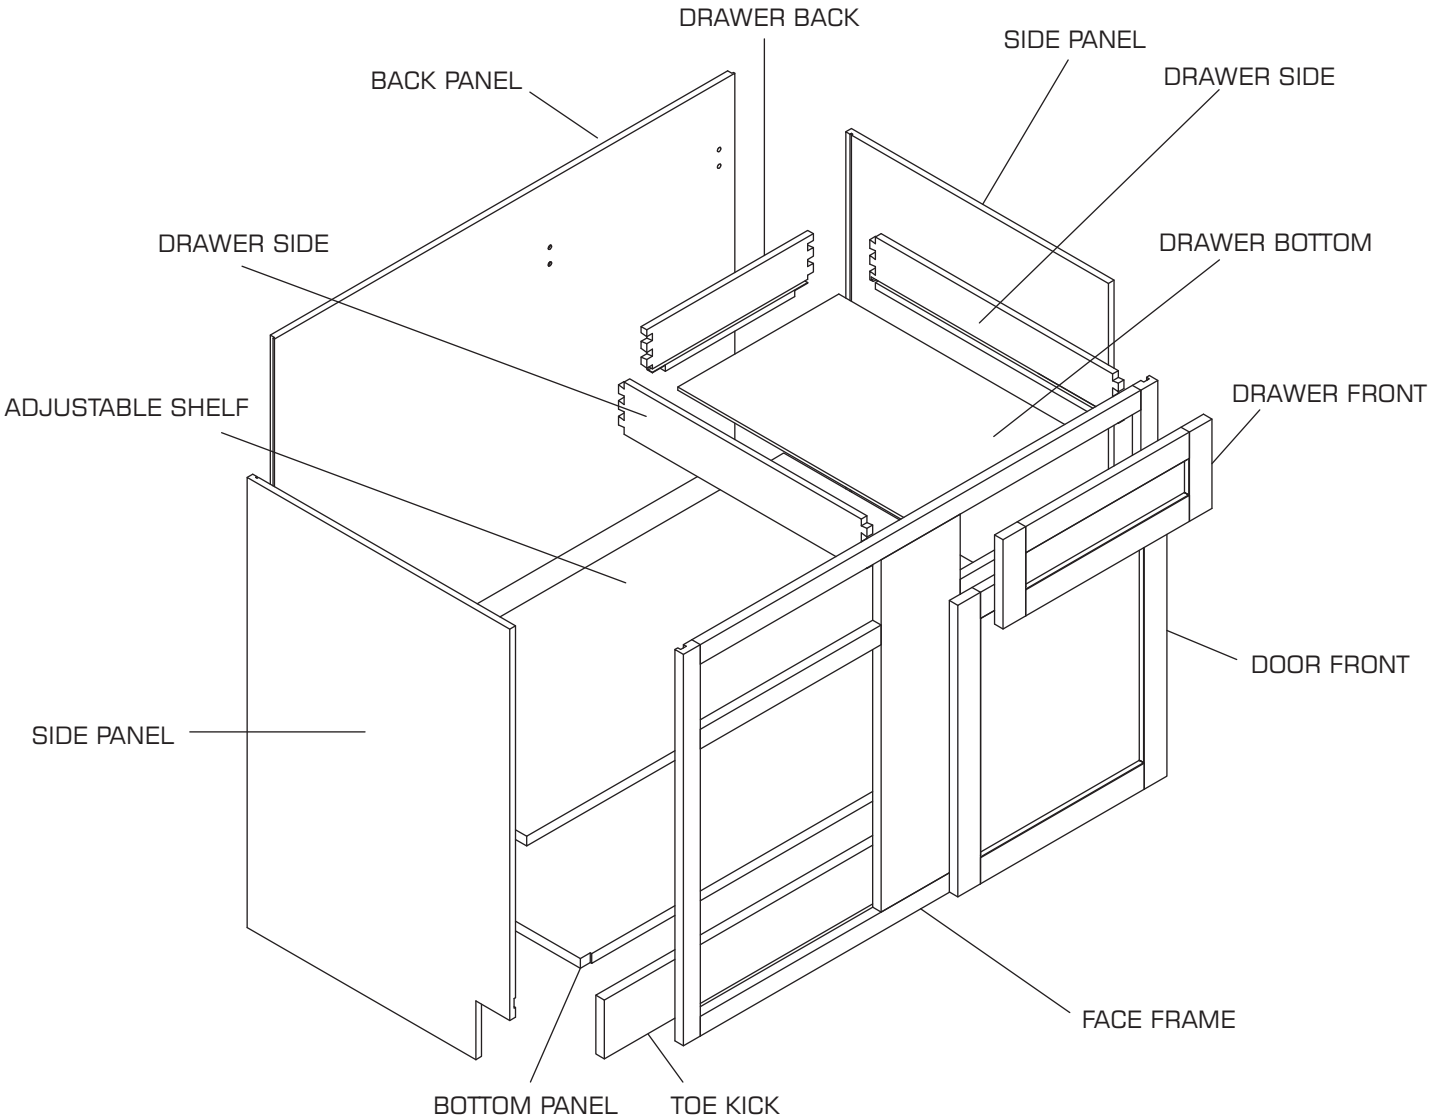
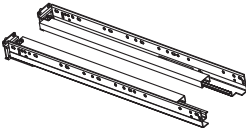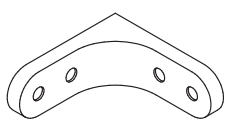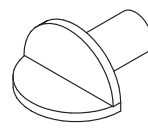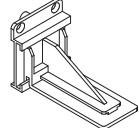
<p>GLIDES</p> 	<p>METAL BRACKETS</p> 	<p>SCREWS</p> 	<p>SHELF CLIPS</p> 	<p>GLIDE SUPPORTS</p> 
---	---	---	--	---

TOOLS


 <p>WOOD GLUE</p>	 <p>SCREW DRIVER</p>	 <p>RUBBER Mallet</p>	 <p>NAIL GUN</p>	 <p>STAPLER</p>	 <p>SPOTNAILS XC1008</p>
--	---	--	---	---	---

JARLIN CABINETS


BLIND CORNER BASE CABINET

STEP
1


WOOD
GLUE

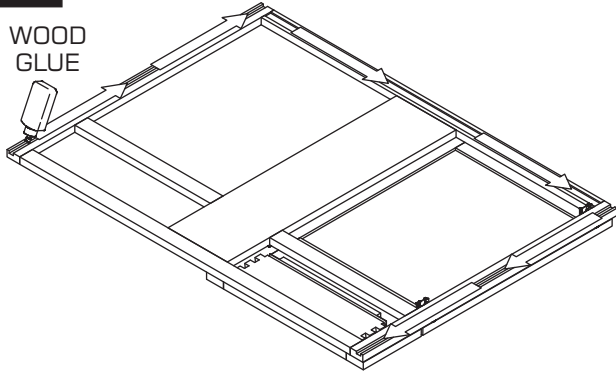


STEP
2

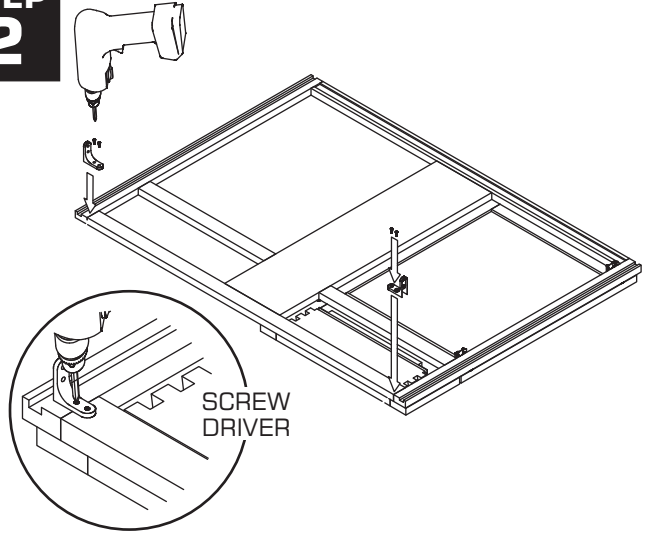


STEP
3

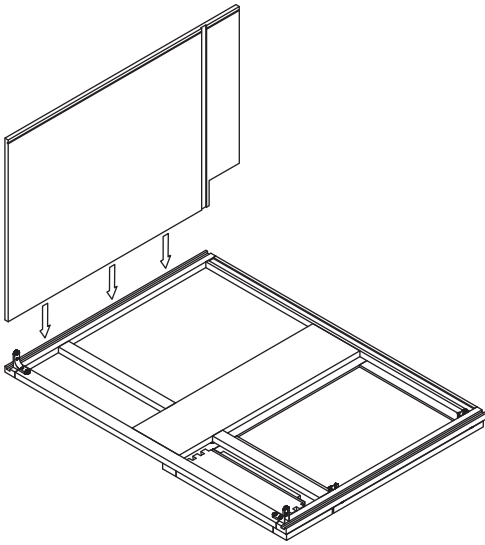


STEP
4

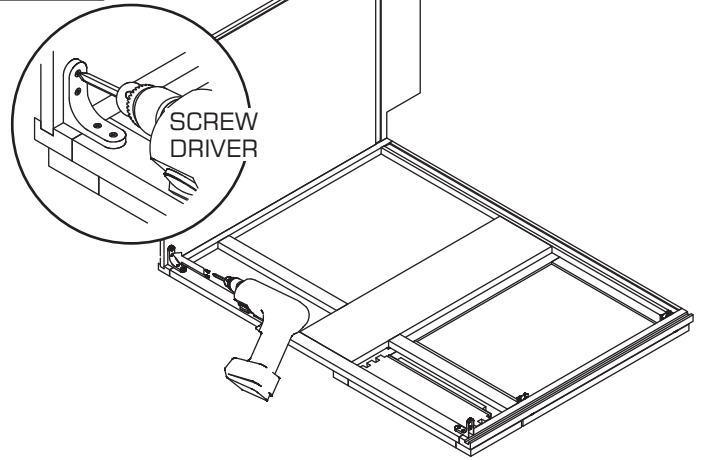

STEP
5

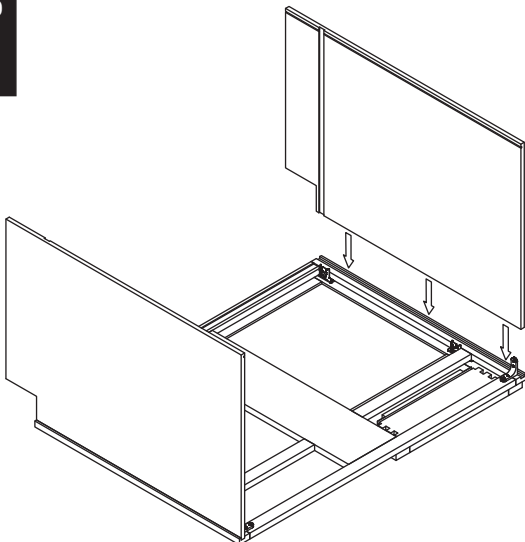


STEP
6

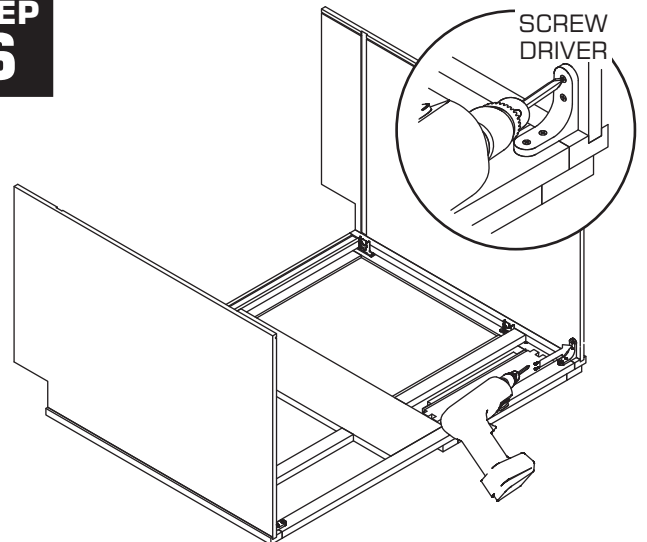


JARLIN CABINETS

BLIND CORNER BASE CABINET


STEP
7

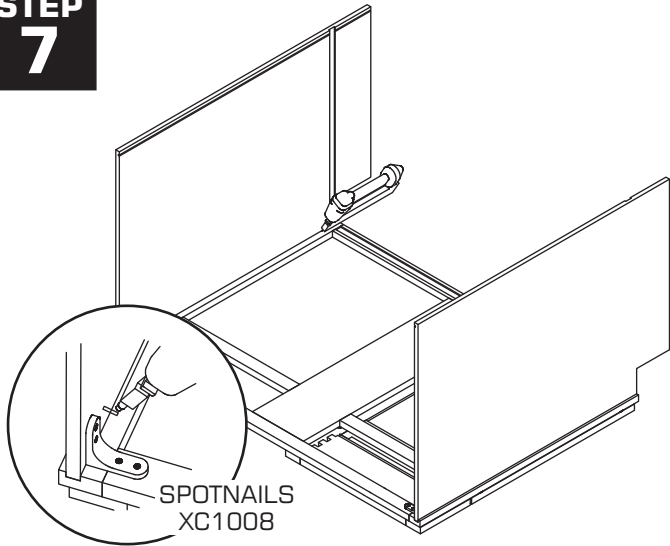


STEP
8

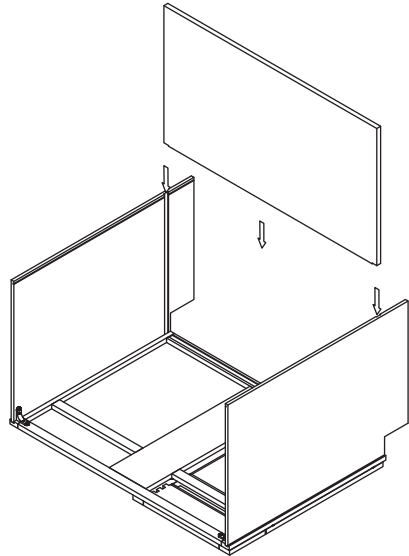


STEP
9

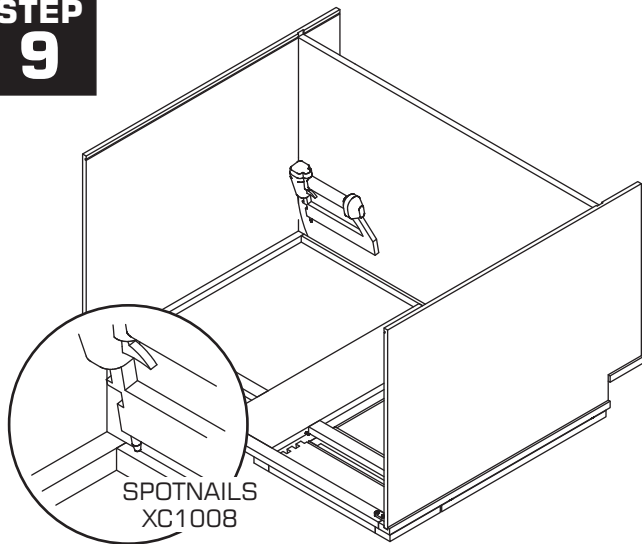

STEP
10

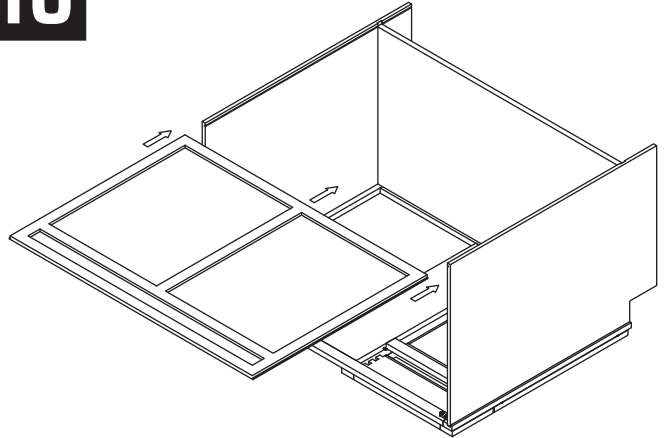

STEP
11

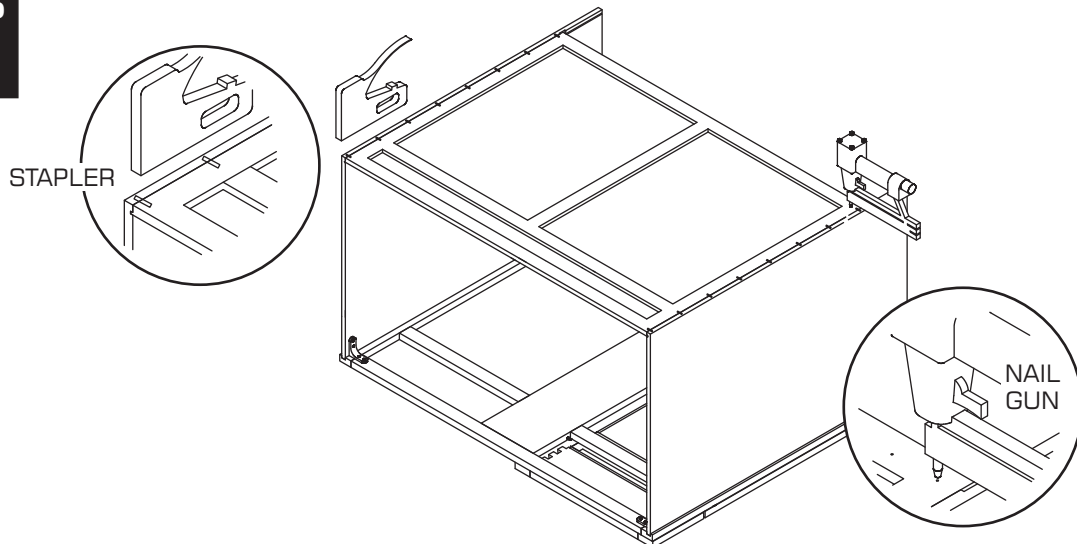


JARLIN


CABINETS

BLIND CORNER BASE CABINET


STEP 12

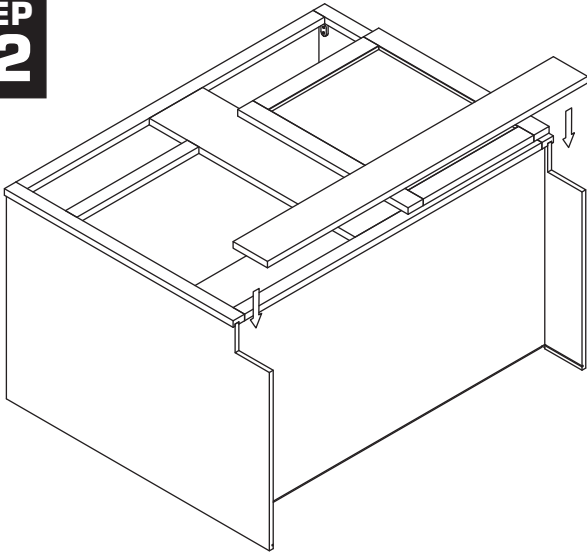


STEP 13

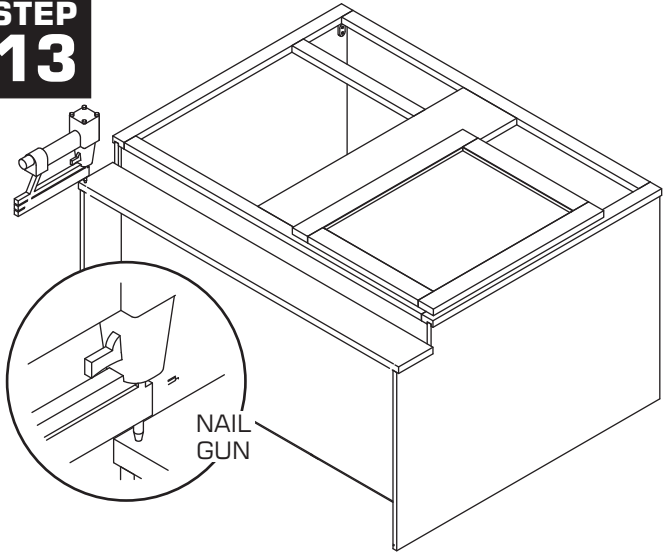


STEP 14

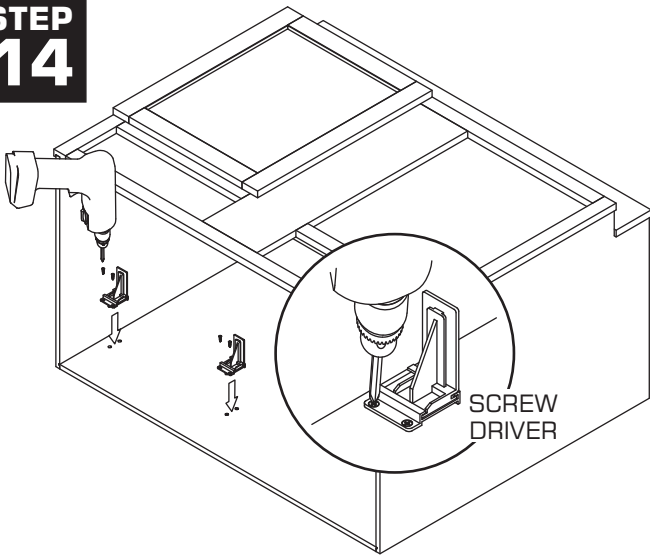


STEP 15

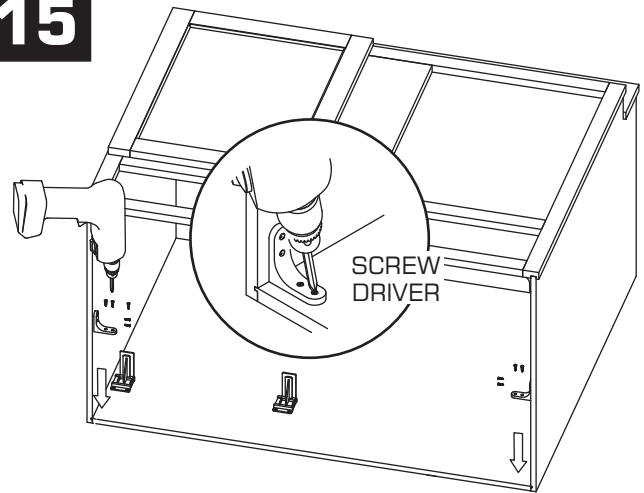

STEP 16

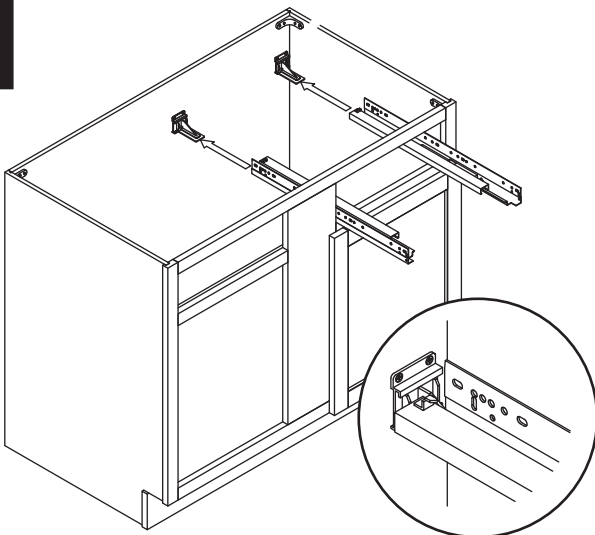


STEP 17

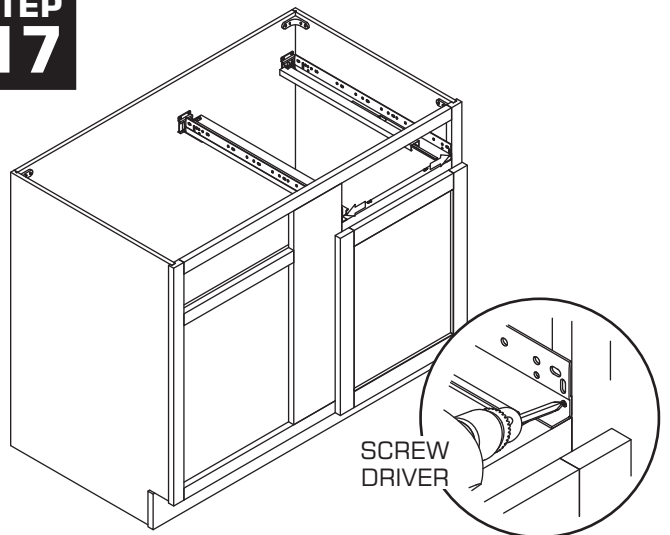


JARLIN CABINETS


**STEP
18**

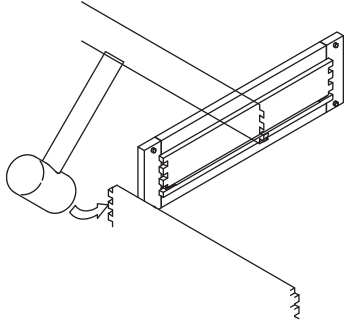


**STEP
19**

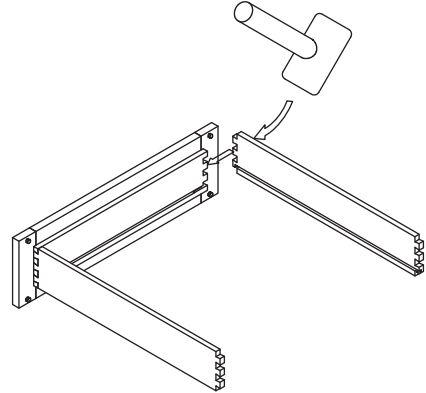


**STEP
20**

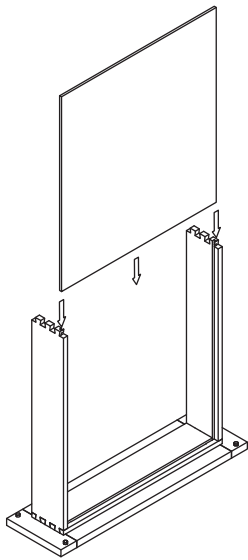

**STEP
21**

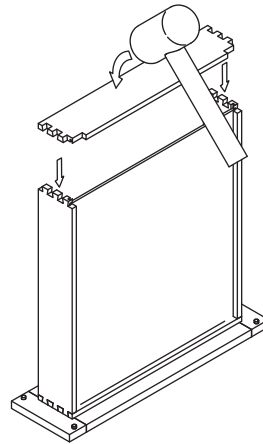


**STEP
22**

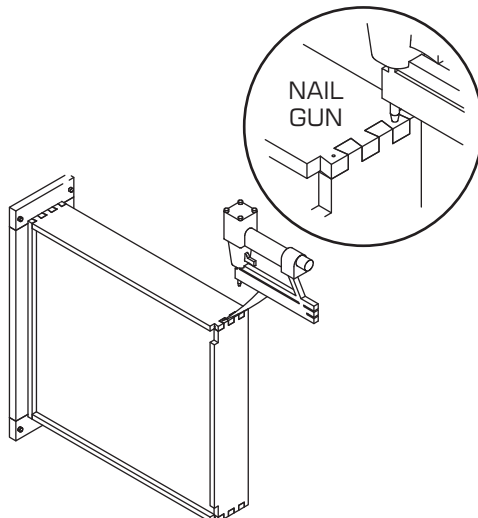


BLIND CORNER BASE CABINET

JARLIN CABINETS

**STEP
23**

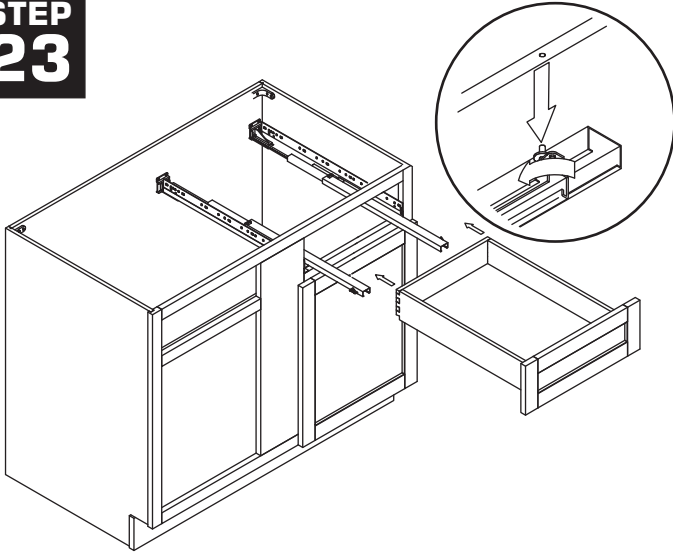


**STEP
24**

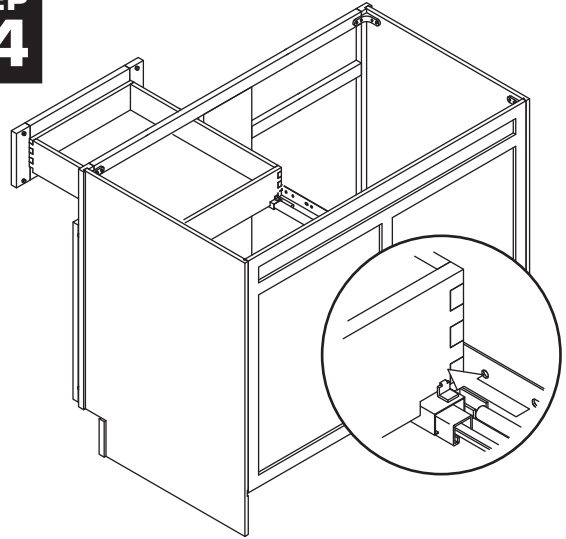


BLIND CORNER BASE CABINET

**STEP
25**

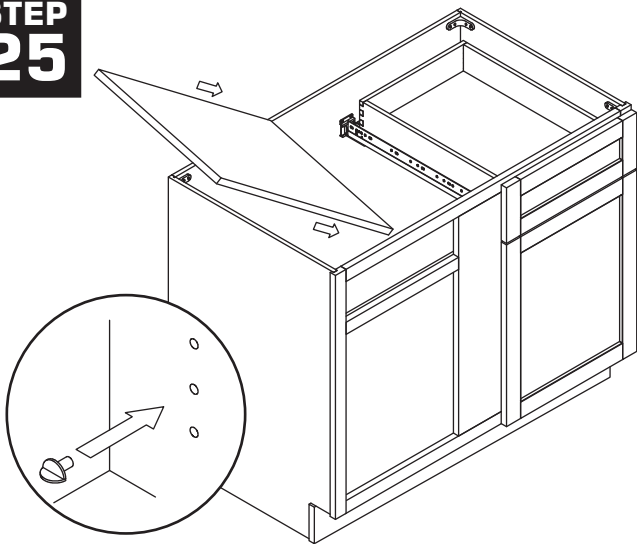


**STEP
26**

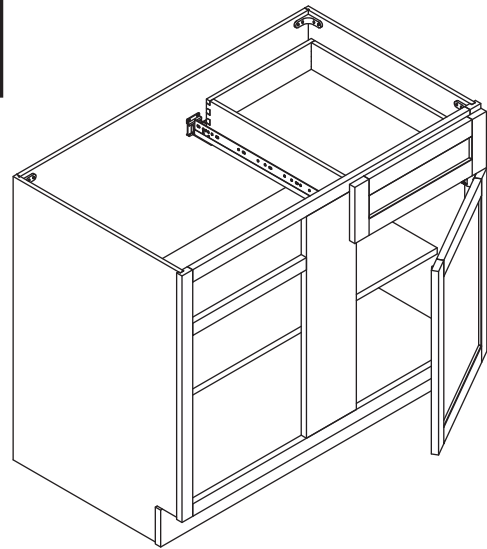

ASSEMBLING INSTRUCTIONS - BASE 3 DRAWERS

BASE 3 DRAWERS

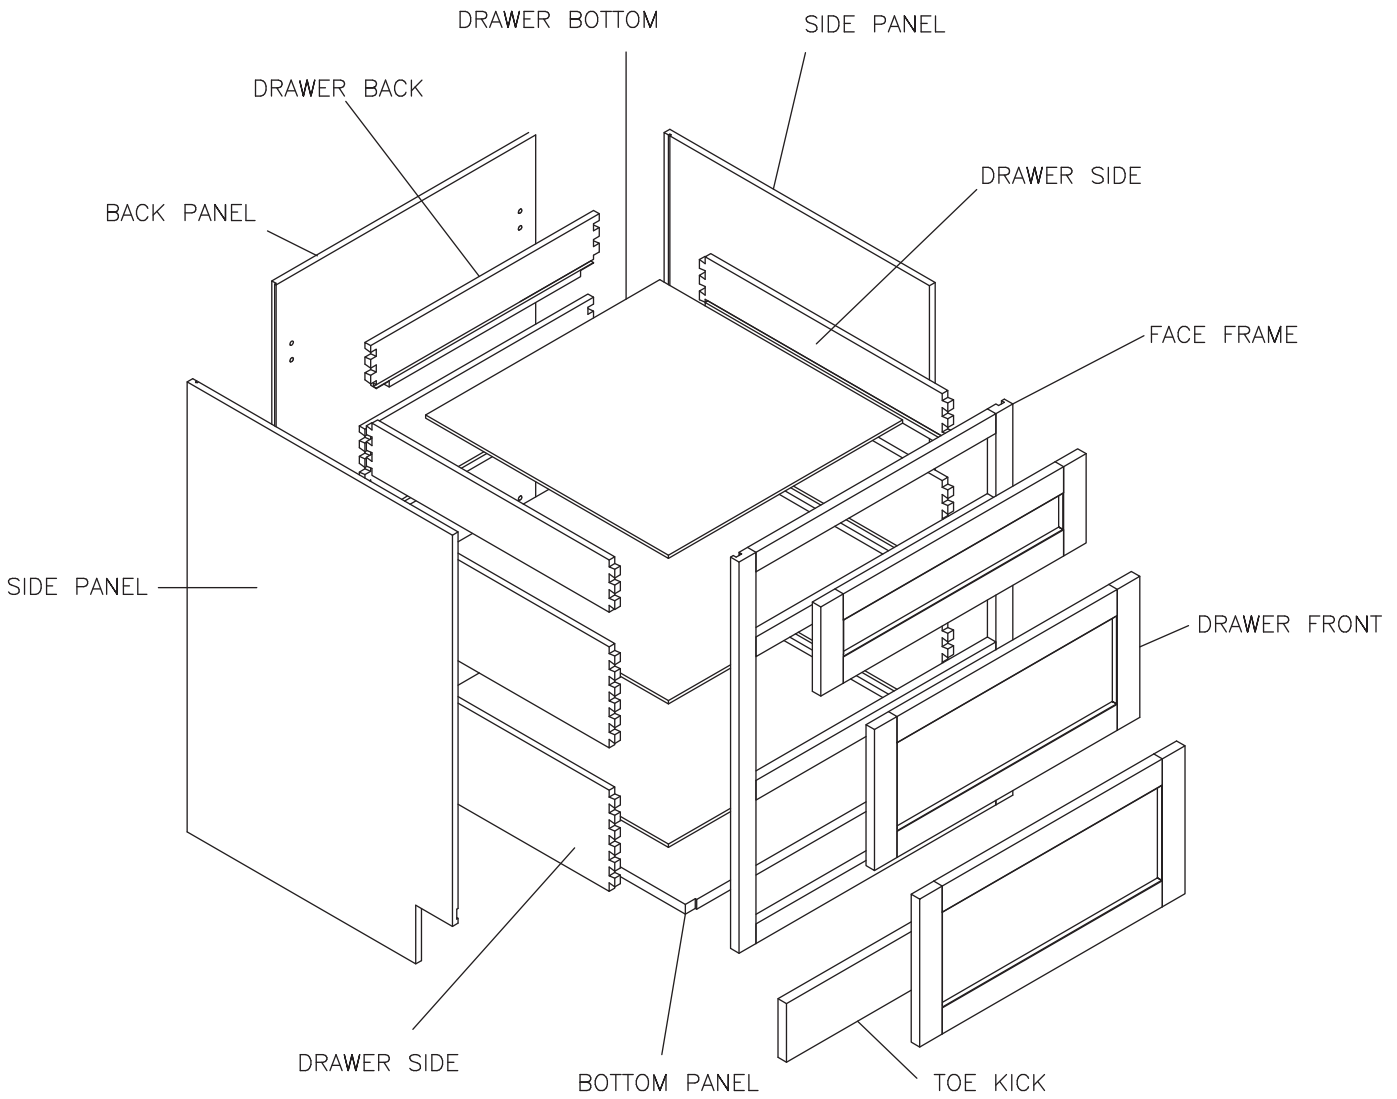

<p>GLIDES</p>	<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>GLIDE SUPPORTS</p>
---------------	-----------------------	---------------	-----------------------


TOOLS					
<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>

JARLIN


CABINETS

BASE 3 DRAWERS


STEP 1

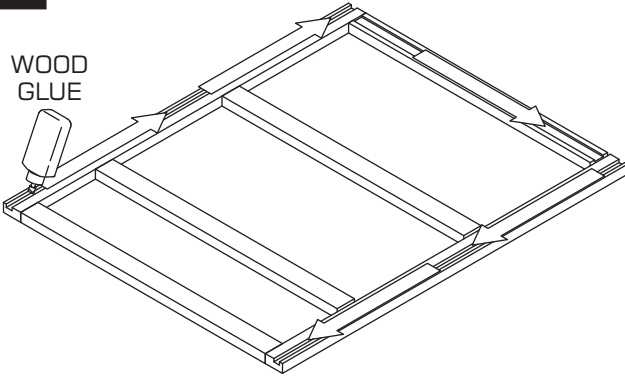


STEP 2

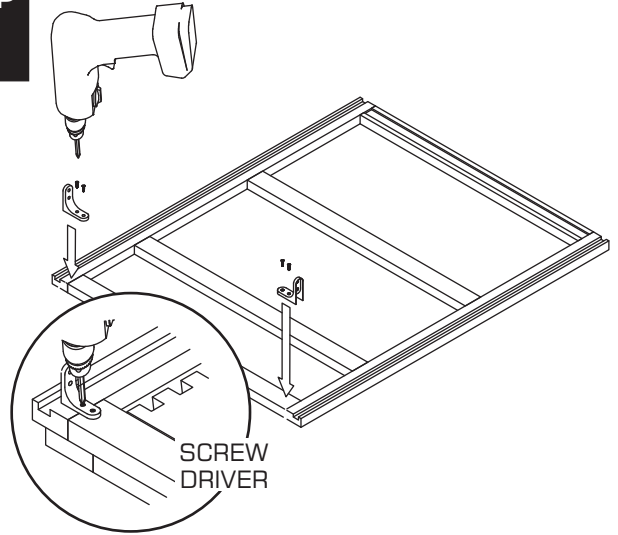


STEP 3

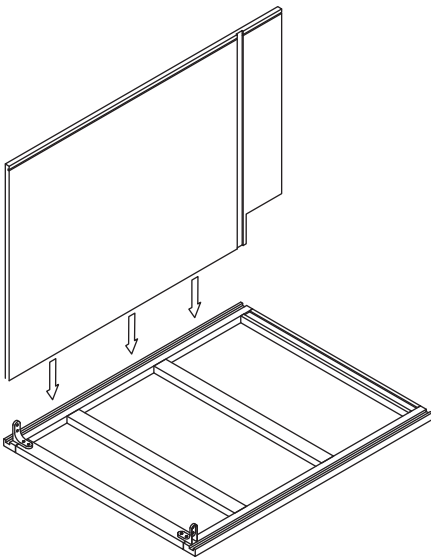


STEP 4

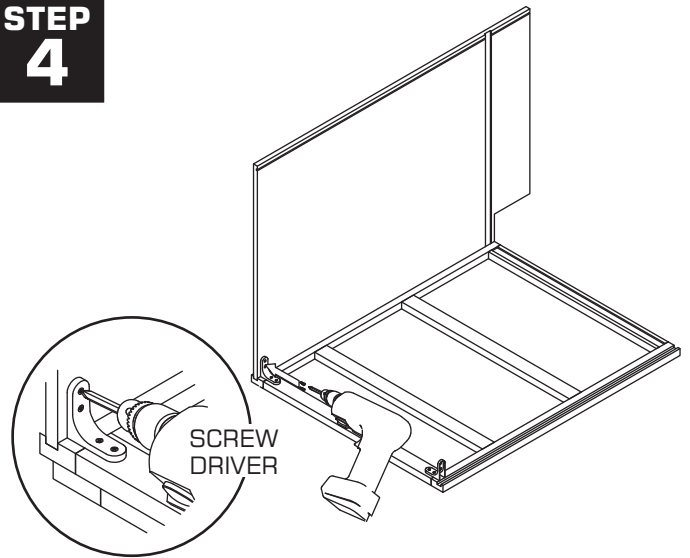

STEP 5

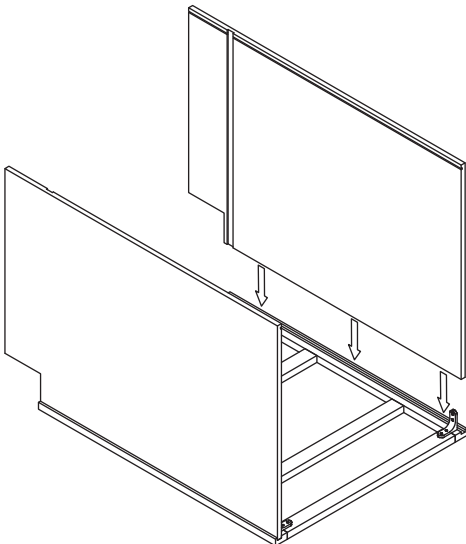


STEP 6

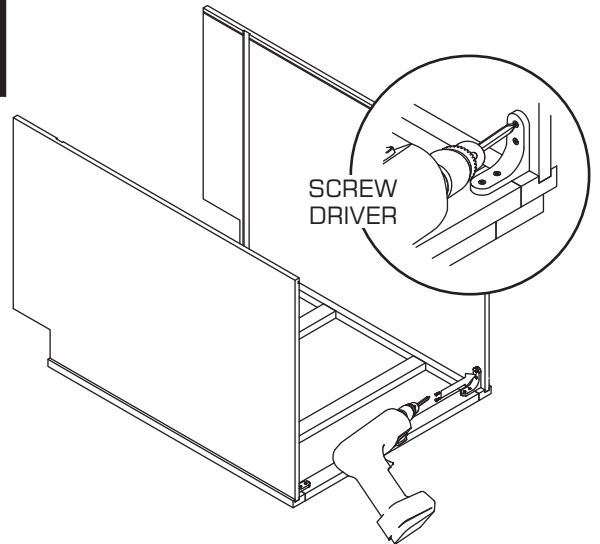


JARLIN CABINETS

BASE 3 DRAWERS


**STEP
7**

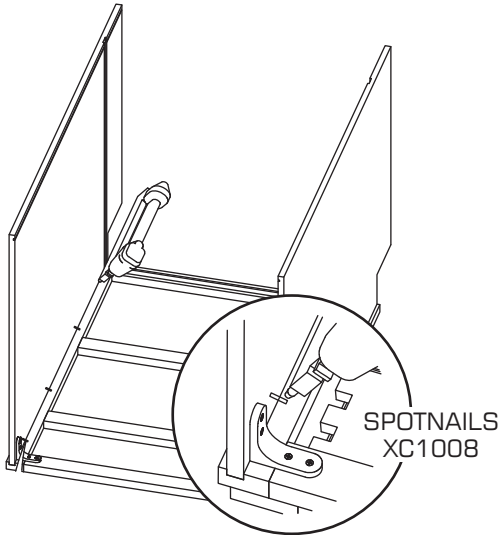


**STEP
8**

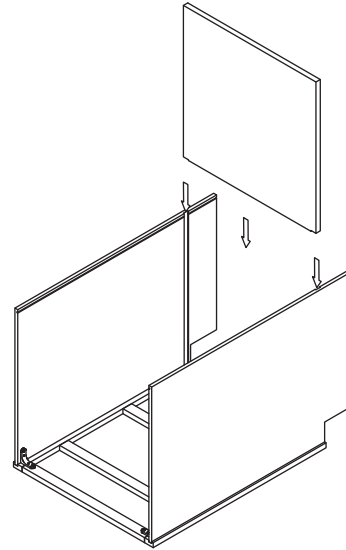


**STEP
9**

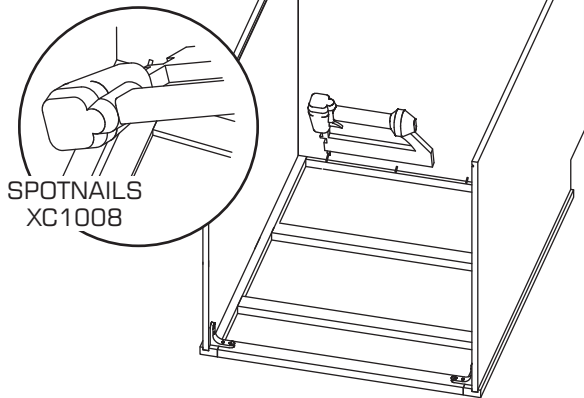

**STEP
10**

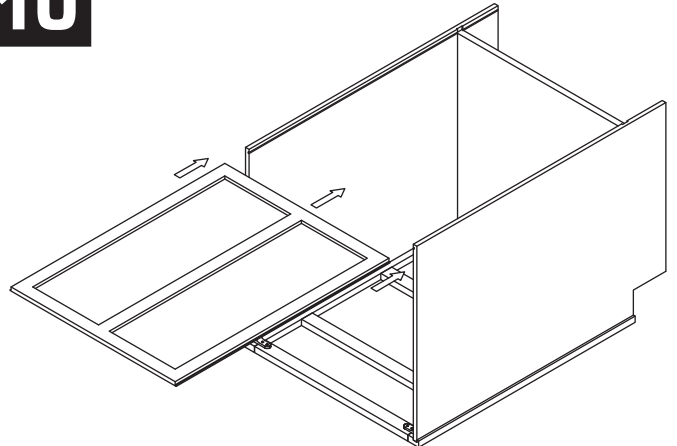

**STEP
11**

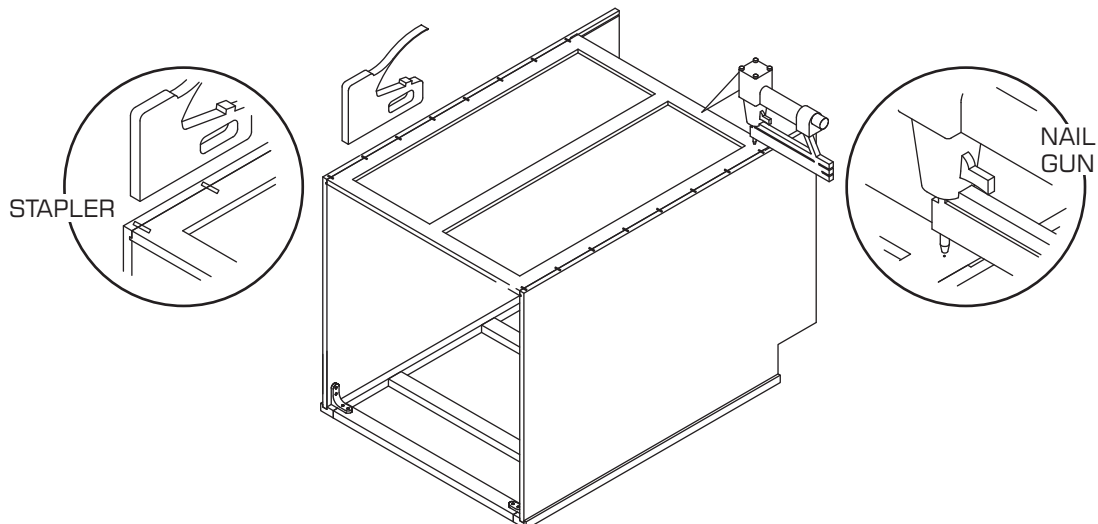


JARLIN


CABINETS

BASE 3 DRAWERS


STEP 12

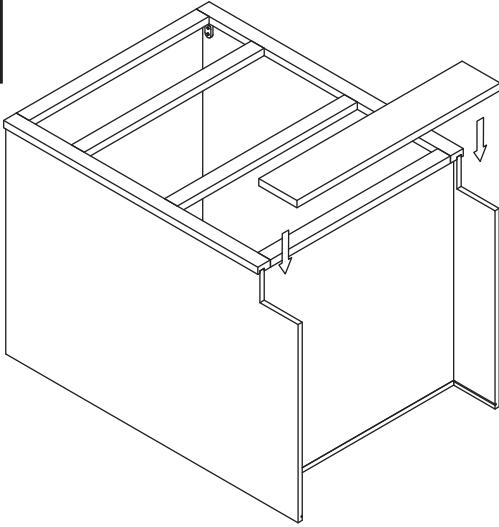


STEP 13

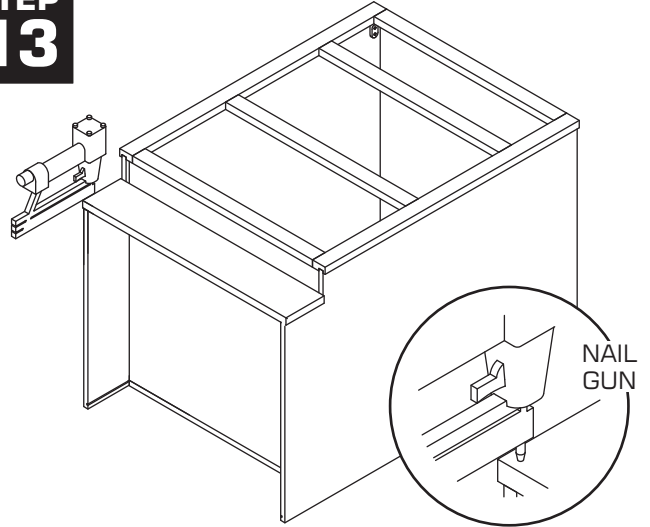


STEP 14

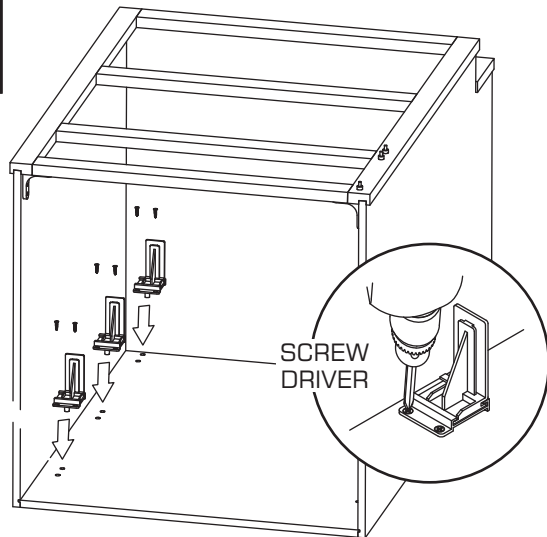


STEP 15

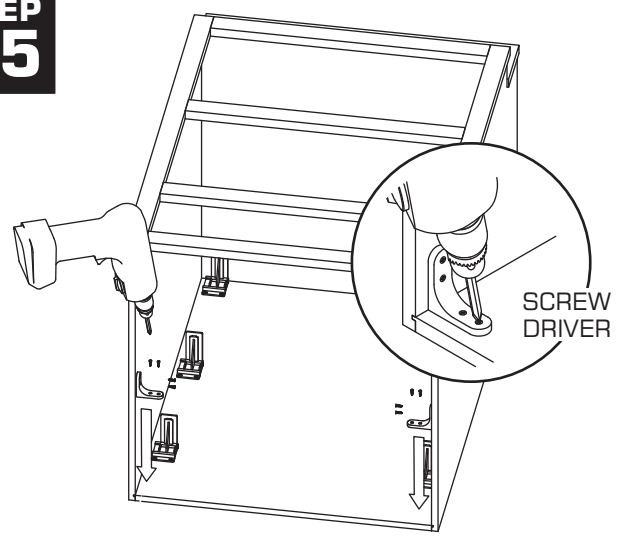

STEP 16

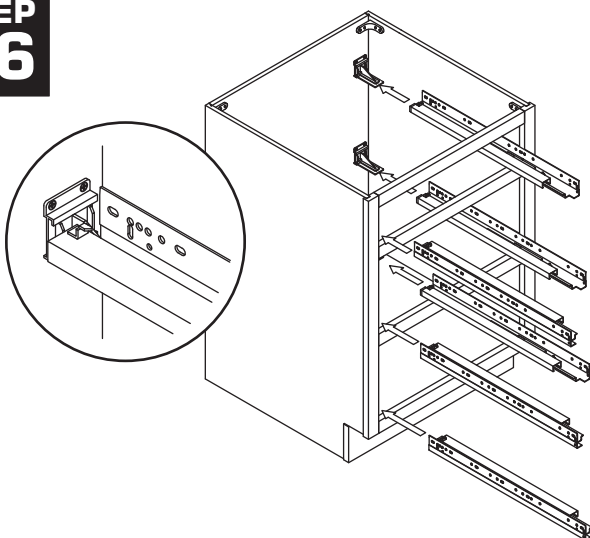


STEP 17

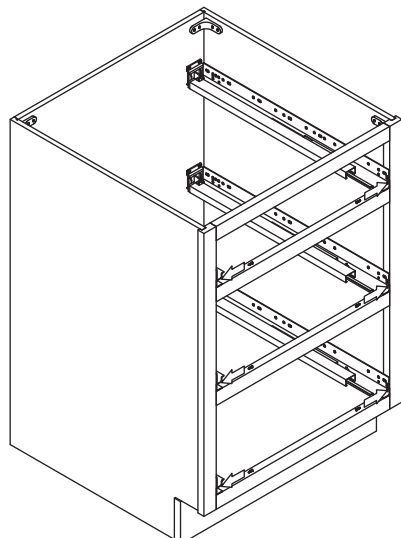


JARLIN CABINETS


**STEP
18**

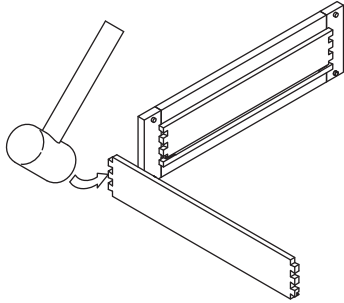


**STEP
19**

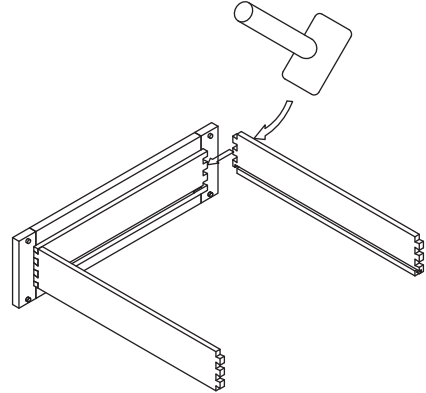


**STEP
20**

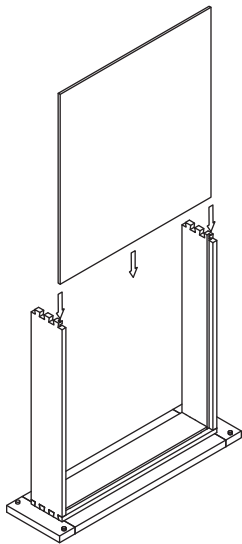

**STEP
21**

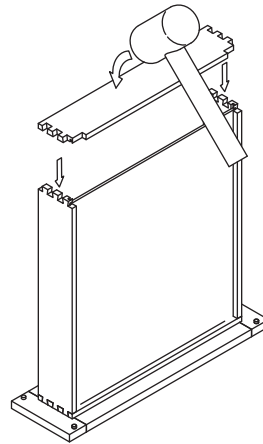


**STEP
22**

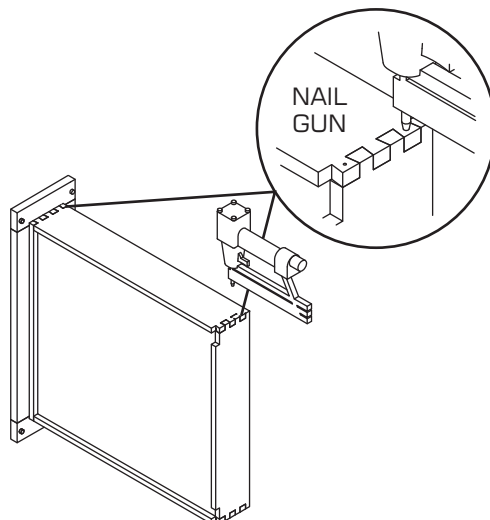


BASE 3 DRAWERS

STEP
23

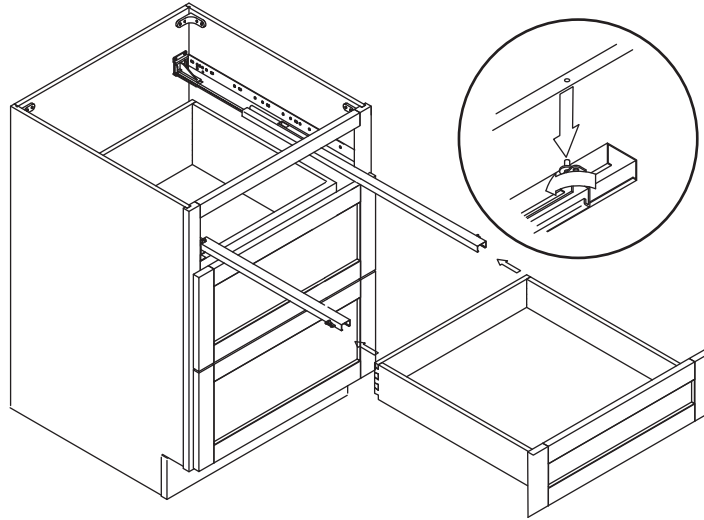


BASE 3 DRAWERS

STEP
24



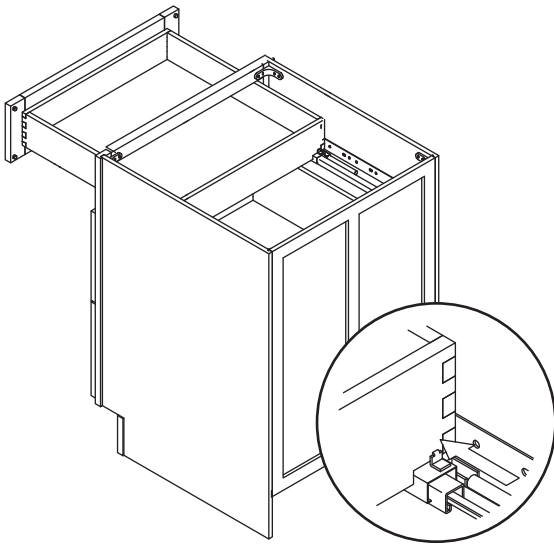


STEP
25

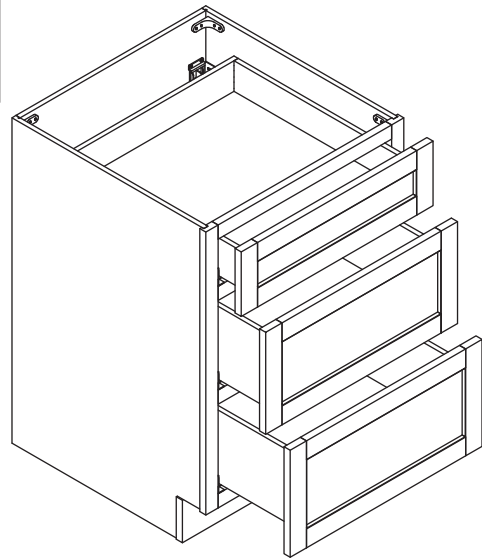

ASSEMBLING INSTRUCTIONS - WALL CABINET


WALL CABINET

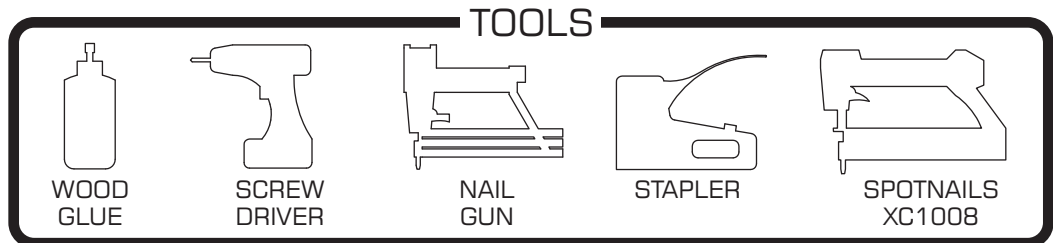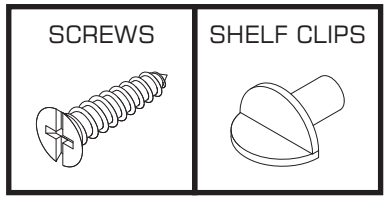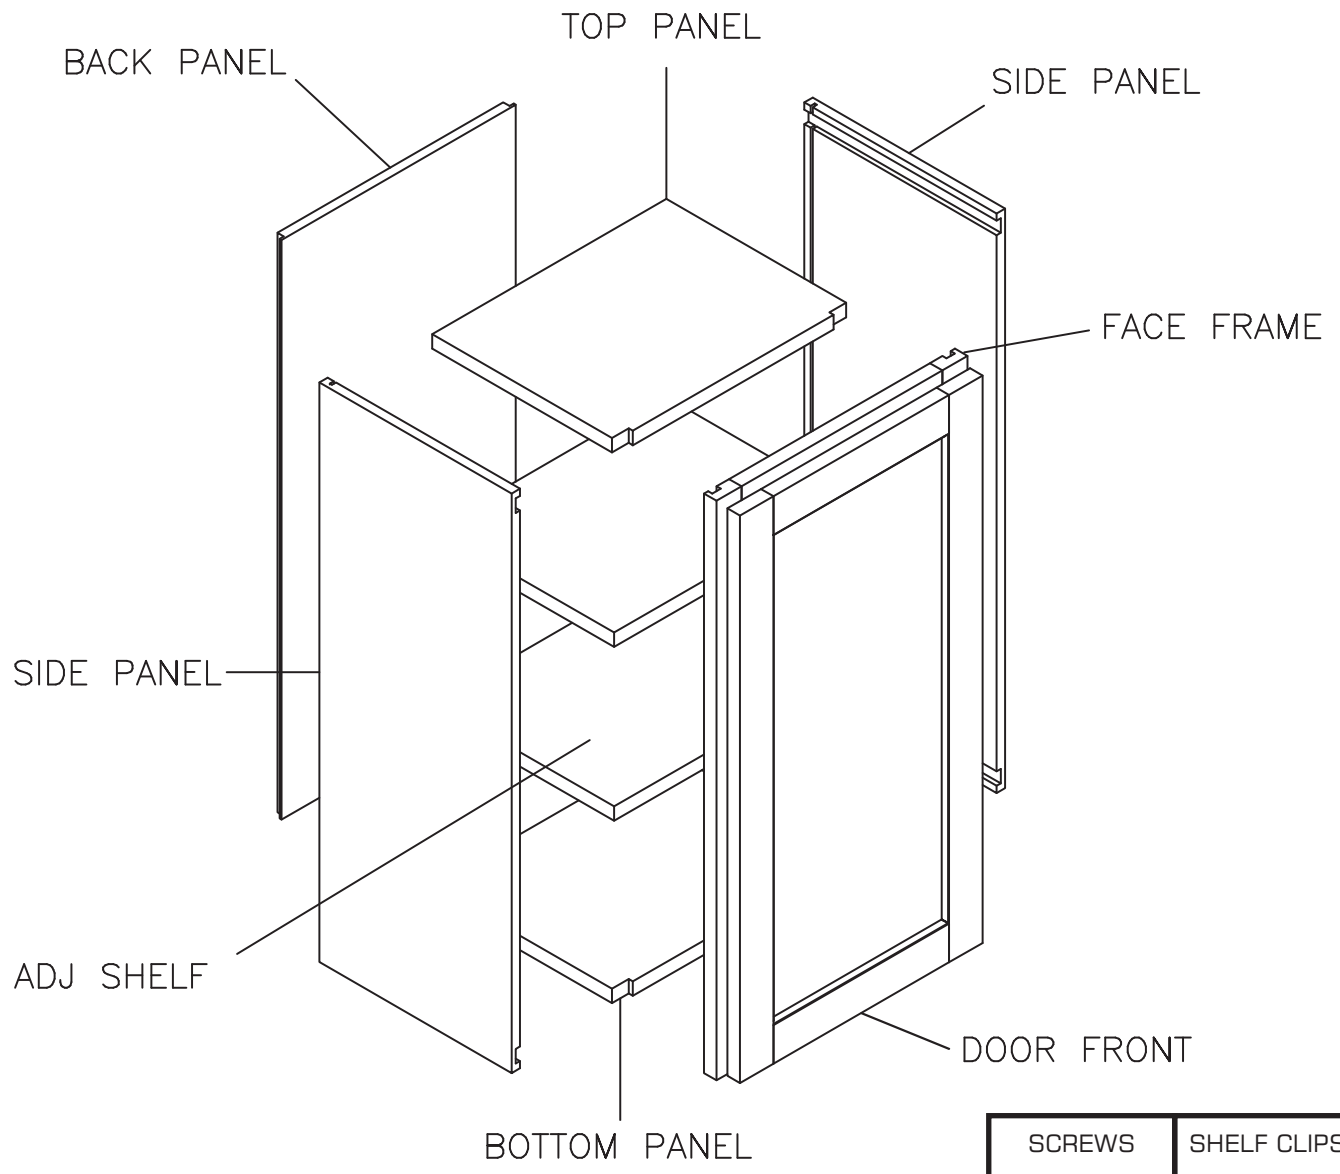


JARLIN CABINETS

WALL CABINET


STEP
1

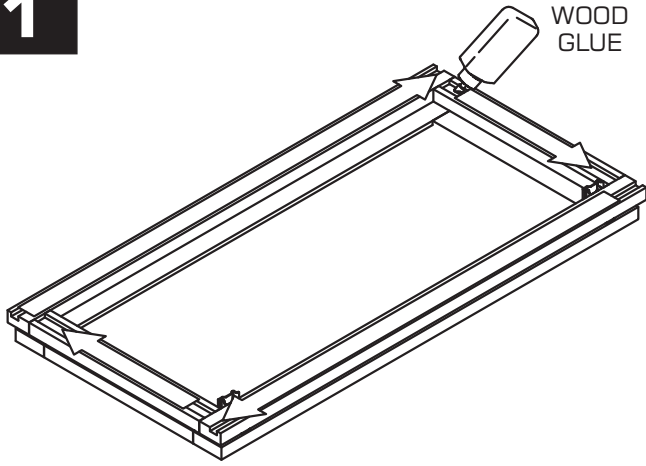


STEP
2

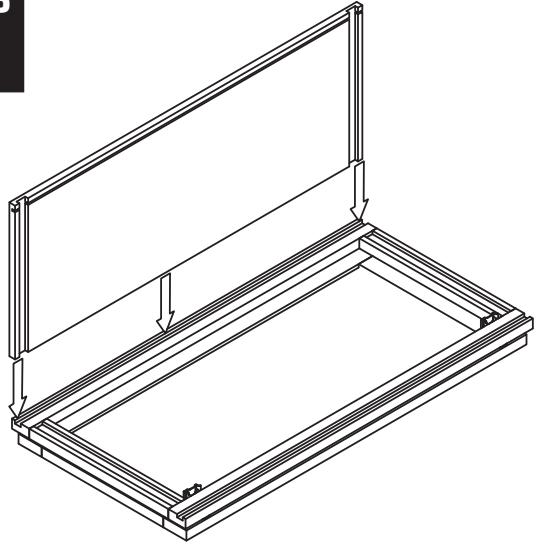


STEP
3

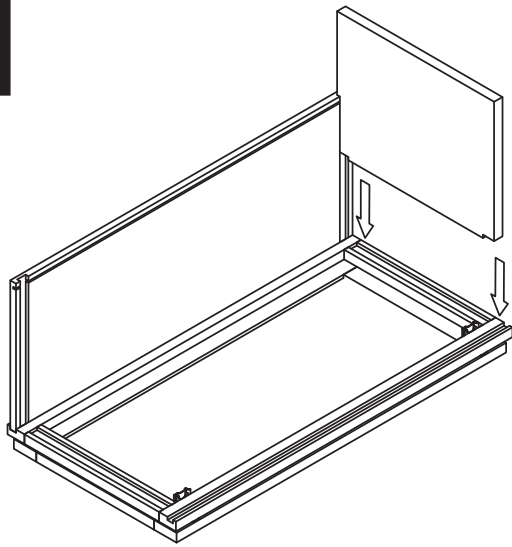


STEP
4

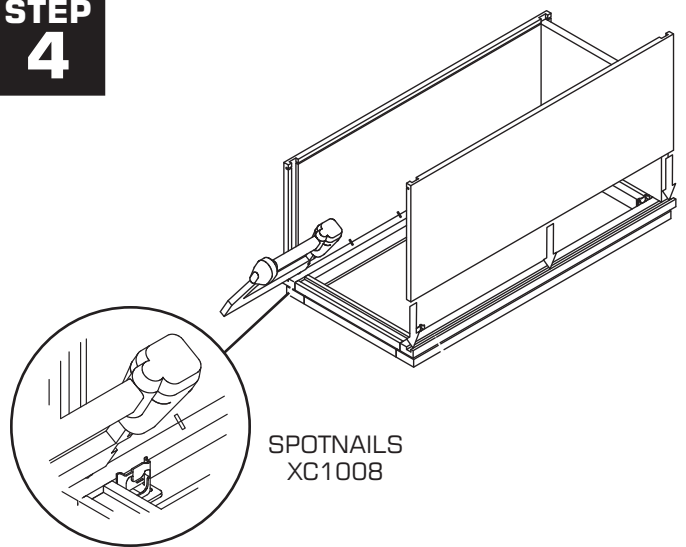

STEP
5

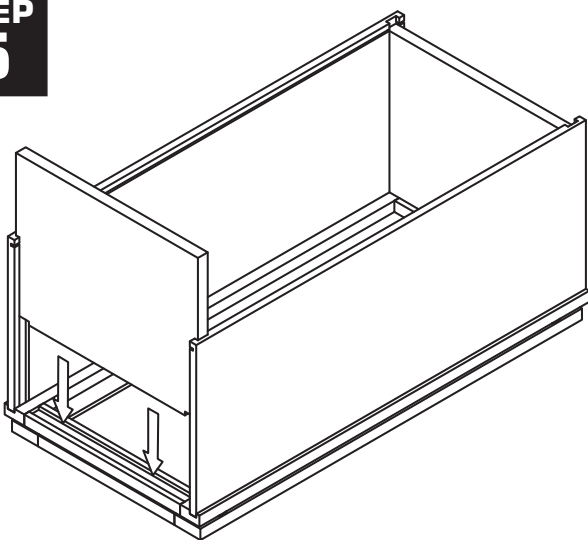

STEP
6

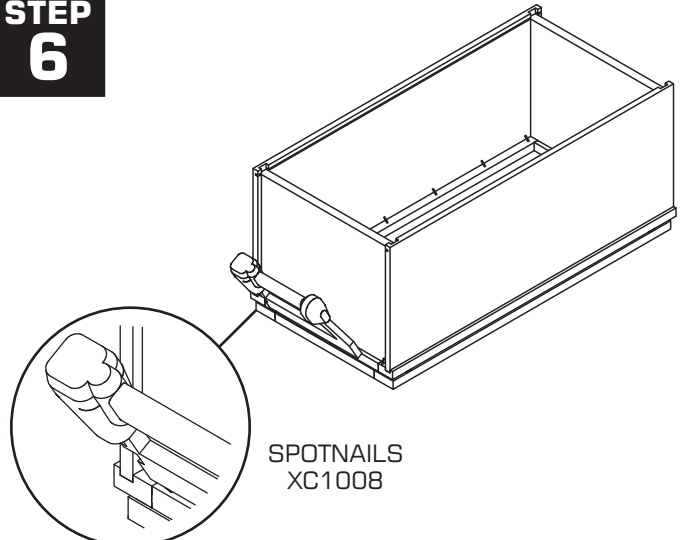


JARLIN


CABINETS

WALL CABINET


STEP 7

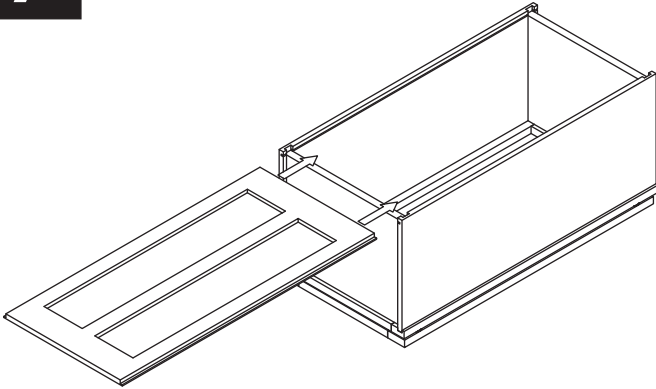


STEP 8

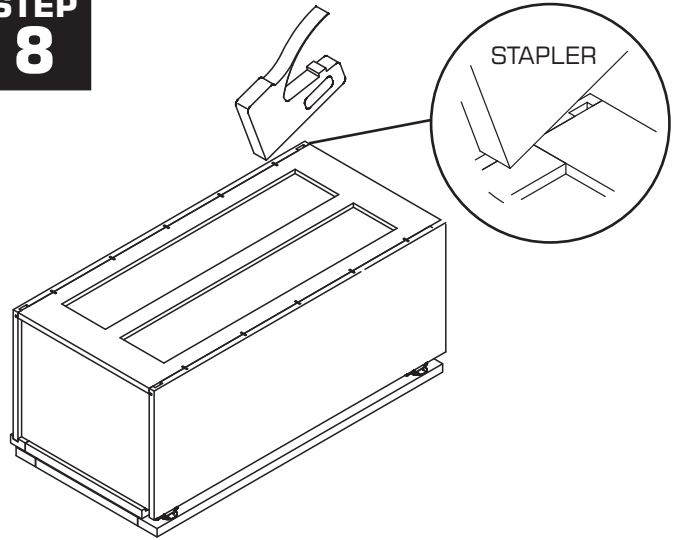


STEP 9

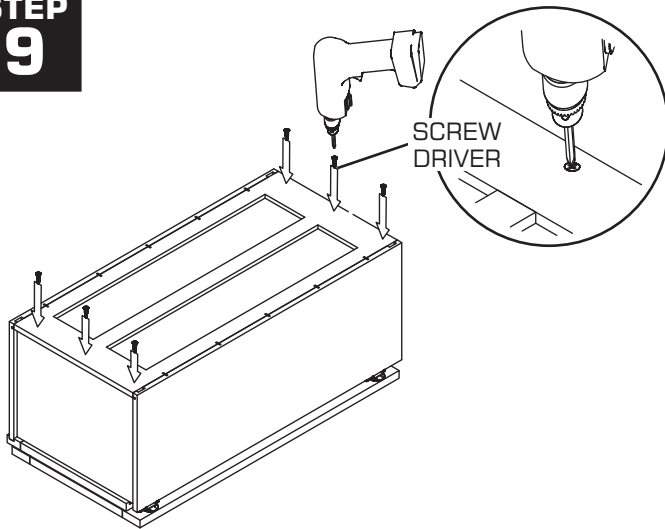

STEP 10

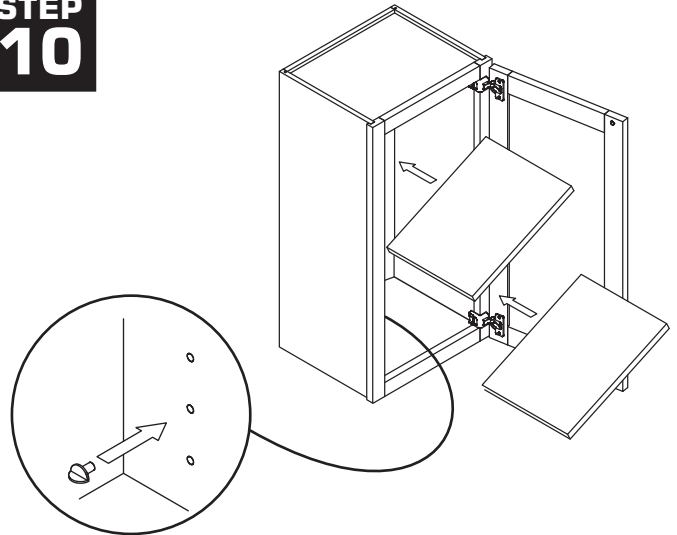


STEP 11

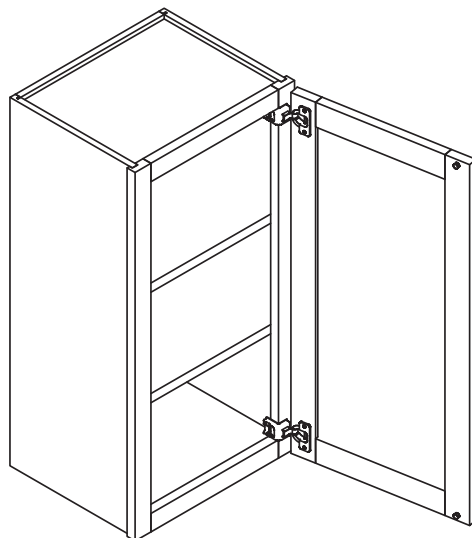

ASSEMBLING INSTRUCTIONS - WALL DIAGONAL CORNER CABINET

WALL DIAGONAL CORNER CABINET

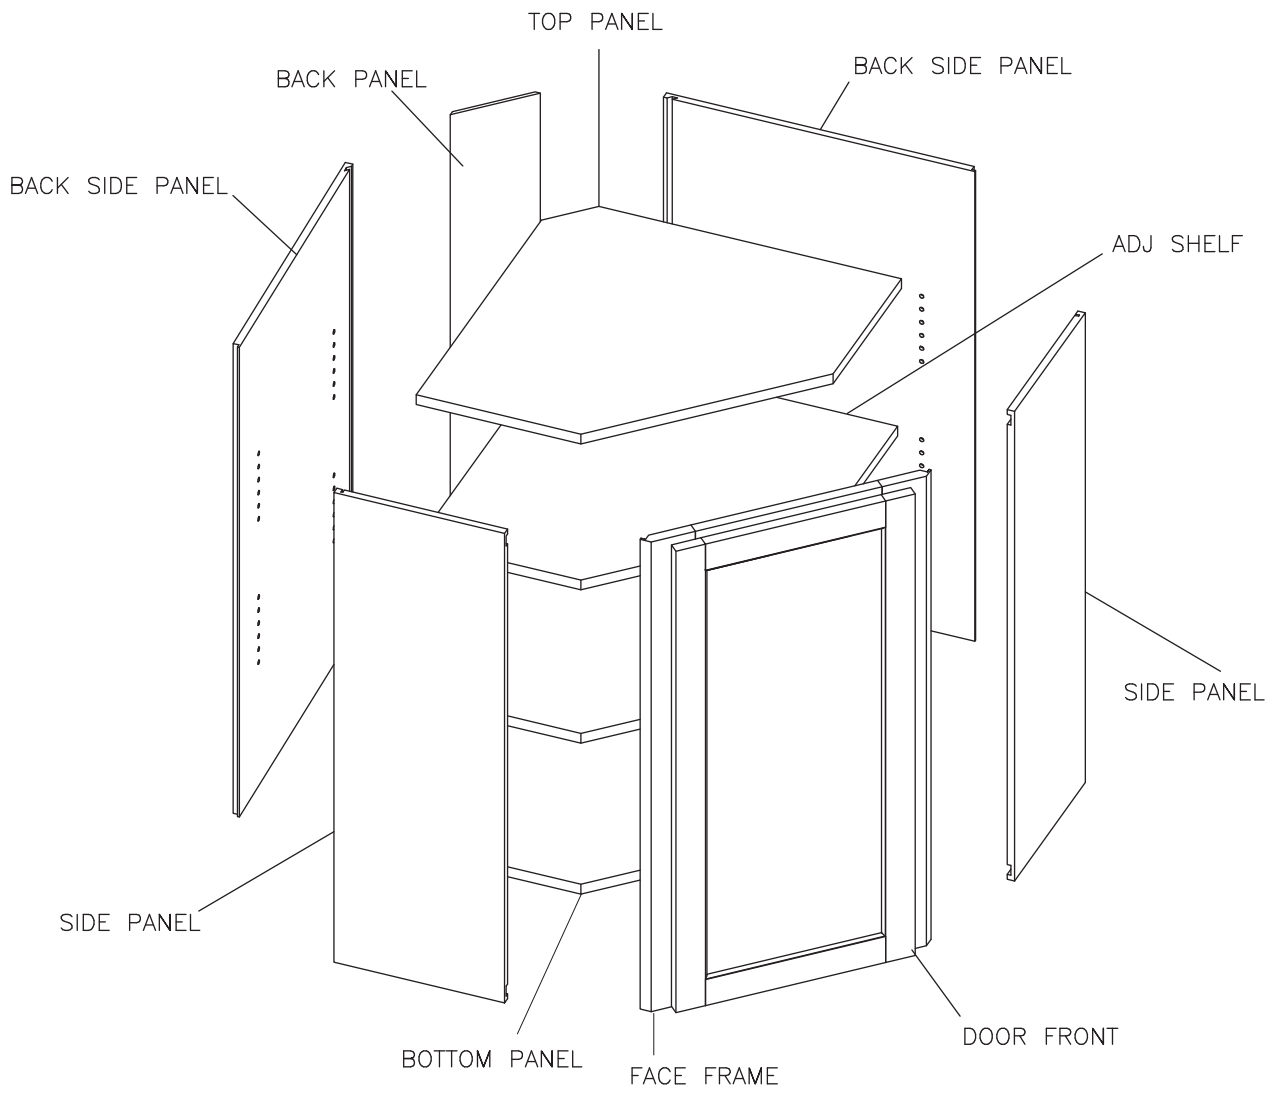

<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>SHELF CLIPS</p>
-----------------------	---------------	--------------------

TOOLS


<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>
------------------	---------------------	-----------------	----------------	-------------------------

JARLIN


CABINETS

WALL DIAGONAL CORNER CABINET


STEP 1

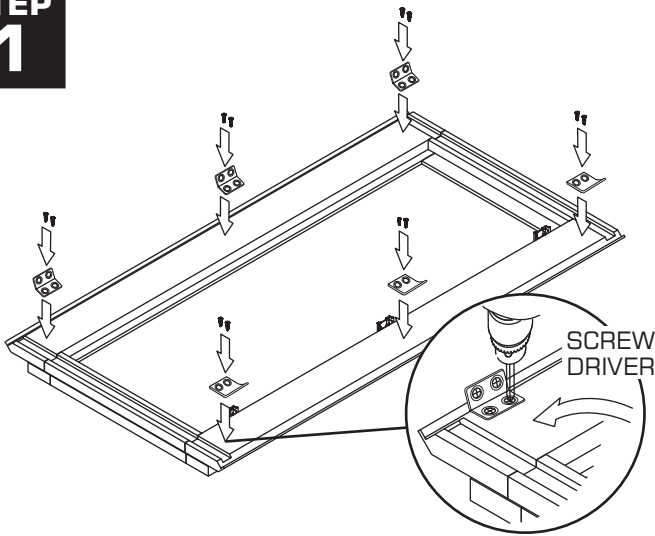


STEP 2

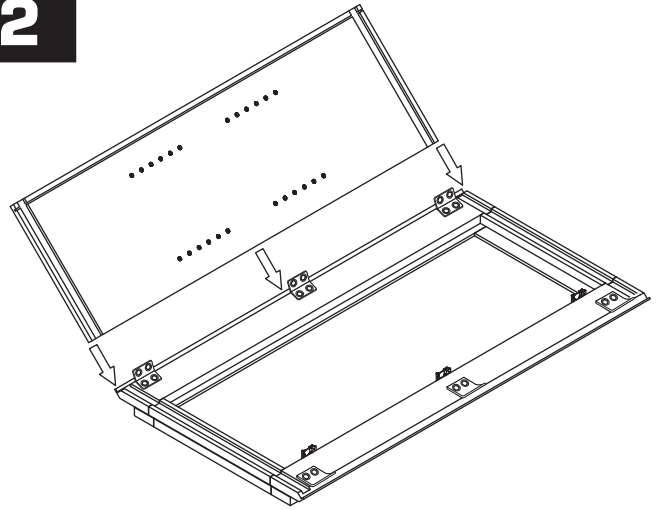


STEP 3

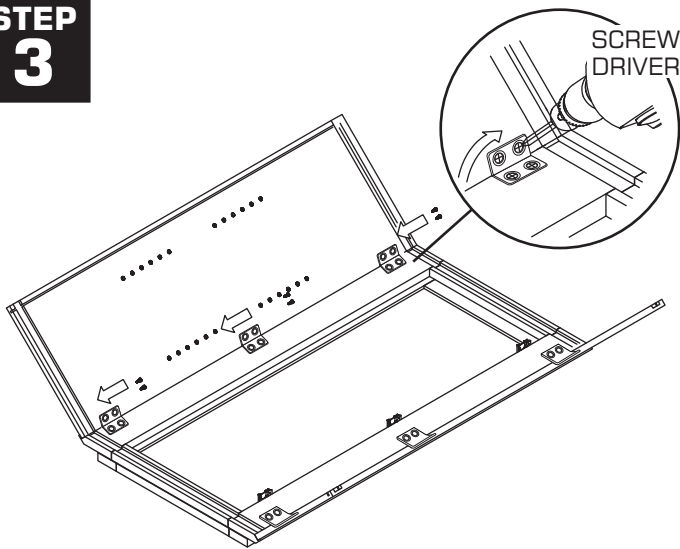


STEP 4

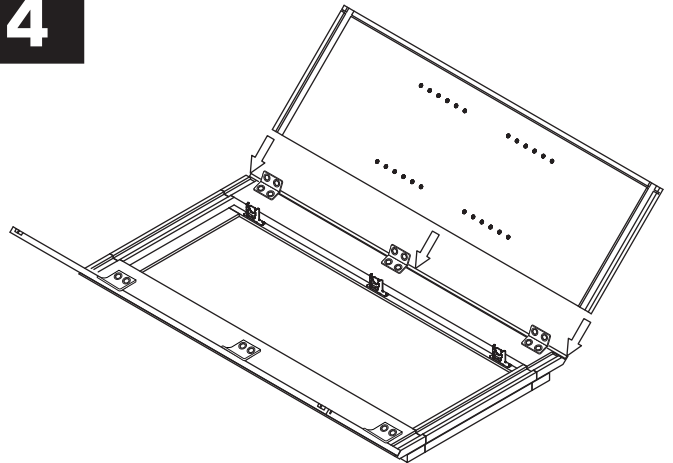

STEP 5

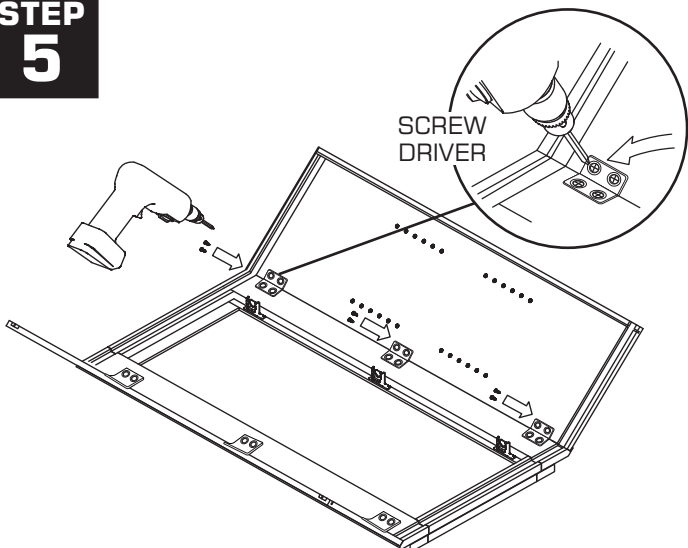


STEP 6

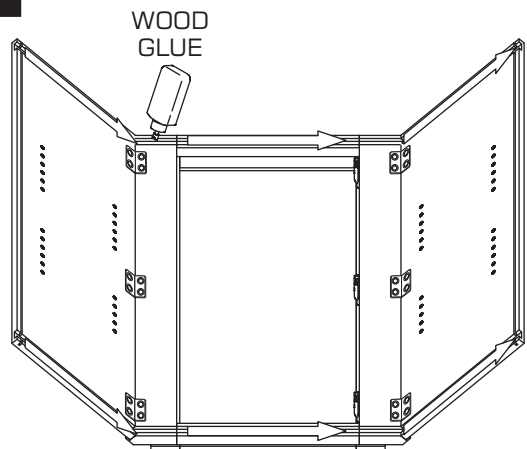


JARLIN CABINETS


**STEP
7**

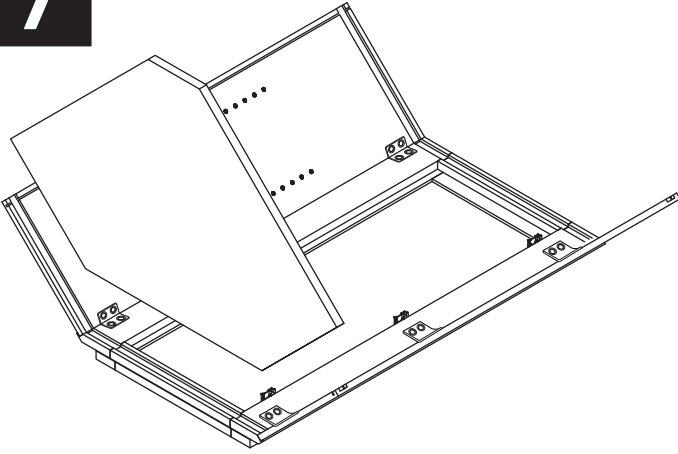


**STEP
8**

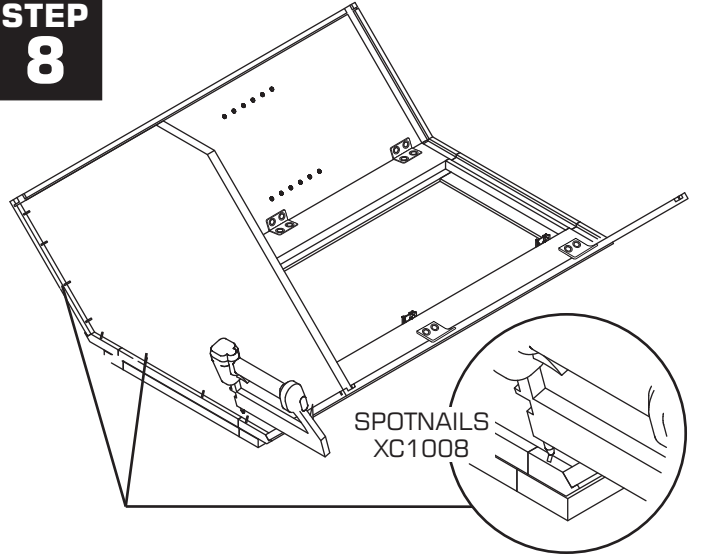


**STEP
9**

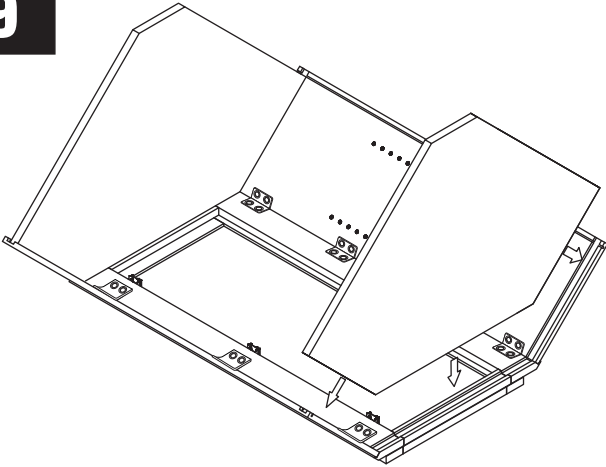

**STEP
10**

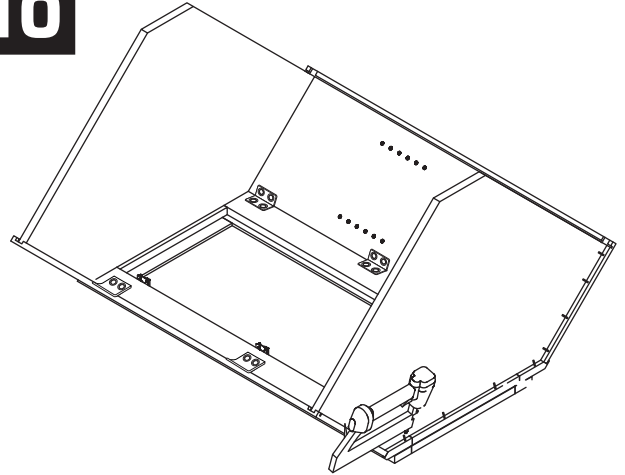

**STEP
11**

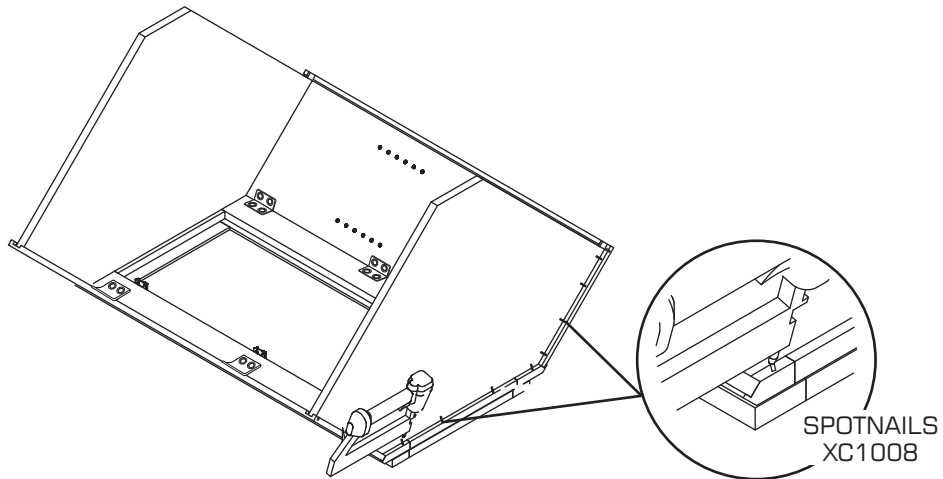


WALL DIAGONAL CORNER CABINET


JARLIN

CABINETS


STEP 12

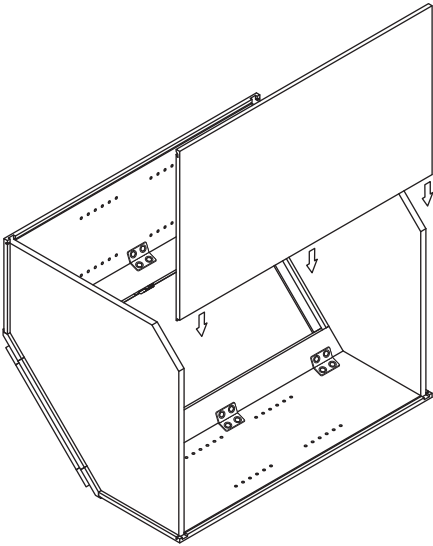


STEP 13

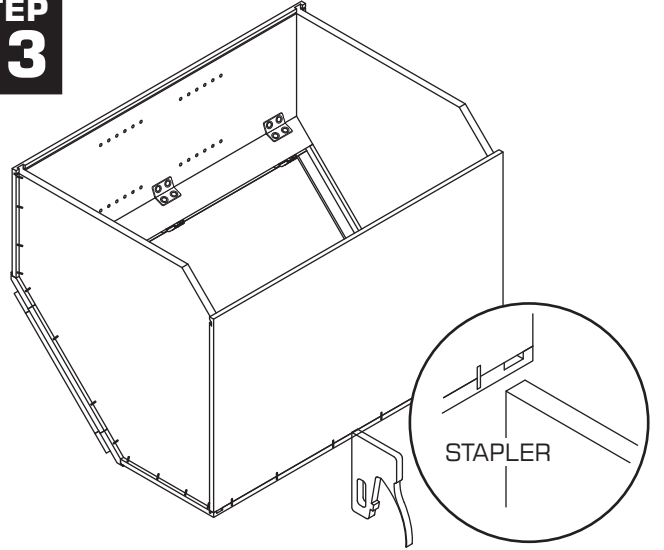


STEP 14

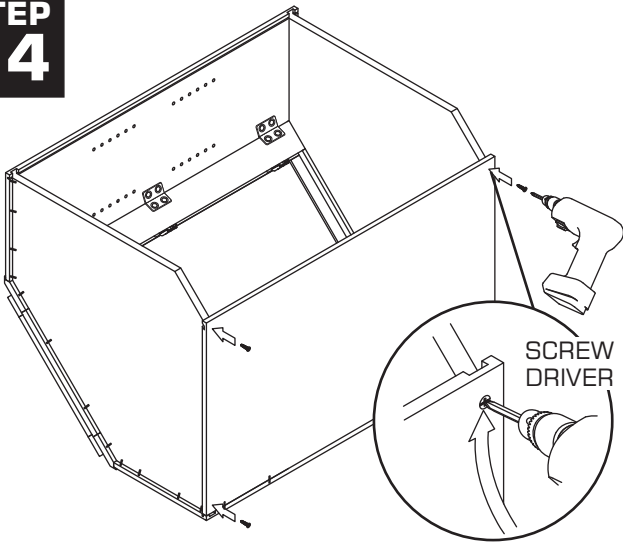


STEP 15

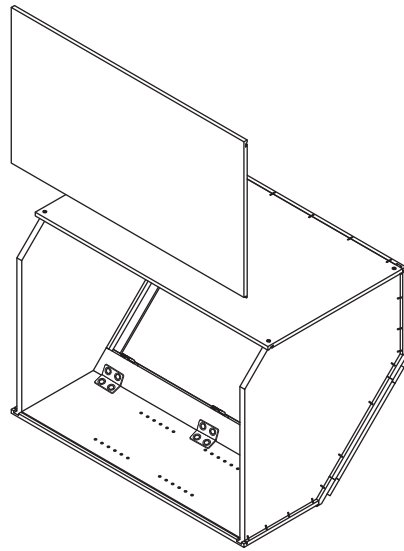

STEP 16

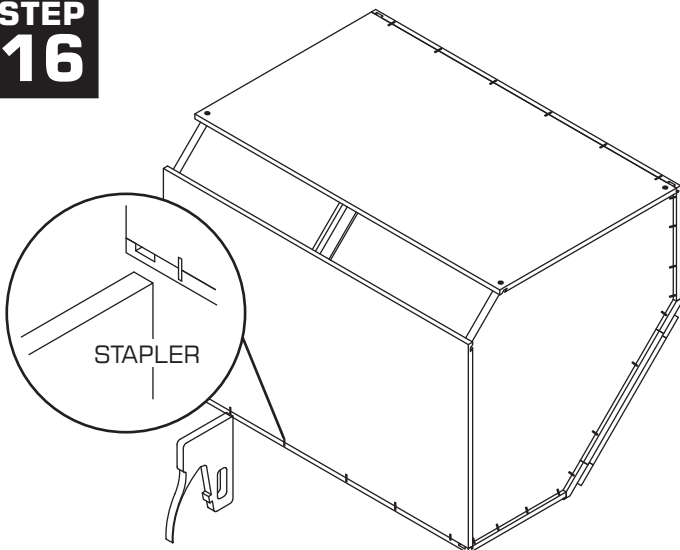


STEP 17

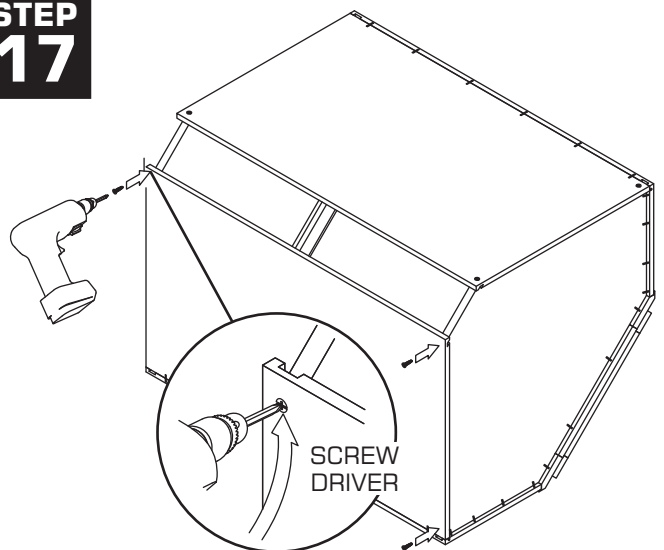


WALL DIAGONAL CORNER CABINET

JARLIN CABINETS


**STEP
18**

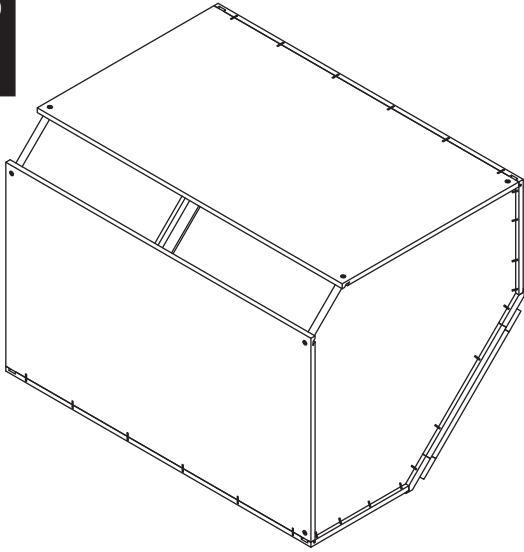


**STEP
19**

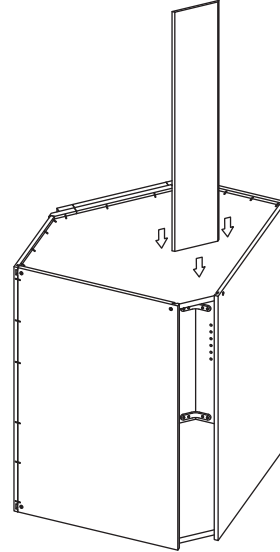


**STEP
20**

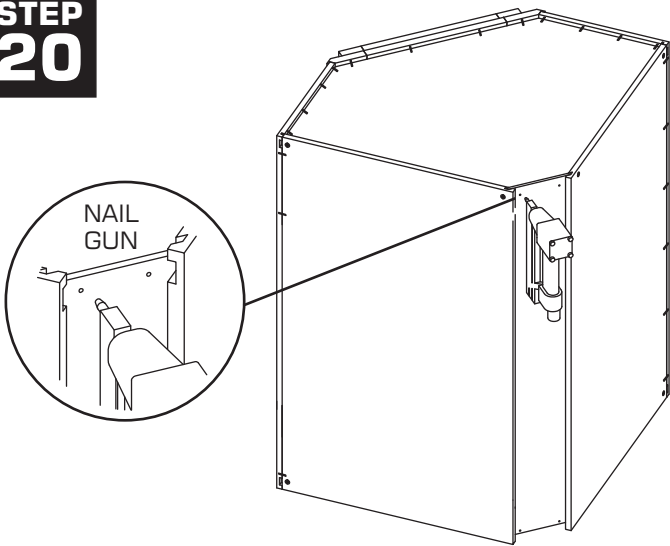

**STEP
21**

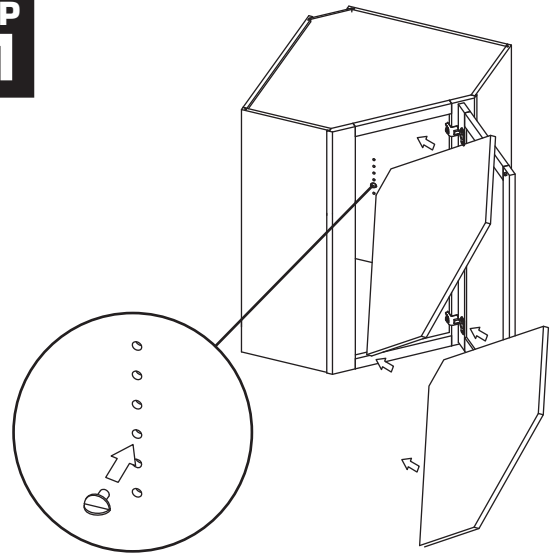


**STEP
22**

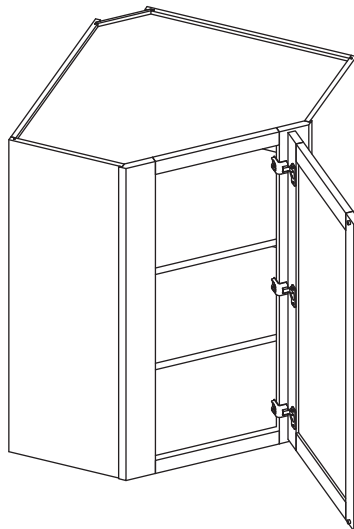

WALL DIAGONAL CORNER CABINET

ASSEMBLING INSTRUCTIONS - TALL PANTRY

PANTRY

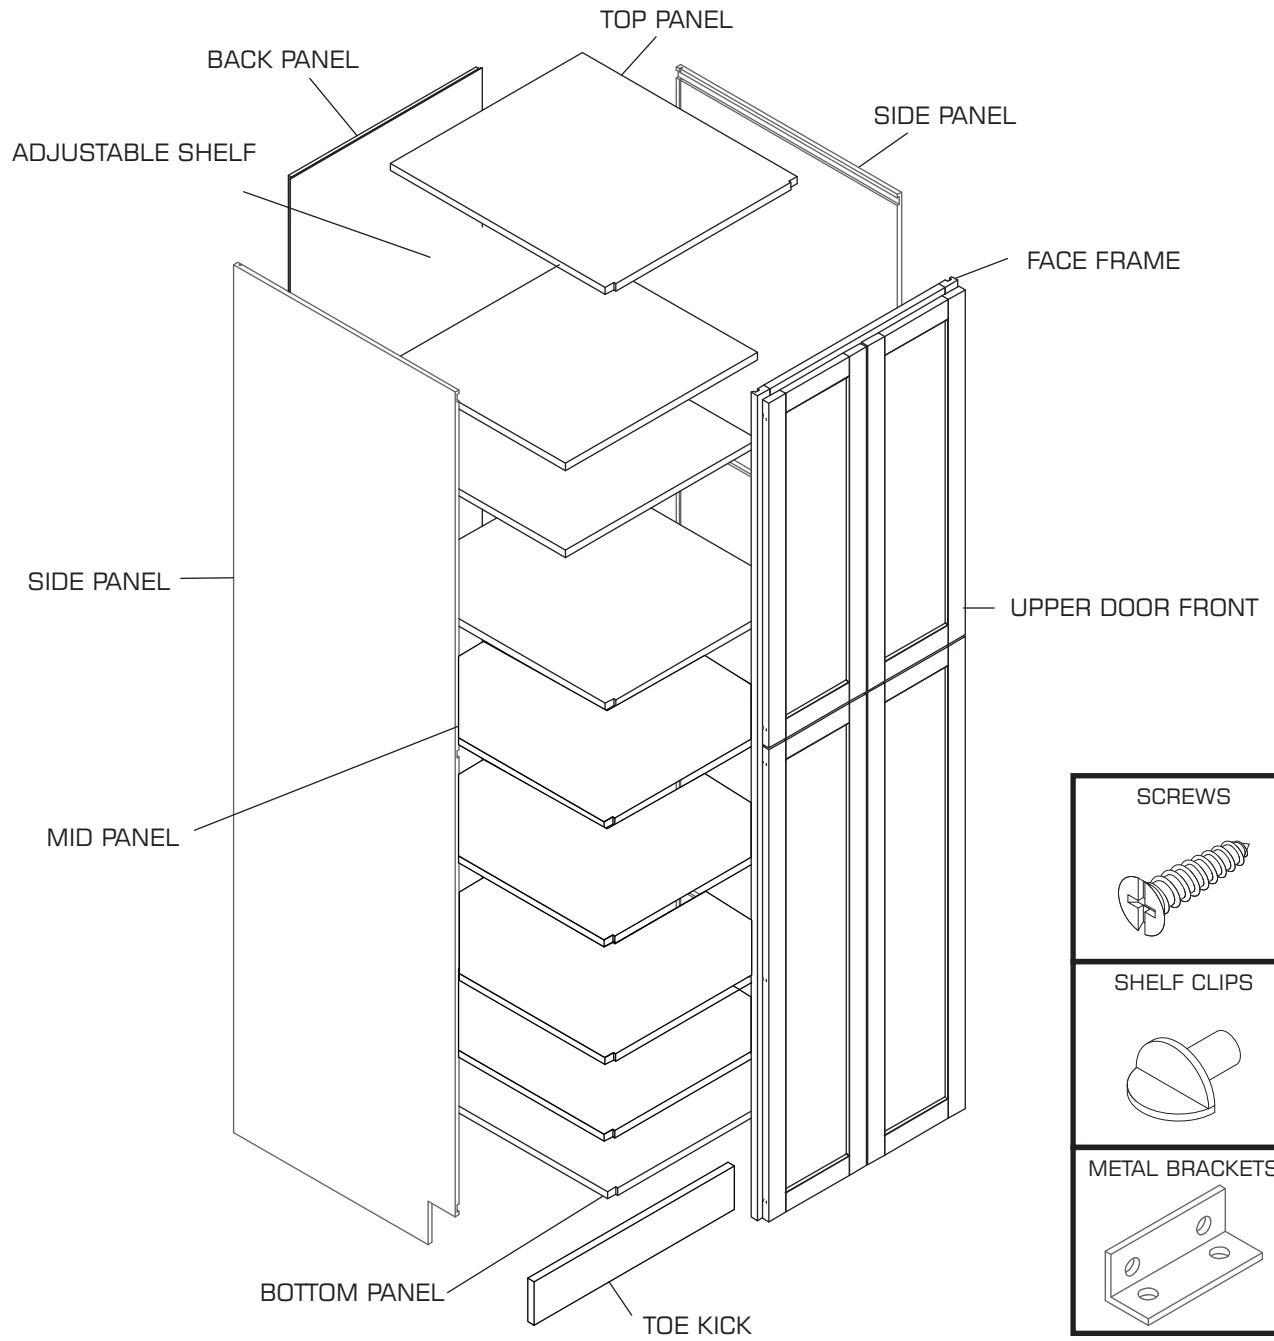

- SCREWS
- SHELF CLIPS
- METAL BRACKETS


TOOLS

- 
WOOD GLUE
- 
SCREW DRIVER
- 
RUBBER Mallet
- 
NAIL GUN
- 
STAPLER
- 
SPOTNAILS XC1008


JARLIN CABINETS

PANTRY


**STEP
1**

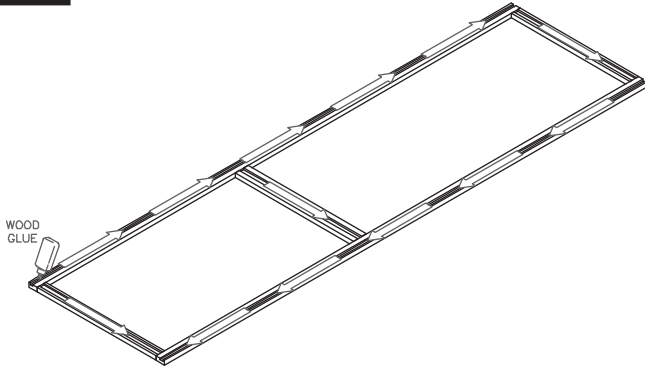


**STEP
2**

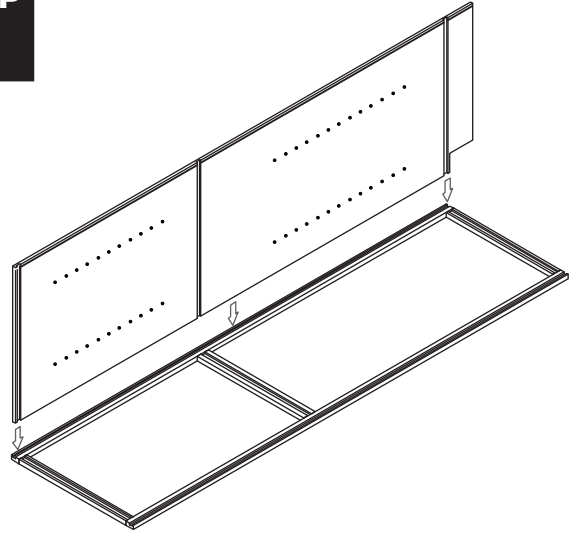


**STEP
3**

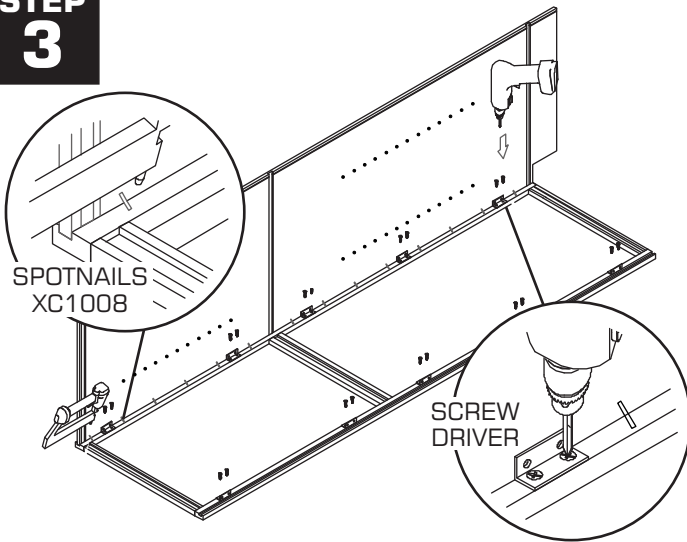


**STEP
4**

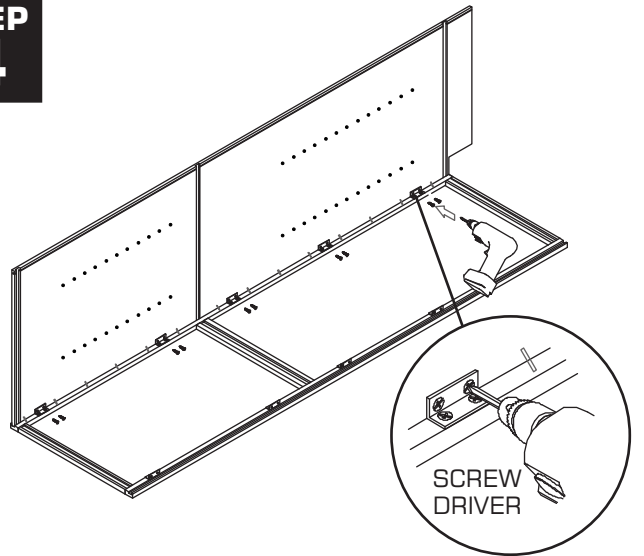

**STEP
5**

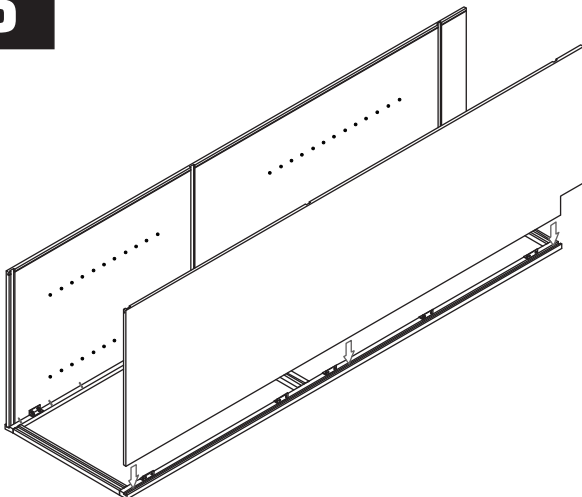


**STEP
6**

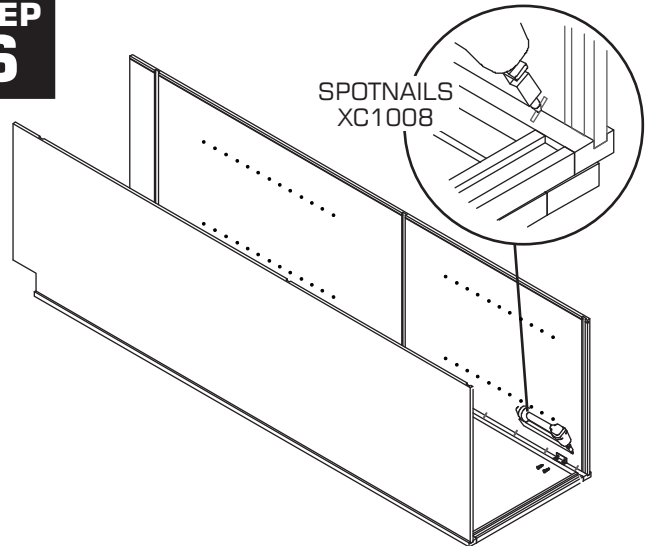


JARLIN CABINETS

PANTRY


STEP
7

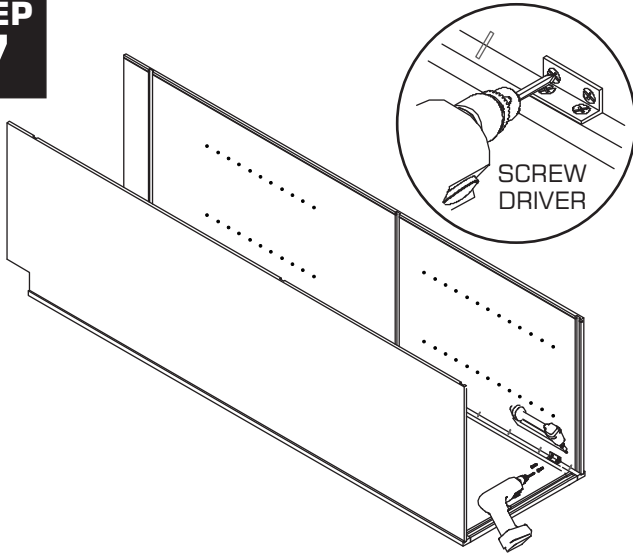


STEP
8

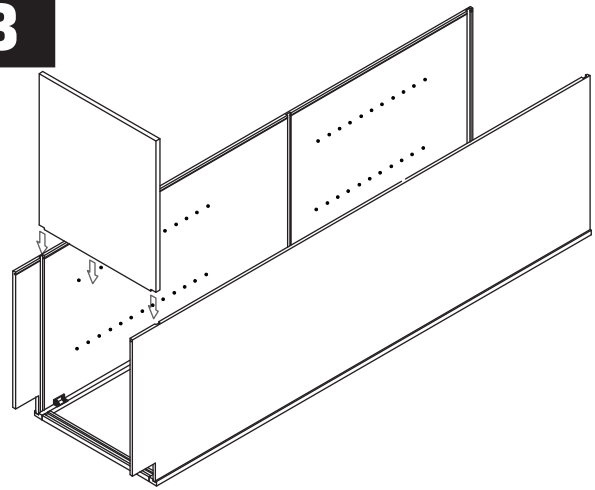


STEP
9

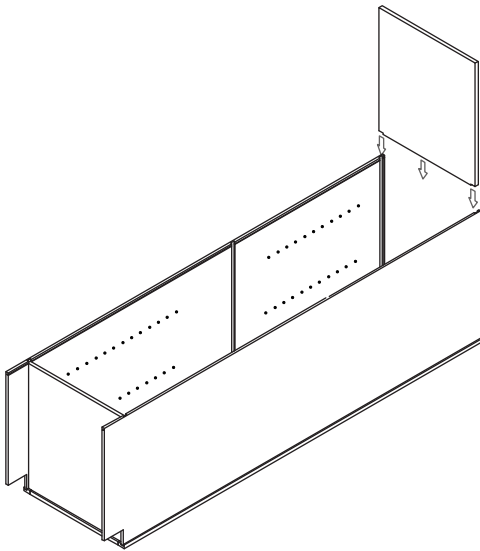

STEP
10

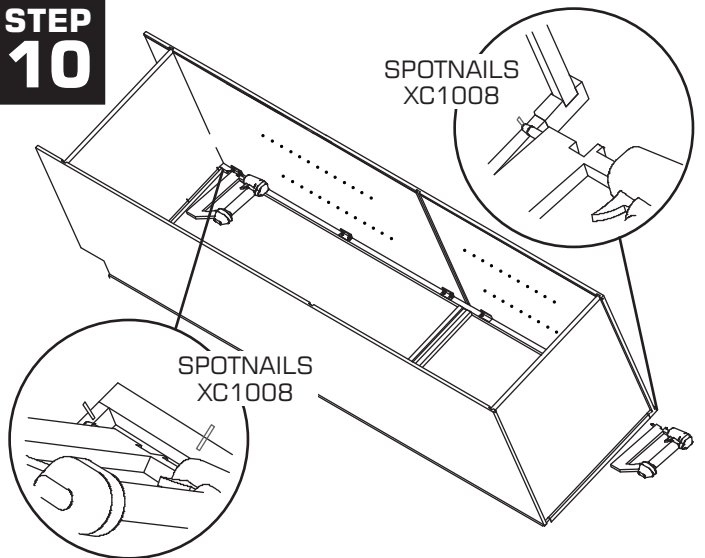

STEP
11

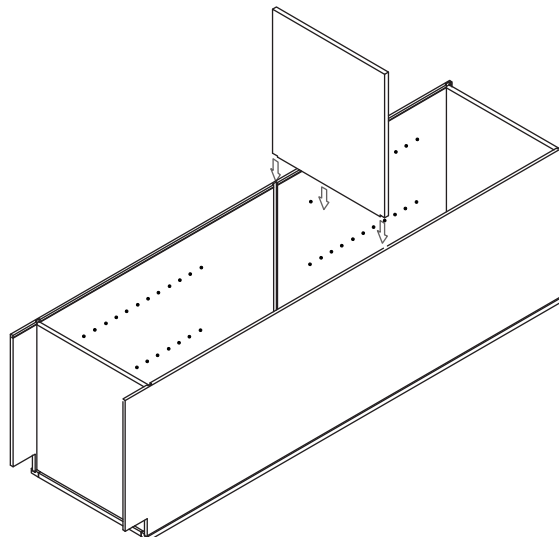


JARLIN


CABINETS

PANTRY


STEP
12

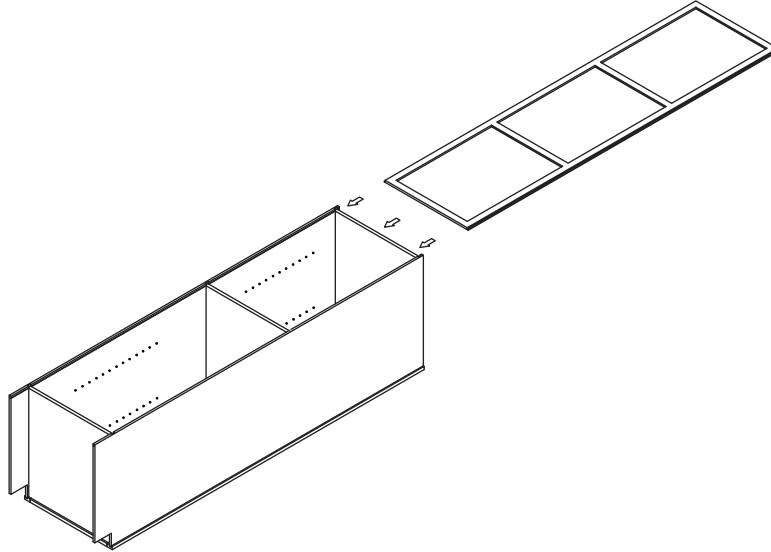


STEP
13

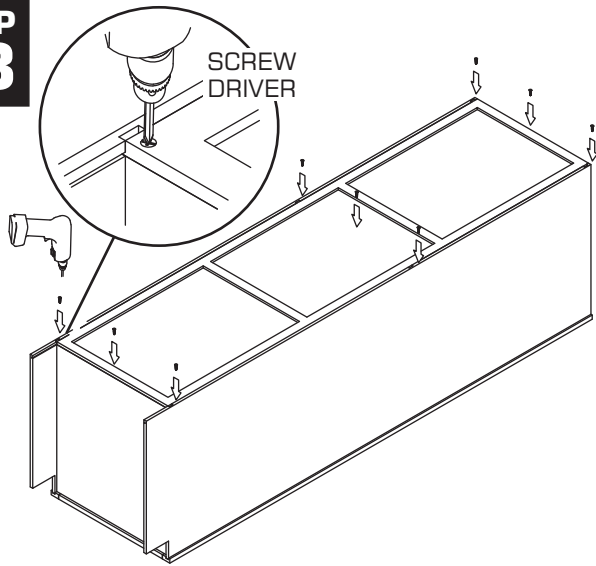


STEP
14

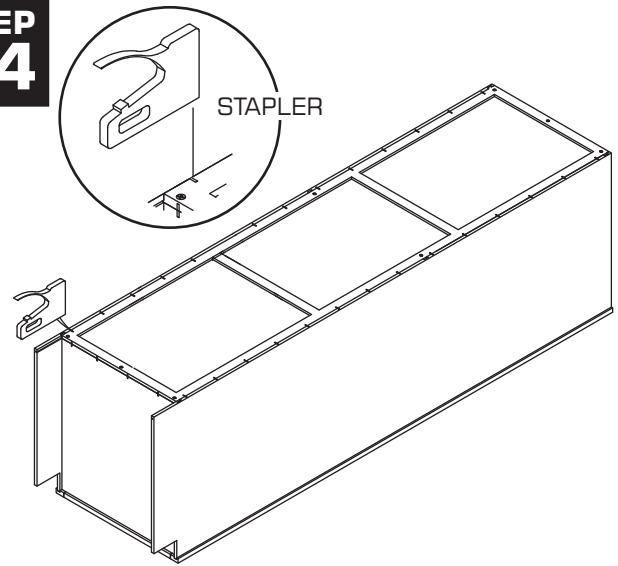

STEP
15

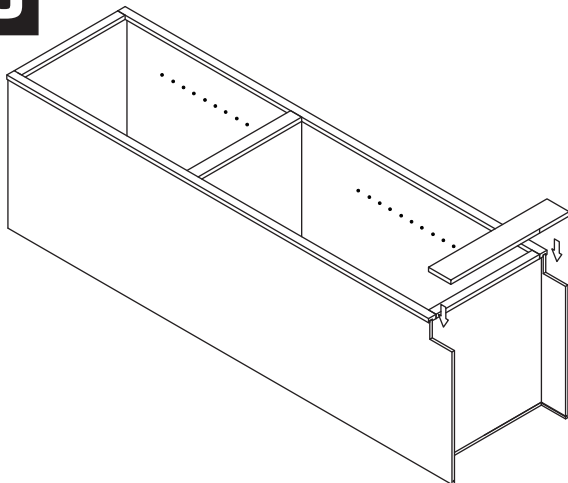


STEP
16

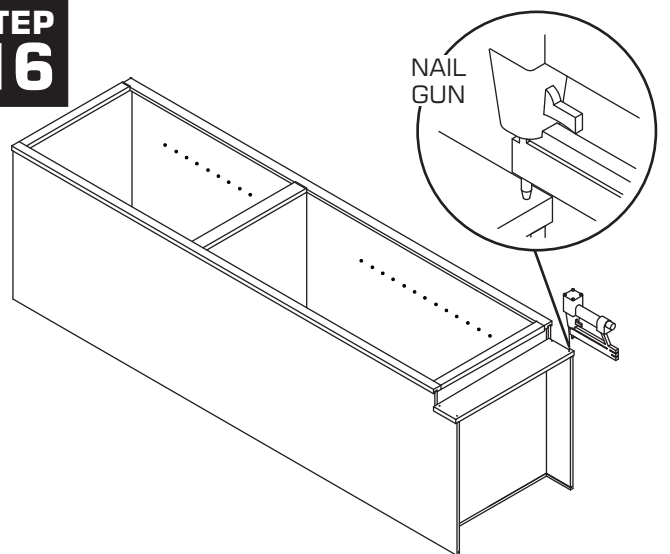


JARLIN CABINETS

**STEP
17**

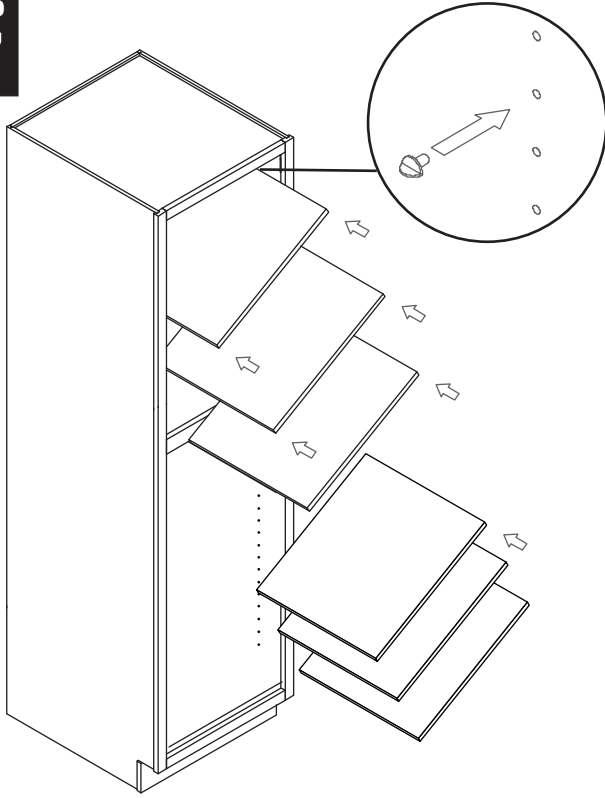


**STEP
18**

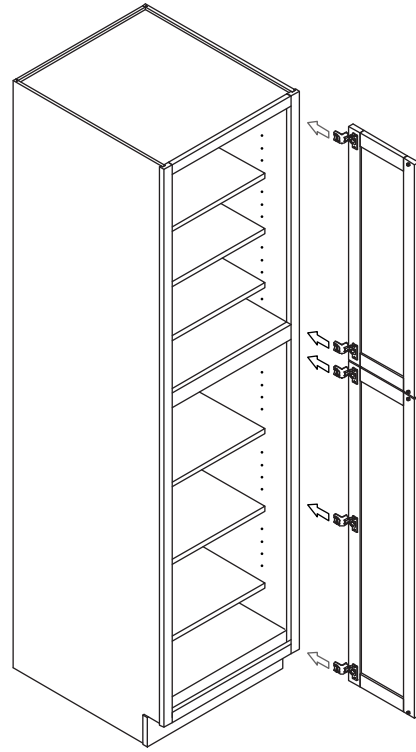


PANTRY

**STEP
19**

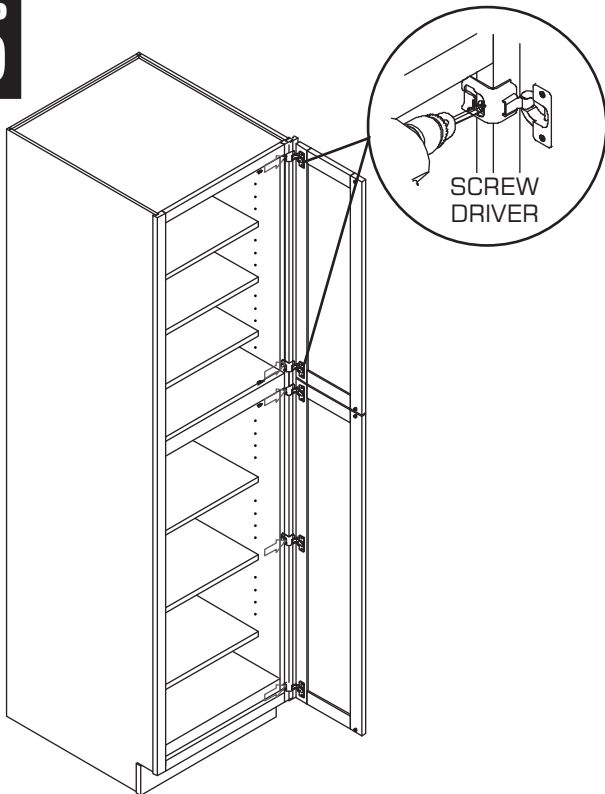


**STEP
20**

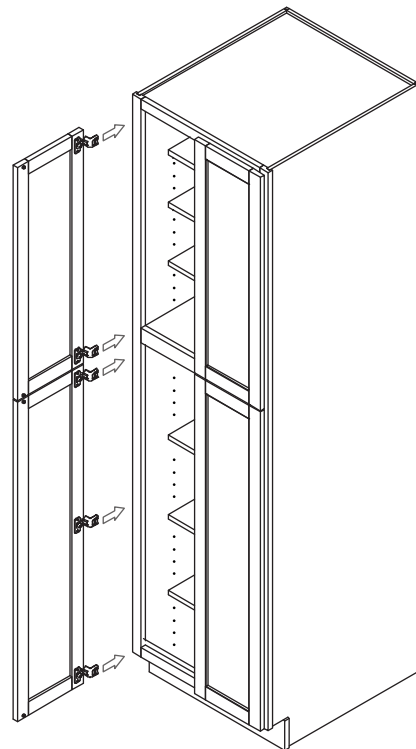


JARLIN CABINETS

**STEP
21**

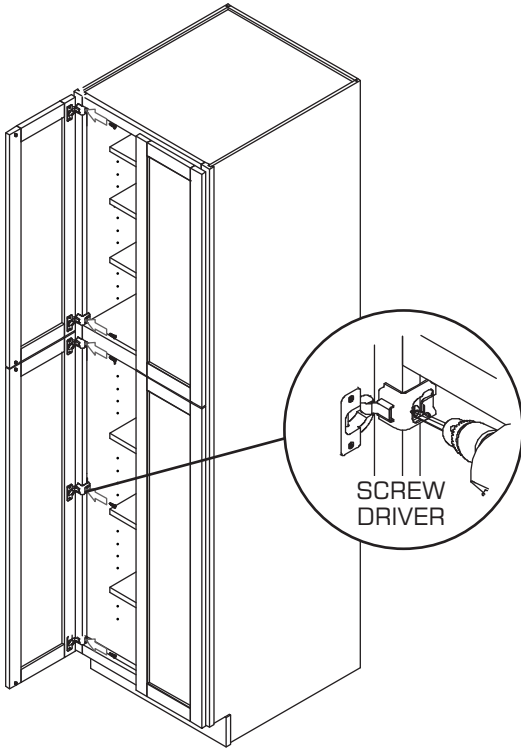


**STEP
22**

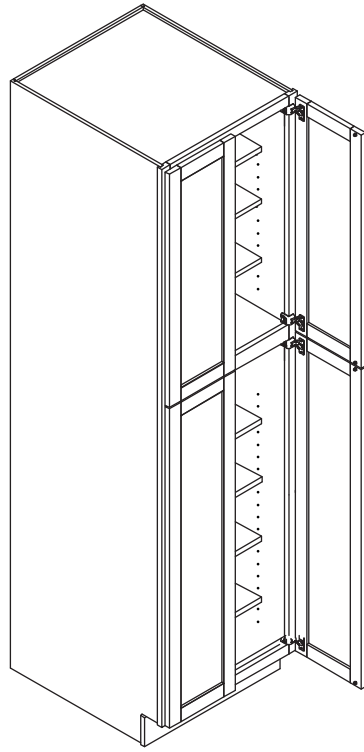

PANTRY

ASSEMBLING INSTRUCTIONS - OVEN CABINET

OVEN CABINET

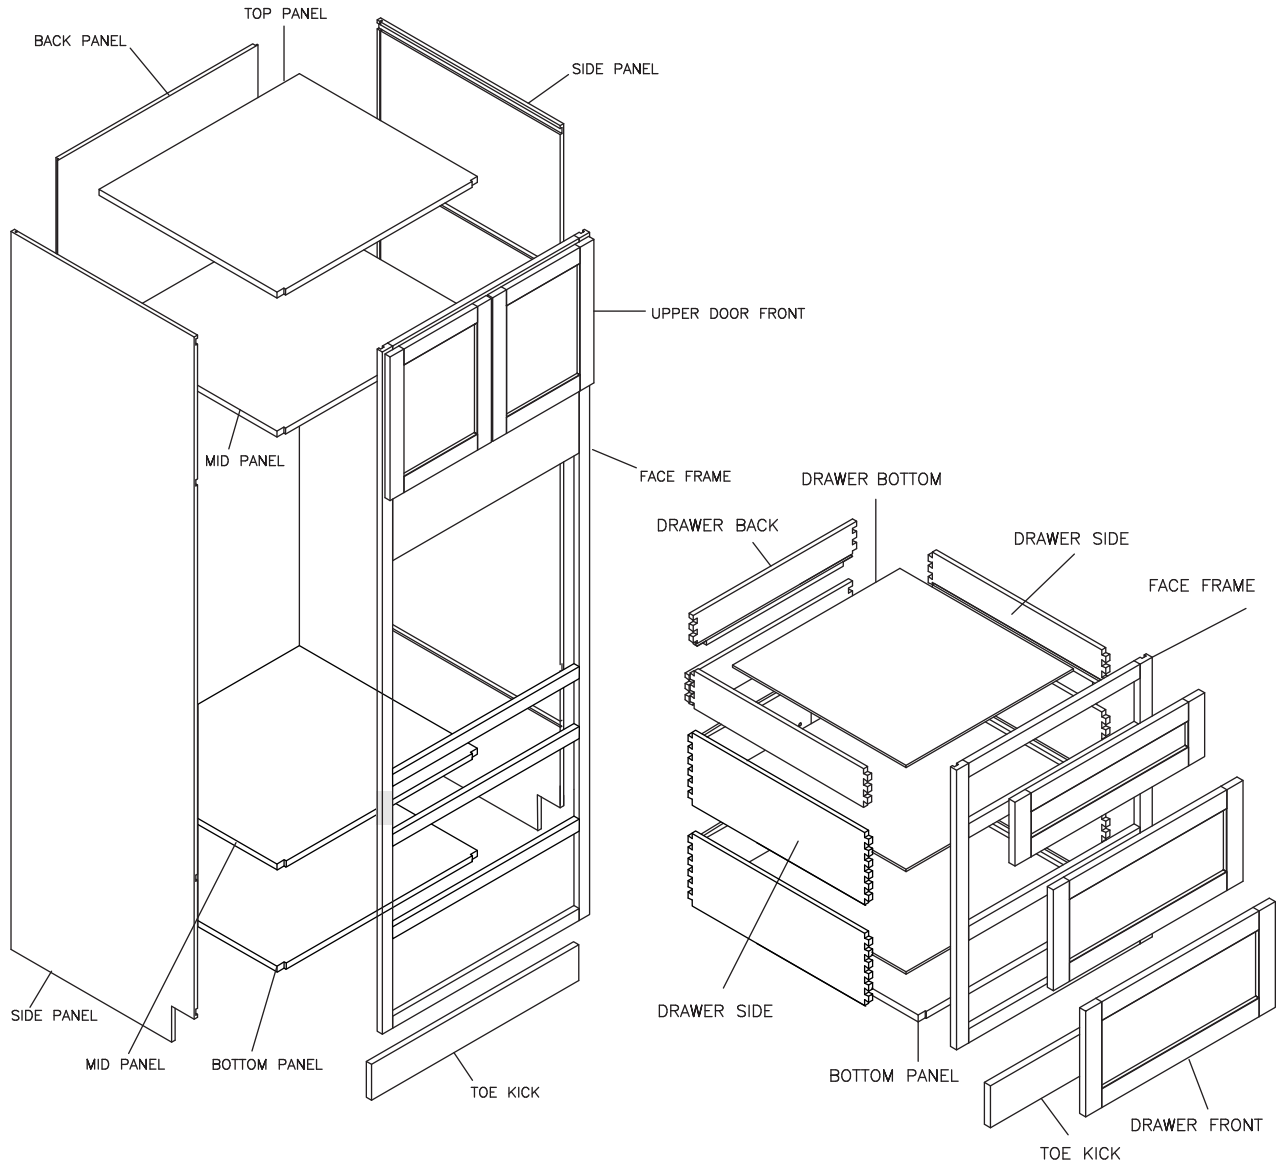


<p>GLIDES</p>	<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>GLIDE SUPPORTS</p>
---------------	-----------------------	---------------	-----------------------

TOOLS					
<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>


JARLIN CABINETS

OVEN CABINET


STEP
1

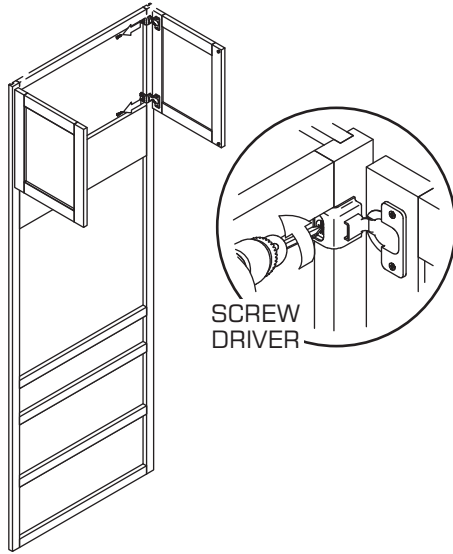


STEP
2

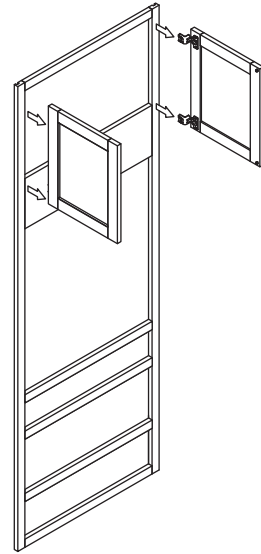


STEP
3

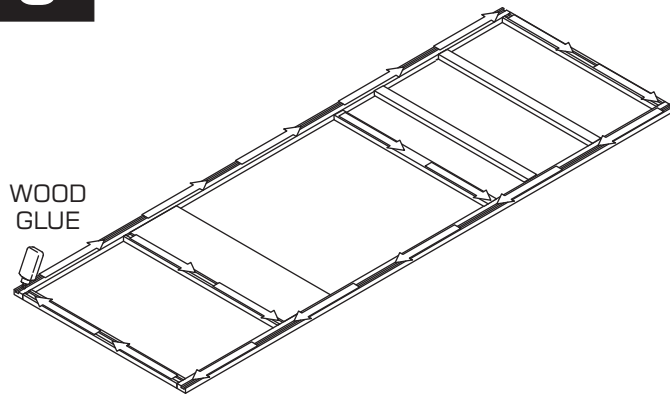


STEP
4

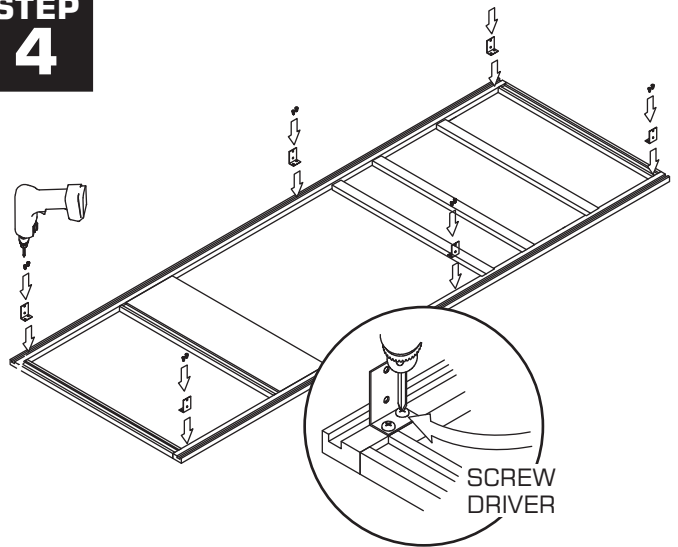

STEP
5

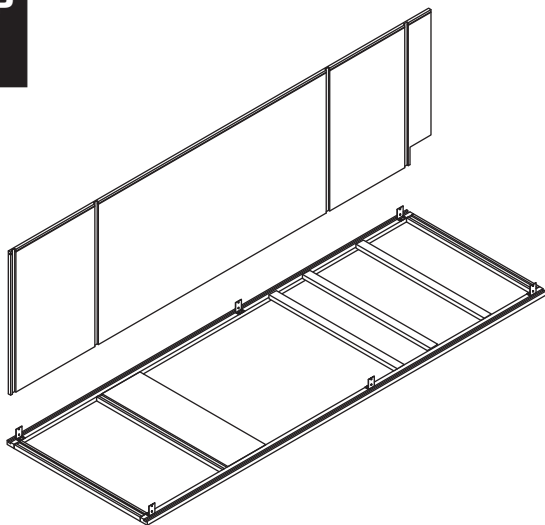


STEP
6

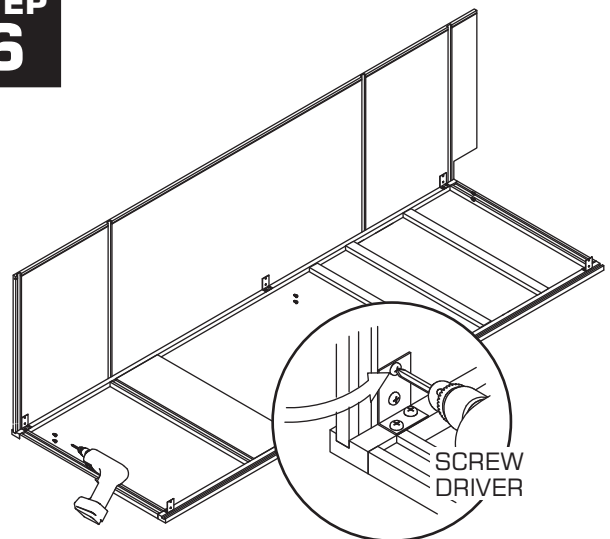


JARLIN CABINETS

OVEN CABINET


STEP
7

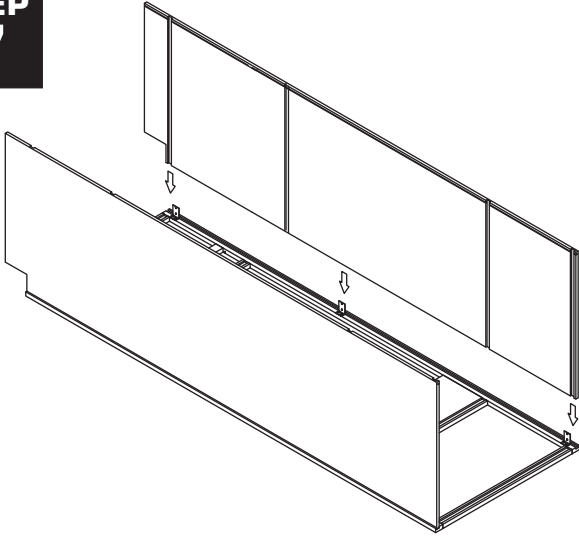


STEP
8

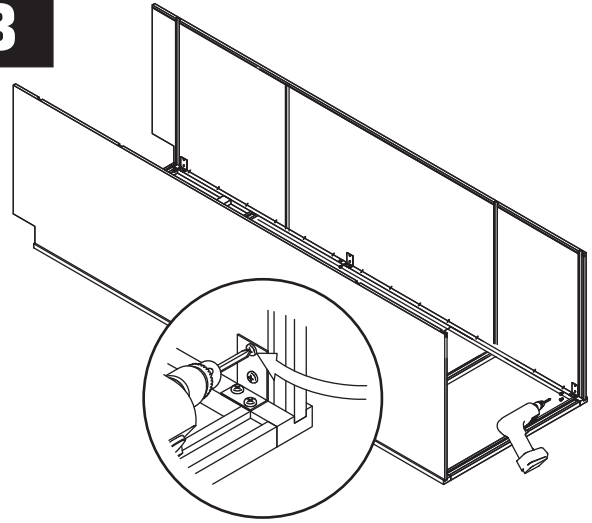


STEP
9

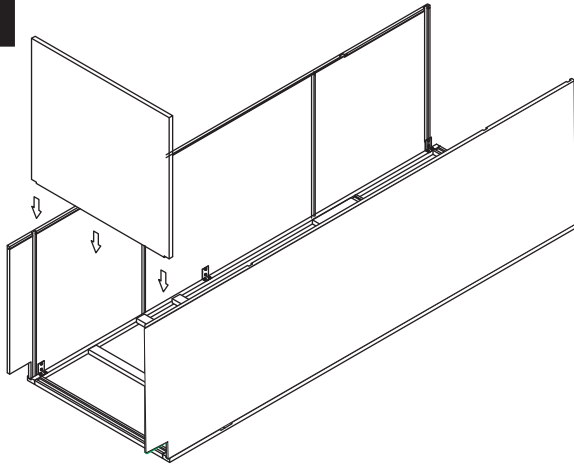

STEP
10

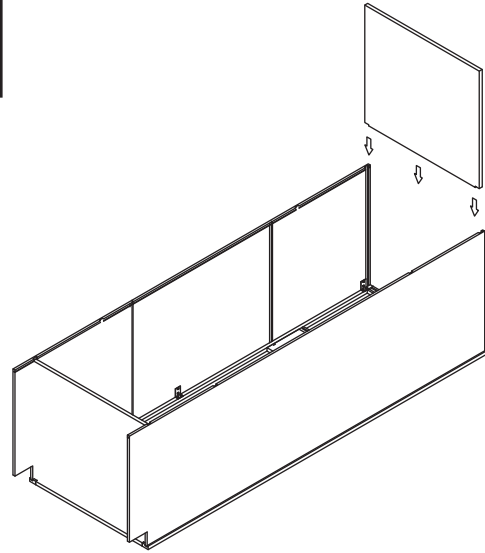


STEP
11

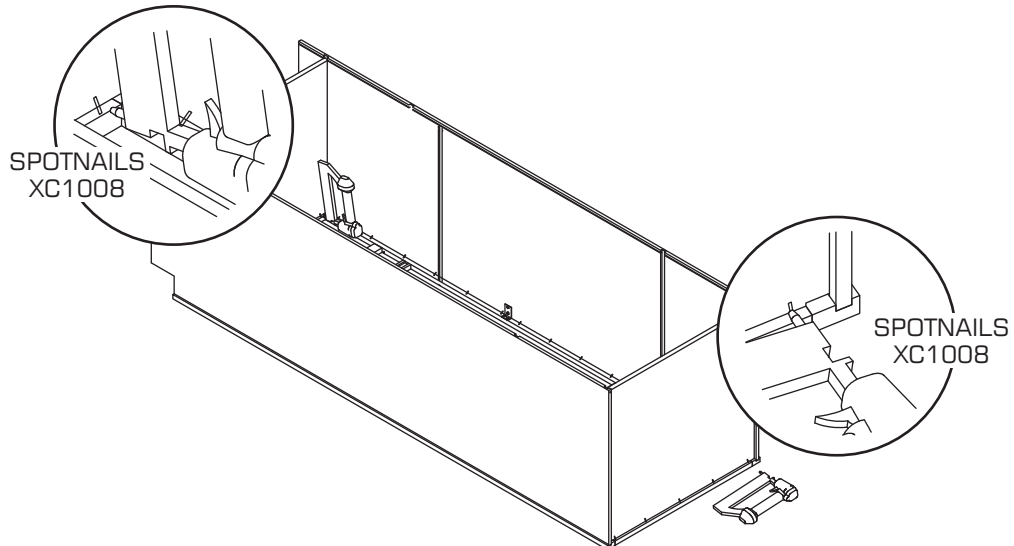


JARLIN CABINETS

**STEP
12**

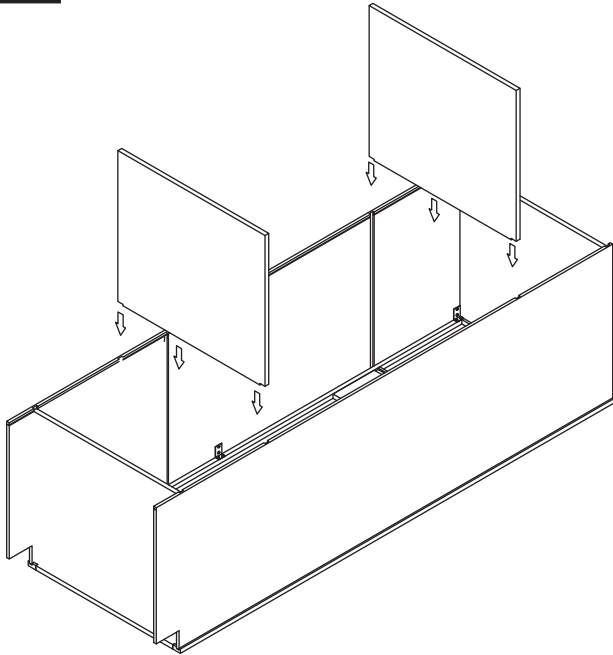


**STEP
13**

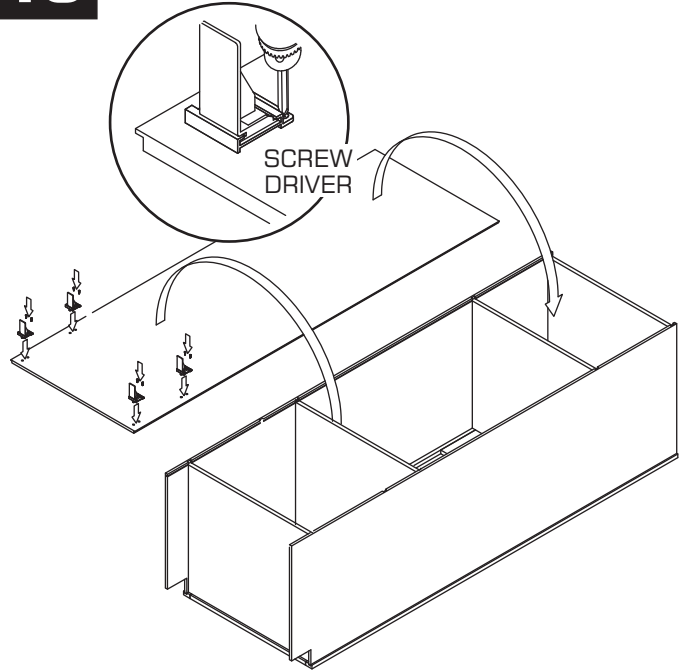


OVEN CABINET

**STEP
14**

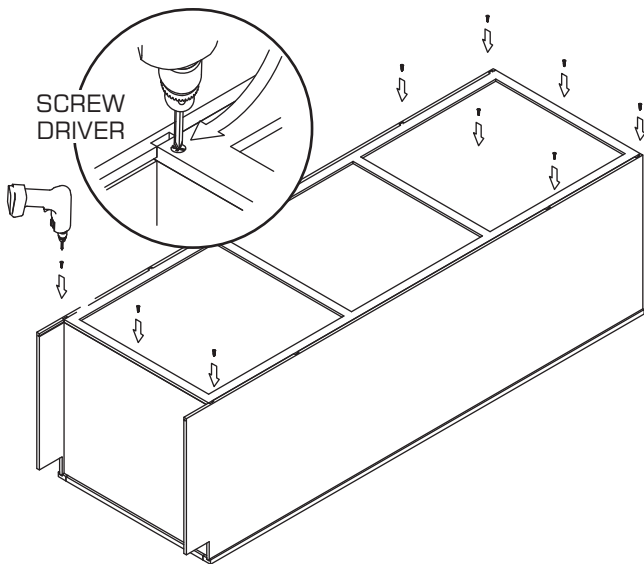


**STEP
15**

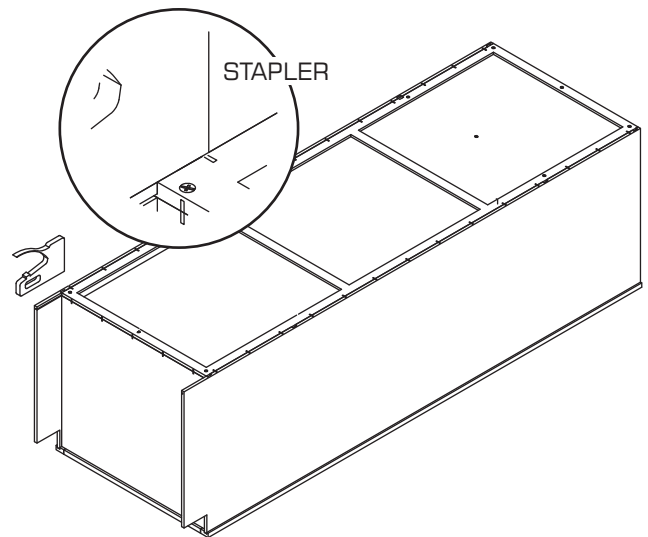


JARLIN CABINETS

OVEN CABINET


STEP 16

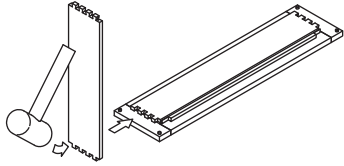


STEP 17

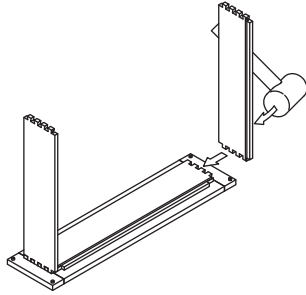


STEP 18

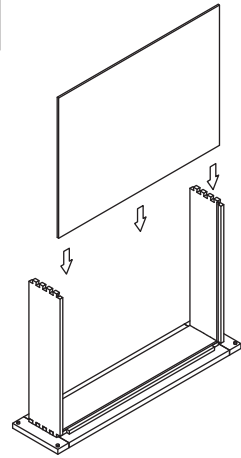


STEP 19

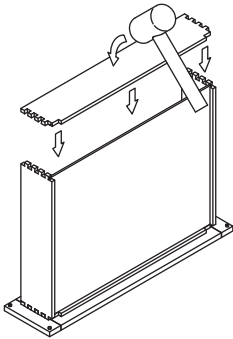


STEP 20

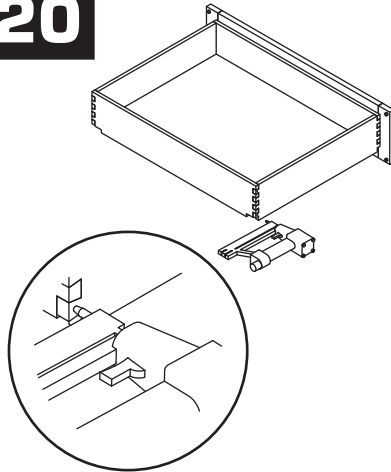


STEP 21

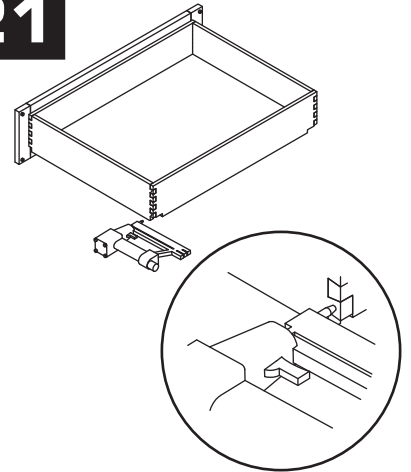

STEP 22

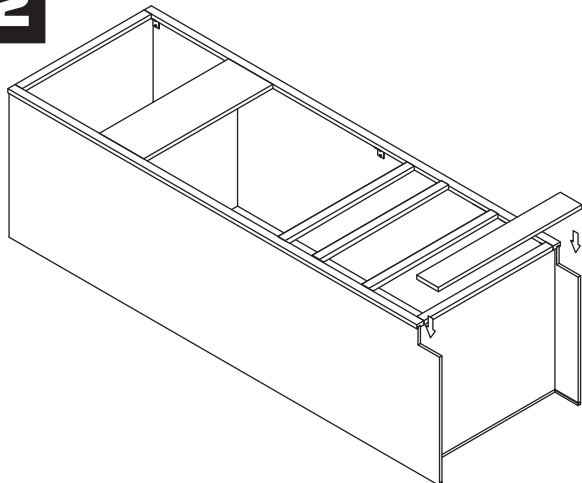


STEP 23

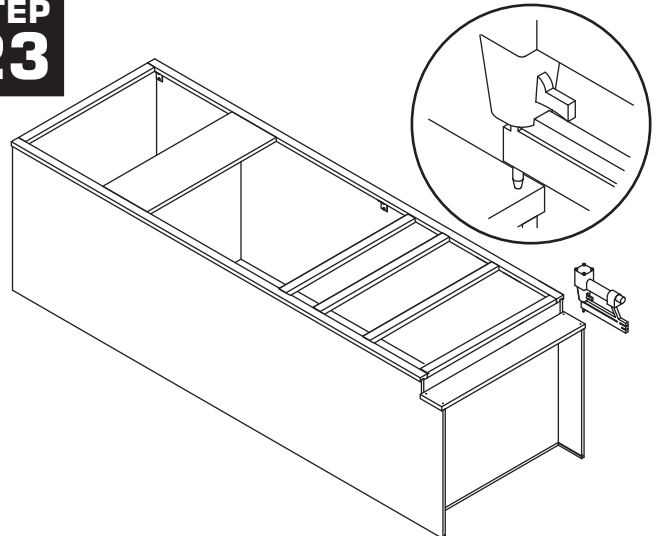


JARLIN CABINETS

**STEP
24**

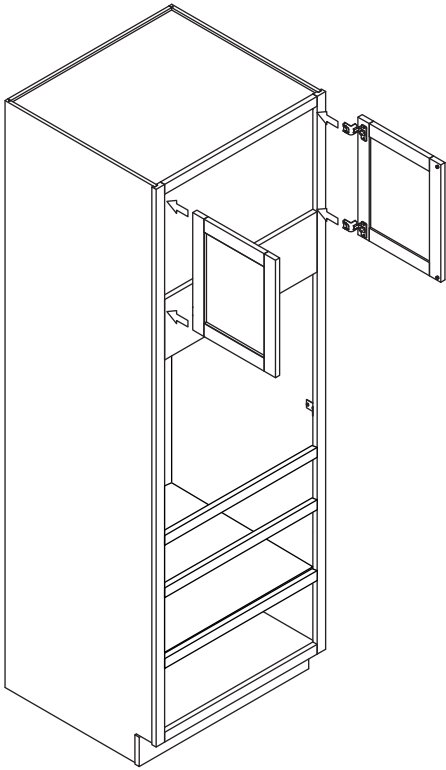


**STEP
25**

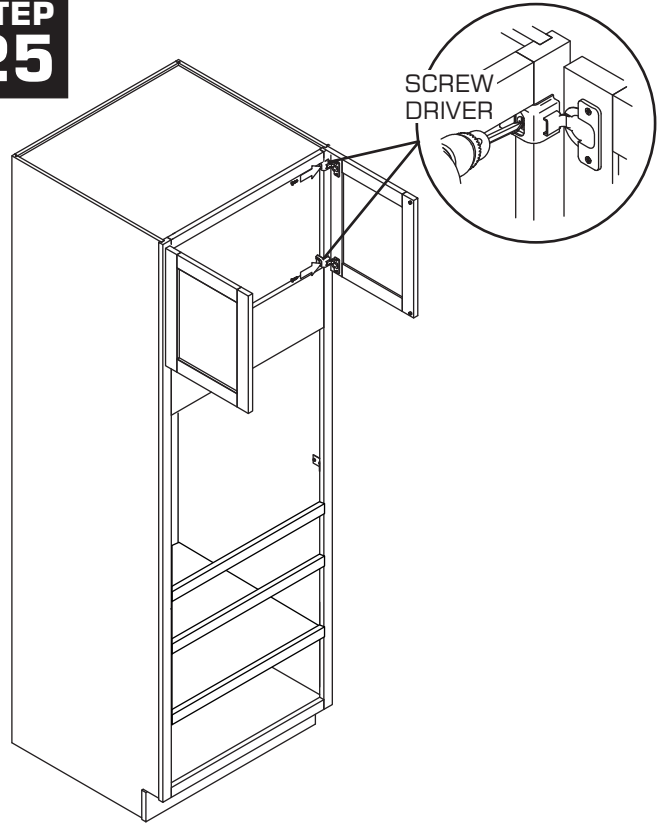


OVEN CABINET

**STEP
26**

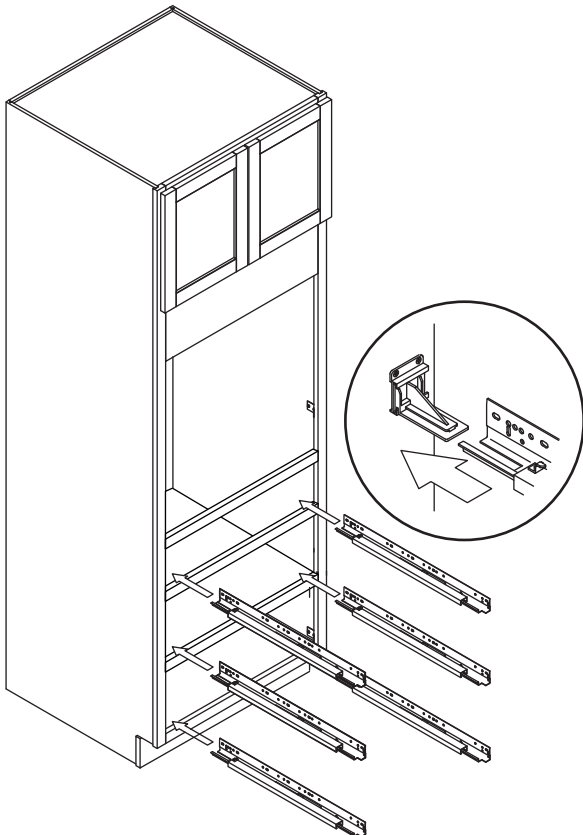


**STEP
27**

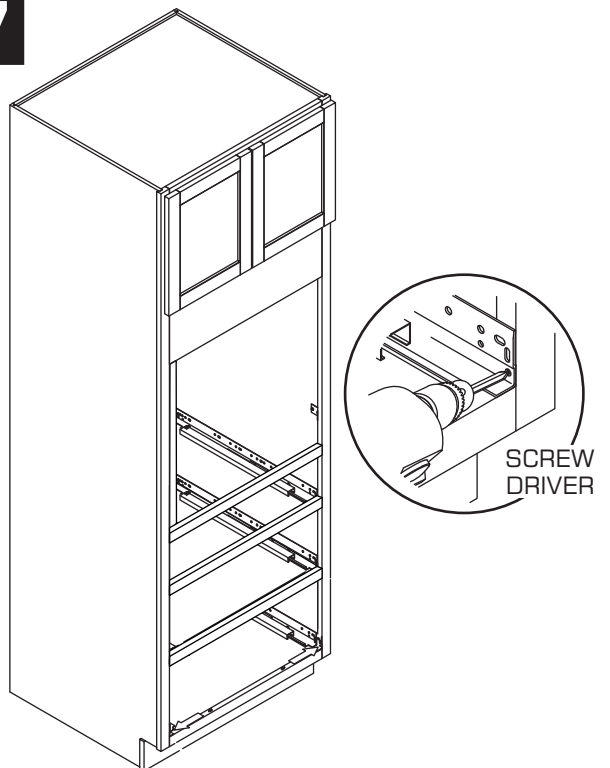


JARLIN CABINETS

**STEP
28**

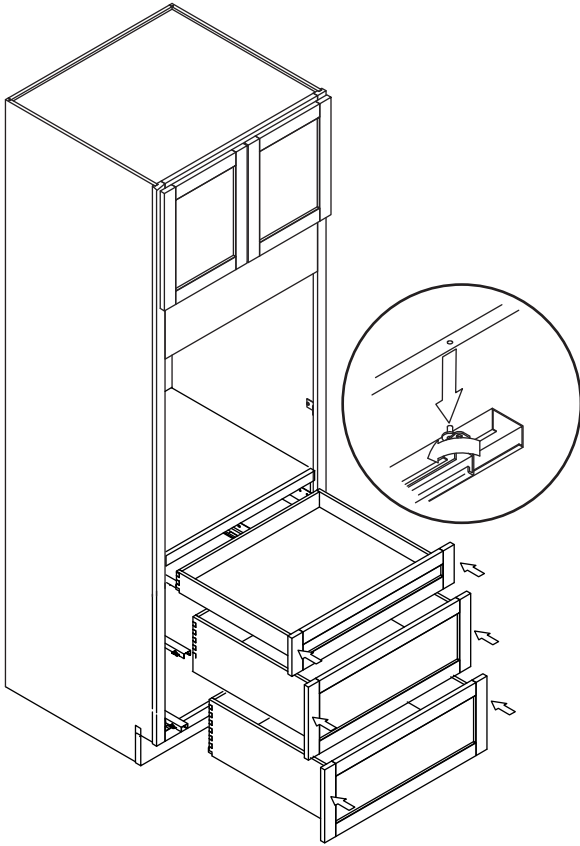


**STEP
29**

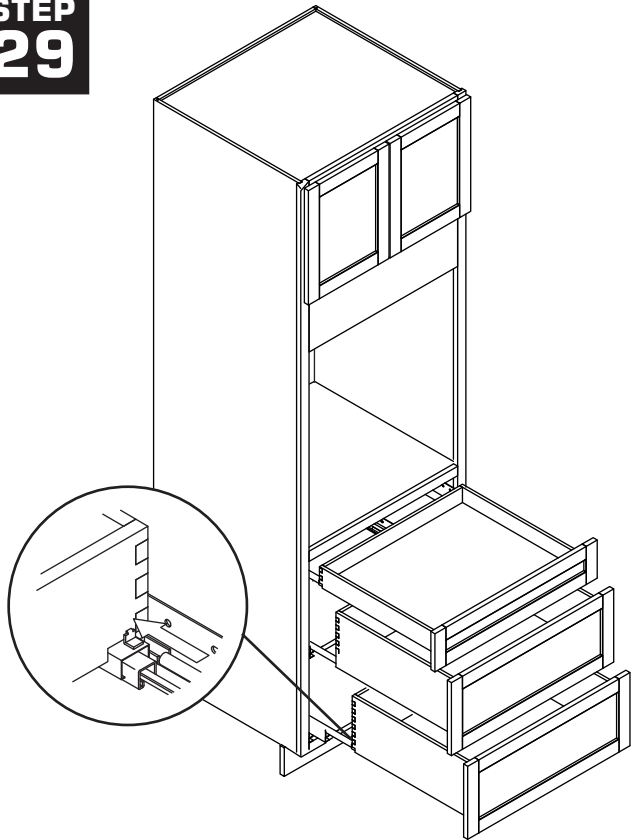


OVEN CABINET

**STEP
30**

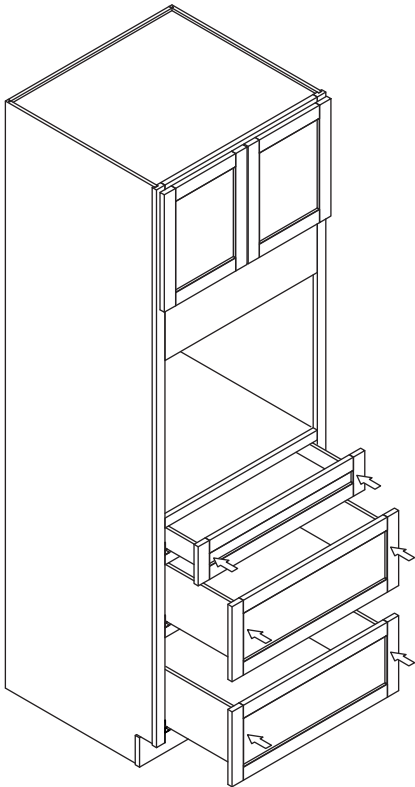


**STEP
31**

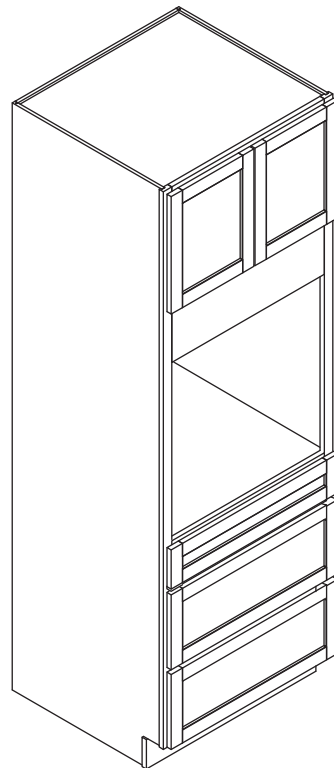

ASSEMBLING INSTRUCTIONS - VANITY CABINET

VANITY CABINET

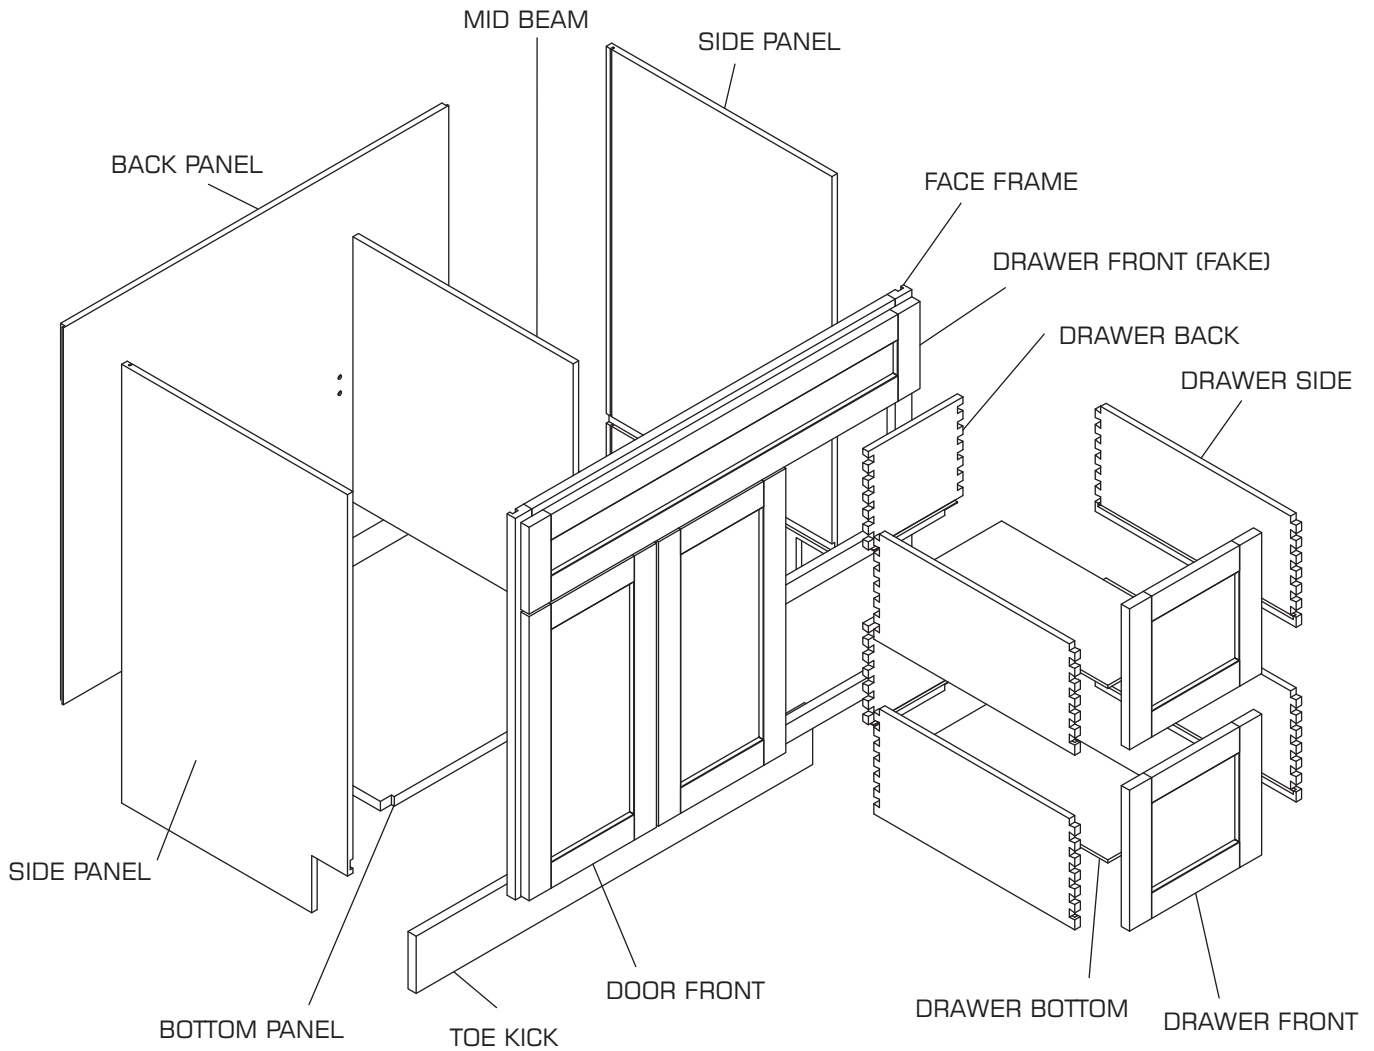


<p>GLIDES</p>	<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>GLIDE SUPPORTS</p>
---------------	-----------------------	---------------	-----------------------

TOOLS					
<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>


JARLIN CABINETS

VANITY CABINET


STEP 1

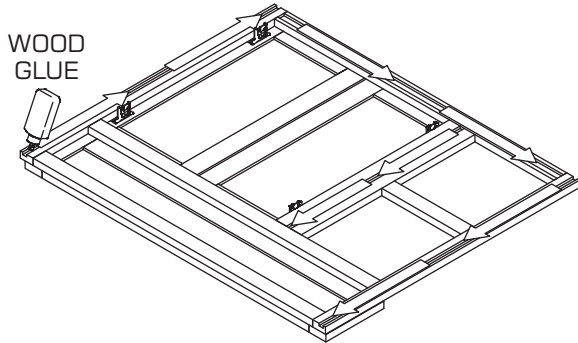


STEP 2

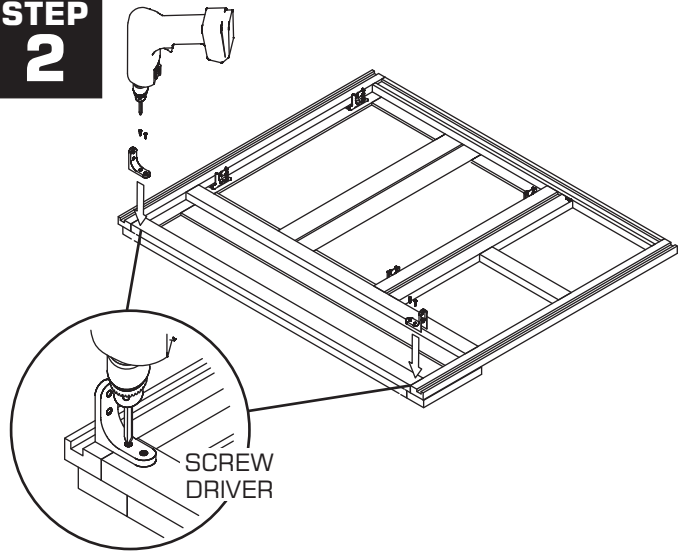


STEP 3

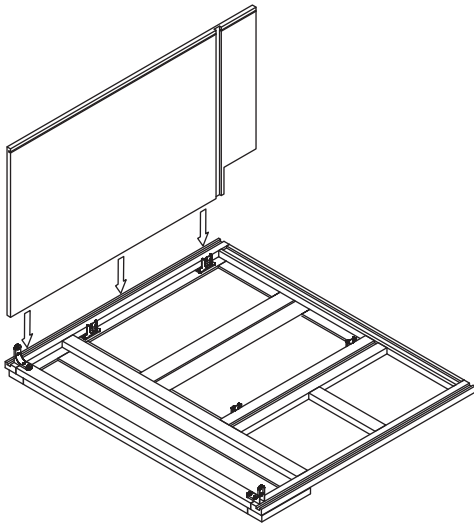


STEP 4

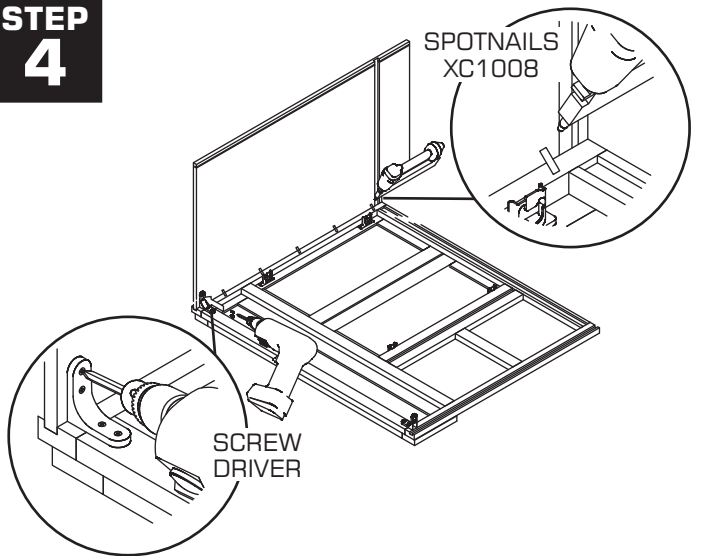

STEP 5

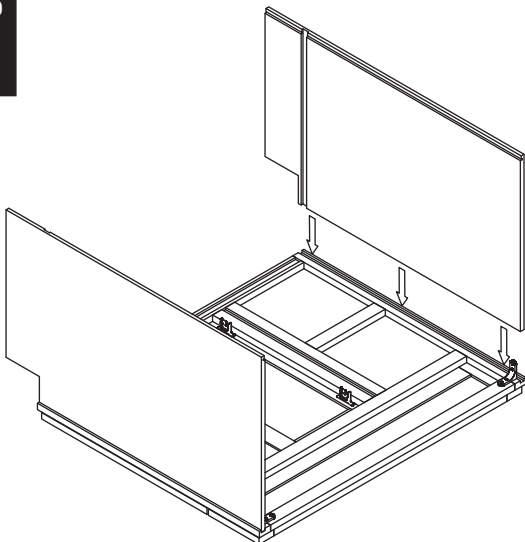


STEP 6

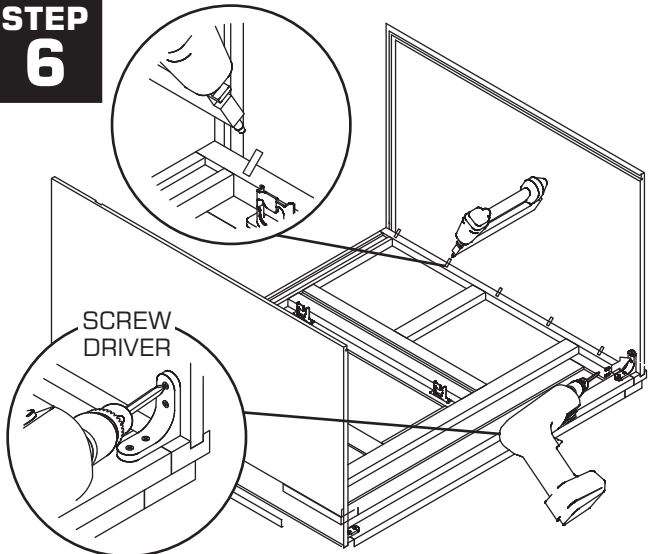


JARLIN CABINETS


STEP
7

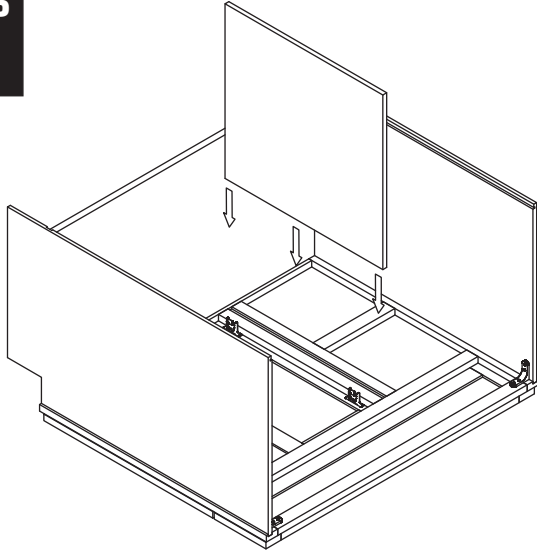


STEP
8

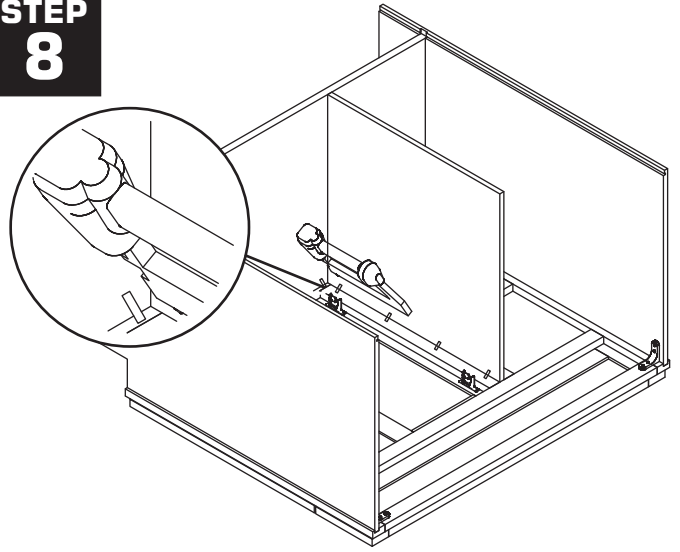

STEP
9

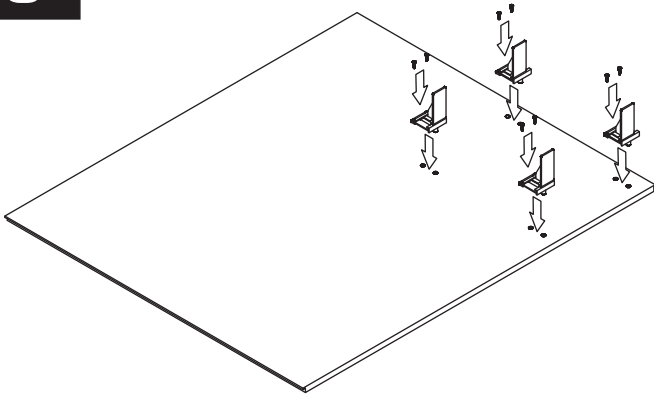

STEP
10

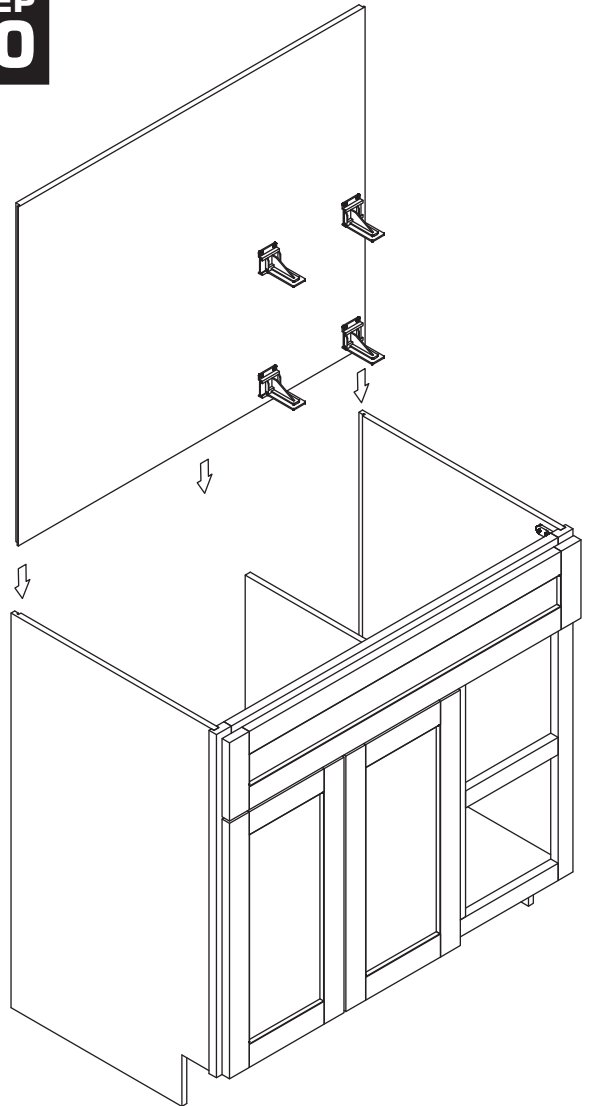


VANITY CABINET

JARLIN


CABINETS

VANITY CABINET


STEP 11

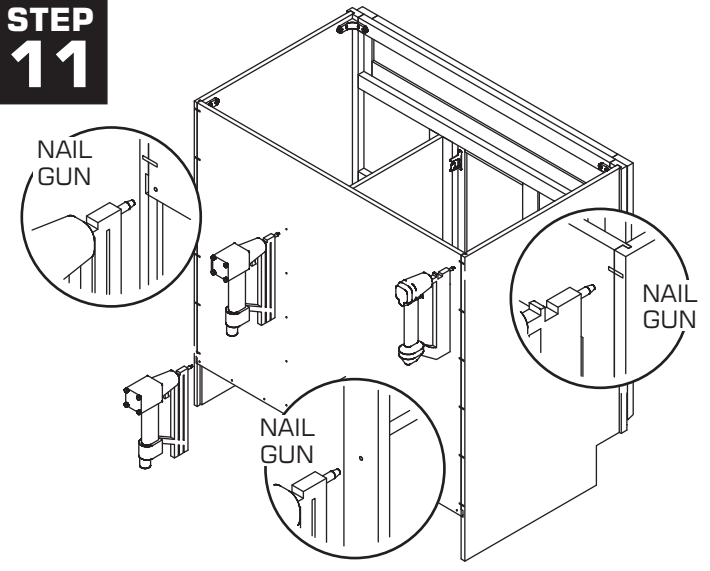


STEP 12

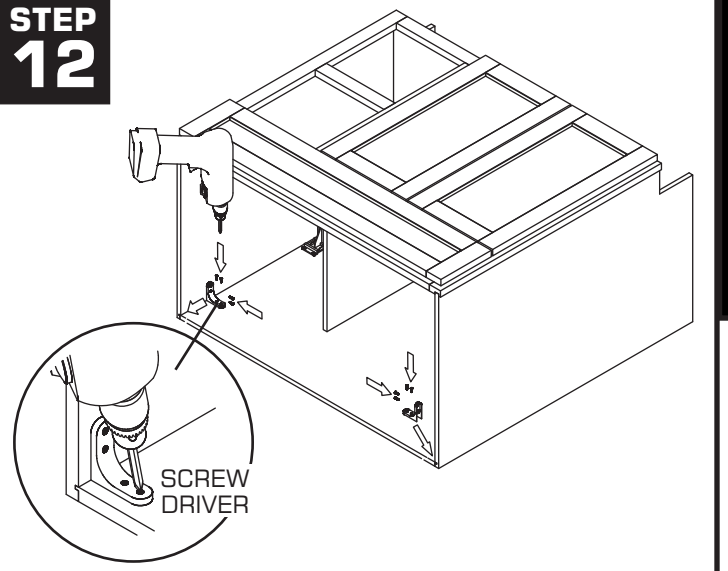


STEP 13

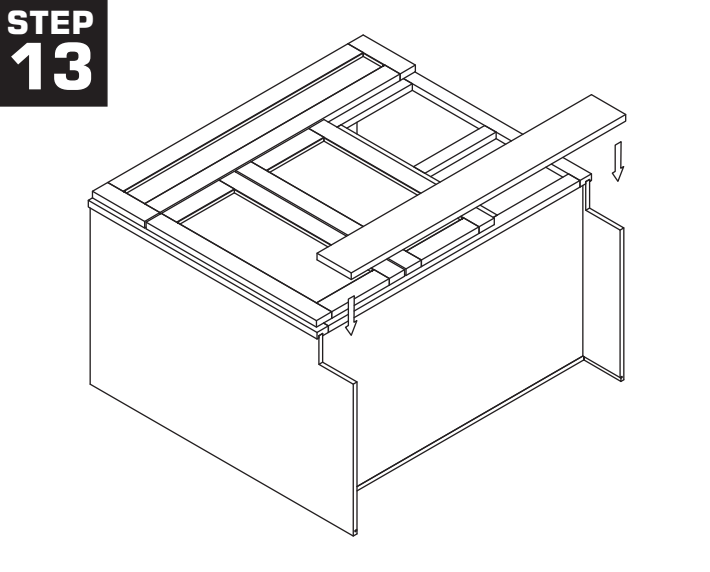


STEP 14

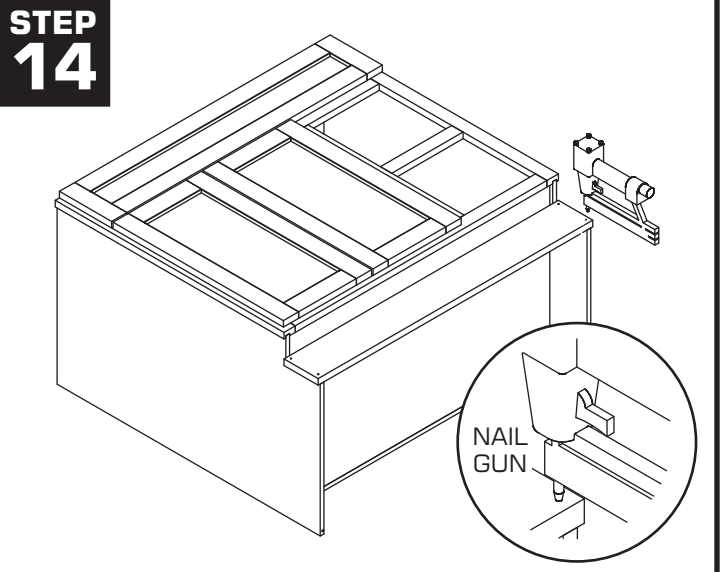

STEP 15

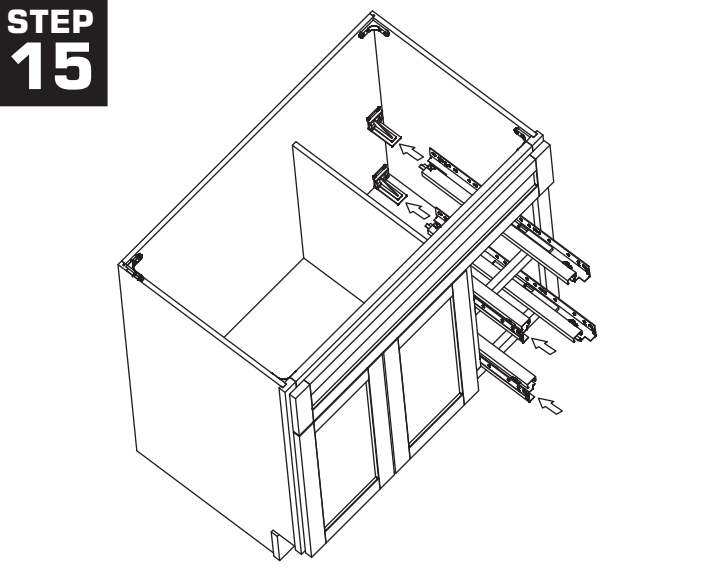


STEP 16

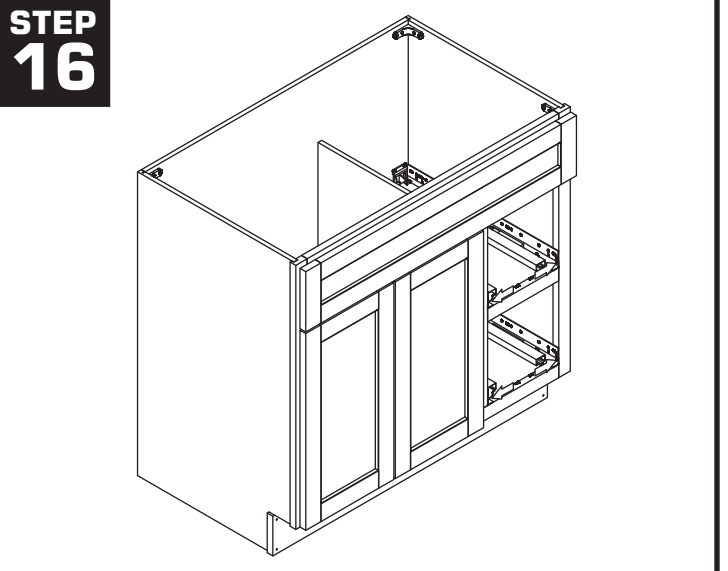


JARLIN CABINETS


**STEP
17**

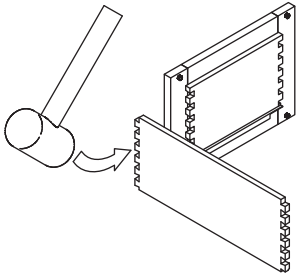


**STEP
18**

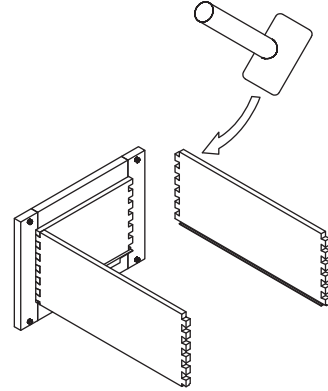


**STEP
19**

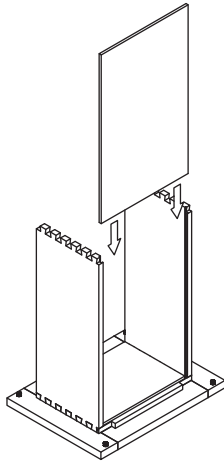

**STEP
20**

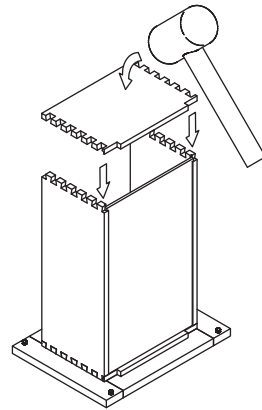


**STEP
21**

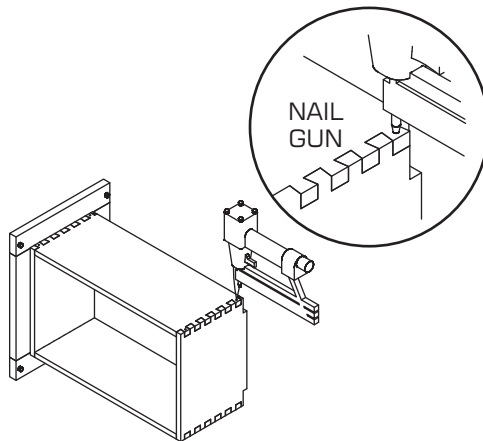


VANITY CABINET

JARLIN CABINETS

**STEP
22**

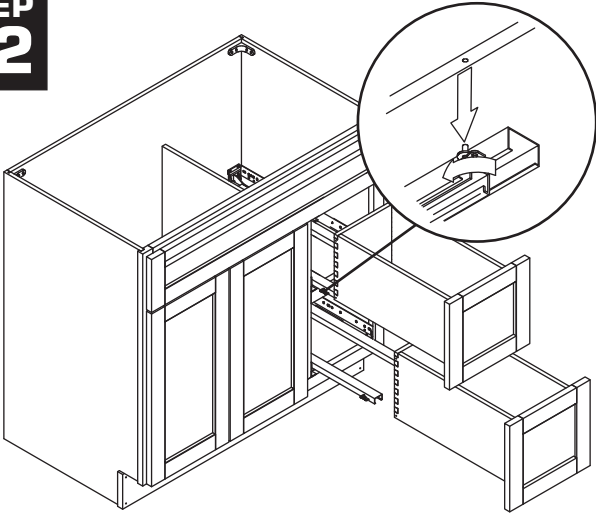

**STEP
23**

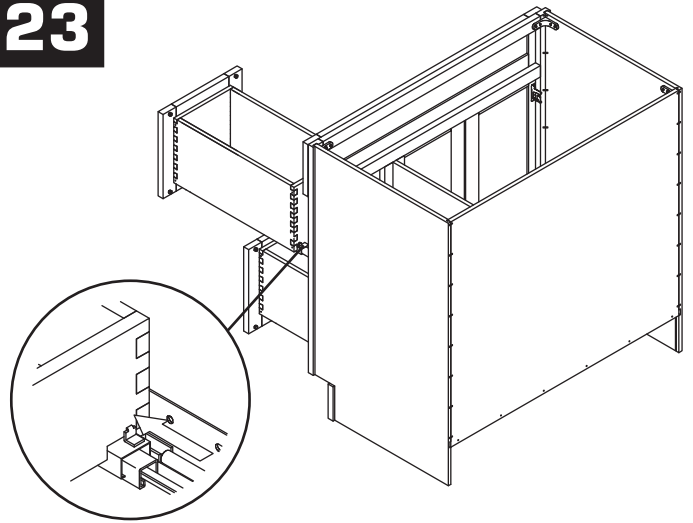

VANITY CABINET

**STEP
24**

